

## Coby REM-101

# Coby Quantum FX Universal Remote Control REM-101 User Manual

Model: REM-101

## INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Coby Quantum FX Universal Remote Control, model REM-101. Please read this manual thoroughly before using the remote control to ensure proper functionality and to maximize your user experience.

## PRODUCT OVERVIEW

The Coby Quantum FX REM-101 is a universal remote control designed to operate up to 9 different audio/video devices. It features large, easy-to-read buttons for convenient navigation and control.





Image: Front view of the Coby Quantum FX Universal Remote Control REM-101. The remote is dark gray with light gray, large, rectangular and triangular buttons. Key buttons visible include MUTE, MENU, OK, POWER, TV, VCR, DVD/AUDIO, SAT/STB, number pad (0-9), CHANNEL up/down, VOLUME up/down, ENTER, TV/AV, SLEEP, and media playback controls (rewind, play, fast forward, record, stop, pause, display).

### Key Features:

- 9-in-1 premium remote control function, capable of controlling multiple devices.
- Large, clearly labeled buttons for enhanced visibility and ease of use.
- Compatible with a wide range of major brand electronics, including TV, DVD, VCR, VCD/TV, LD/CD, Audio, AC, Satellite, and Cable devices.
- Supports both automatic and manual code pairing for efficient setup.
- Includes a power off button with a programmable timer (sleep timer) function.

## SETUP

---

### 1. Battery Installation

The remote control requires two (2) AAA batteries (not included).

1. Open the battery compartment cover located on the back of the remote control.
2. Insert two AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.

### 2. Code Programming

To control your devices, the remote must be programmed with the correct codes. The REM-101 supports both automatic and manual code pairing.

#### Automatic Code Search:

1. Turn on the device you wish to control (e.g., TV, DVD player).
2. Press and hold the desired device button (e.g., **TV**, **DVD/AUDIO**) for approximately 3 seconds until the indicator light illuminates.
3. While holding the device button, press the **POWER** button once. The indicator light will start flashing.
4. Point the remote at your device and repeatedly press the **POWER** button (or **CH+** button) slowly until your device turns off or changes channel.
5. Once the device responds, immediately press the device button again (e.g., **TV**) to save the code. The indicator light will turn off.
6. Test other functions to ensure proper operation. If not all functions work, repeat the process to find a more compatible code.

#### Manual Code Entry:

Refer to the code list provided with your remote control (if available) or consult the manufacturer's website for specific device codes.

1. Turn on the device you wish to control.
2. Press and hold the desired device button (e.g., **TV**, **VCR**) for approximately 3 seconds until the indicator light illuminates.
3. Enter the 3-digit code for your device using the number buttons.
4. After entering the code, the indicator light should turn off.
5. Test the remote control functions. If the device does not respond or not all functions work, try another code from the list for your brand.

## OPERATING INSTRUCTIONS

---

Once programmed, your Coby Quantum FX REM-101 remote control can operate your devices. Always ensure the remote is pointed directly at the device's infrared sensor.

#### Device Selection:

To control a specific device, press the corresponding device button at the top of the remote:

- **TV**: For televisions.
- **VCR**: For VCRs.
- **DVD/AUDIO**: For DVD players or audio systems.

- **SAT/STB:** For satellite receivers or set-top boxes.

After selecting a device, all subsequent button presses will control that device until another device button is pressed.

## Button Functions:

- **POWER** (*red circle with vertical line*): Turns the selected device on or off.
- **MUTE:** Mutes or unmutes the audio of the selected device.
- **MENU:** Accesses the menu system of the selected device.
- **OK:** Confirms selections within menus.
- **Number Buttons (0-9):** Used for direct channel entry or code input during programming.
- **CH+ / CH-:** Changes channels up or down.
- **VOL+ / VOL-:** Increases or decreases the volume.
- **ENTER:** Confirms channel selection or other inputs.
- **TV/AV:** Switches between TV and AV input modes.
- **SLEEP:** Activates the sleep timer function (if supported by the device and programmed).
- **DISP:** Displays information on screen (e.g., channel number, time).
- **Media Playback Controls** (*Rewind, Play, Fast Forward, Record, Stop, Pause*): Controls playback functions for devices like VCRs and DVD players.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's performance diminishes or the indicator light does not illuminate. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote does not operate device.	<ul style="list-style-type: none"><li>• Incorrect device code programmed.</li><li>• Batteries are low or incorrectly inserted.</li><li>• Remote is not pointed at the device.</li><li>• Obstruction between remote and device.</li></ul>	<ul style="list-style-type: none"><li>• Reprogram the remote using a different code for your device.</li><li>• Replace batteries with new ones and ensure correct polarity.</li><li>• Point the remote directly at the device's IR sensor.</li><li>• Remove any obstructions.</li></ul>
Only some functions work.	<ul style="list-style-type: none"><li>• The programmed code is partially compatible.</li></ul>	<ul style="list-style-type: none"><li>• Try programming the remote with another code from the code list for your device brand.</li></ul>

Problem	Possible Cause	Solution
Indicator light does not illuminate.	<ul style="list-style-type: none"> <li>Batteries are dead or missing.</li> <li>Batteries are inserted incorrectly.</li> </ul>	<ul style="list-style-type: none"> <li>Replace batteries.</li> <li>Check battery polarity.</li> </ul>

## SPECIFICATIONS

- **Model:** REM-101
- **Brand:** Coby
- **Number of Devices Controlled:** Up to 9 (TV, DVD, VCR, VCD/TV, LD/CD, Audio, AC, Satellite, Cable)
- **Connectivity Technology:** Infrared
- **Power Source:** 2 x AAA Batteries (not included)
- **Special Feature:** Universal compatibility, large buttons, auto/manual code pairing, sleep timer.
- **Dimensions:** Approximately 28.96 x 12.7 x 5.08 cm (11.4 x 5 x 2 inches)
- **Weight:** Approximately 90.72 g (0.2 lbs)







## WARRANTY INFORMATION

Specific warranty details for the Coby Quantum FX Universal Remote Control REM-101 are typically provided at the point of purchase or within separate warranty documentation. Please refer to the warranty card included with your product or contact your retailer or the manufacturer directly for information regarding warranty coverage, terms, and conditions.

## CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your Coby Quantum FX Universal Remote Control REM-101, please contact the retailer where the product was purchased or visit the official Coby support website. Have your model number (REM-101) ready when contacting support.

### Related Documents - REM-101

 <p><b>iFixit</b> Coby DVD209 The bottom portion of the DVD player Replacement</p>	<p><a href="#">Coby DVD209 DVD Player Bottom Portion Replacement Guide</a></p> <p>A step-by-step repair guide from iFixit for replacing the bottom portion of a Coby DVD209 DVD player. Learn how to safely remove screws, disconnect cables, and access internal components.</p>
 <p><b>COBY</b> MP201</p>	<p><a href="#">Coby MP201 USB MP3 Player Instruction Manual</a></p> <p>Comprehensive instruction manual for the Coby MP201 USB MP3 Player, covering setup, features, controls, music playback, software installation, and troubleshooting.</p>
 <p><b>iFixit</b> Coby Digital Photo Frame Alarm Clock Teardown</p>	<p><a href="#">Coby Digital Photo Frame Alarm Clock Teardown Guide</a></p> <p>A detailed teardown guide of the Coby Digital Photo Frame Alarm Clock (Model DP356) by iFixit, exploring its internal components and reparability.</p>
 <p><b>COBY</b> WIRELESS HEADPHONES Instruction Manual CHBT590 MODEL#: CHBT590 Bluetooth</p>	<p><a href="#">Coby CHBT590 Wireless Headphones Instruction Manual</a></p> <p>Instruction manual for the Coby CHBT590 Wireless Headphones, covering setup, operation, music controls, and warranty information.</p>
 <p><b>COBY</b> CETW645 Active Noise Cancelling TWS Earbuds User Manual   Manual De Usuario</p>	<p><a href="#">CETW645 Active Noise Cancelling TWS Earbuds User Manual</a></p> <p>User manual for the CETW645 Active Noise Cancelling TWS Earbuds with Hi-Res LCD Touchscreen Case. Learn about powering on/off, pairing, controls, troubleshooting, and specifications.</p>
 <p><b>COBY</b> MP-610 QUICK SETUP GUIDE</p>	<p><a href="#">Coby MP-610 MP3 &amp; Video Player Quick Setup Guide</a></p> <p>Quick setup guide for the Coby MP-610 MP3 &amp; Video Player with FM Radio, covering music, video, and photo file transfer using Windows Media Player and conversion software.</p>

no relevant documents