

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CHAUVENT DJ](#) /

› [CHAUVENT DJ CHS-60 VIP Gear Bag Instruction Manual](#)

## CHAUVENT DJ CHS-60

# CHAUVENT DJ CHS-60 VIP Gear Bag Instruction Manual

Model: CHS-60

## 1. PRODUCT OVERVIEW

The CHAUVENT DJ CHS-60 VIP Gear Bag is a soft, padded transport solution designed specifically for 1-meter long strip-style lighting fixtures. It offers convenient and secure storage, protecting your equipment during transport and simplifying setup and teardown.

### Key Features:

- Extremely affordable, soft bag for LED strip lights.
- Protects your investment and makes load-in a breeze.
- Internal divider separates the bag into two compartments.
- Convenient handle and shoulder strap for multiple transportation options.



Figure 1: Front view of the CHAUVET DJ CHS-60 VIP Gear Bag, showcasing its black nylon construction and central handles.

## 2. SETUP

---

Before using your CHS-60 VIP Gear Bag, ensure it is free from any packaging materials and inspect it for any signs of damage. The bag is designed for immediate use without complex assembly.

### Unpacking and Inspection:

1. Remove the bag from its packaging.

2. Unzip the main compartment and inspect the interior for any manufacturing defects or damage.
3. Verify the presence and integrity of the internal padded divider.
4. Check all zippers, handles, and the shoulder strap for proper functionality.

### Attaching the Shoulder Strap:

The shoulder strap is typically detachable. To attach it:

1. Locate the D-rings on each end of the bag.
2. Attach the metal clips of the shoulder strap to these D-rings.
3. Adjust the strap length for comfortable carrying.



Figure 2: Side view of the CHS-60 bag, showing the attached shoulder strap and its D-ring connection points.

## 3. OPERATING INSTRUCTIONS

---

The CHS-60 VIP Gear Bag is designed for easy and secure transport of your lighting fixtures.

### Loading Fixtures:

1. Unzip the main compartment completely.
2. Position the internal padded divider to create two separate compartments. This divider is secured with hook-and-loop fasteners.
3. Carefully place one 1-meter strip fixture into each compartment. The bag is designed to hold two 1-meter fixtures or four half-meter fixtures.
4. Ensure fixtures are snug but not overly compressed. Avoid forcing items into the bag to prevent damage to both the bag and the fixtures.
5. Zip the main compartment securely.



Figure 3: The CHS-60 bag open, showing two strip lighting fixtures neatly placed within the padded compartments.

## Carrying the Bag:

Choose between the central handles or the shoulder strap based on your preference and the weight of the contents.

- **Handles:** Use the two central handles for short distances or when carrying with two hands. The handles can be secured together with a hook-and-loop fastener for a more comfortable grip.
- **Shoulder Strap:** For longer distances or hands-free transport, use the adjustable shoulder strap. Ensure the weight is evenly distributed to prevent strain.

## 4. MAINTENANCE

---

Proper maintenance will extend the life of your CHS-60 VIP Gear Bag.

### Cleaning:

- Wipe the exterior with a damp cloth and mild soap as needed.
- Do not machine wash or tumble dry.
- Allow the bag to air dry completely before storing or reusing.

### Storage:

- Store the bag in a cool, dry place away from direct sunlight when not in use.
- Avoid placing heavy objects on top of the bag during storage to prevent deformation.

## 5. TROUBLESHOOTING

---

Common issues and their solutions for the CHS-60 VIP Gear Bag.

Problem	Possible Cause	Solution
Zipper snagging/sticking	Fabric caught in zipper, dirt/debris, lack of lubrication.	Carefully pull fabric away from zipper. Clean zipper teeth. Apply a small amount of zipper lubricant (e.g., wax).
Bag appears misshapen or bent when loaded	Improper loading or incompatible fixture size.	Ensure fixtures are placed correctly within compartments. Verify fixture dimensions are compatible with the bag (designed for 1m strips).
Strap clips detaching	Excessive weight, improper attachment, or worn clips.	Do not overload the bag. Ensure clips are fully secured to D-rings. If clips are worn, consider replacement or alternative carrying methods.

## 6. SPECIFICATIONS

Feature	Detail
Model Number	CHS-60
Item Weight	1.6 pounds
Product Dimensions	7 x 7.5 x 43 inches
Material Type	Nylon
Color	Black
Compatibility	Designed for 1-meter long strip-style lights (holds 2 x 1m strips or 4 x 0.5m strips)

## 7. WHAT'S IN THE BOX

- 1 x CHAUVET DJ CHS-60 VIP Carry Bag
- 1 x Internal Padded Divider
- 1 x Detachable Shoulder Strap

## 8. OFFICIAL PRODUCT VIDEO

Video 1: An overview of the Chauvet CHS-60 Gear Bag, demonstrating its features and capacity for lighting fixtures.

## 9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the documentation included with your purchase or visit the official CHAUVET DJ website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact CHAUVET DJ customer service through their official channels.

