

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Casdon](#) /
- > [Casdon Morphy Richards Kitchen Set Toy Instruction Manual | Model 64702](#)

Casdon 64702

Casdon Morphy Richards Kitchen Set Toy Instruction Manual

Model: 64702

1. INTRODUCTION

Thank you for choosing the Casdon Morphy Richards Kitchen Set. This set is designed to provide an authentic role-play experience, mimicking real kitchen appliances. It includes a fillable coffee maker, a kettle with a water level indicator, and a toaster with a 'pop-up' toast function, along with colorful crockery, cutlery, and play food. This set encourages imaginative play and helps develop fine motor skills.

Recommended for ages 3+.



Figure 1: Complete Casdon Morphy Richards Kitchen Set.

2. WHAT'S IN THE BOX

- 1 x Toaster
- 1 x Kettle
- 2 x Imitation Food (Toast)
- 1 x Coffee Maker
- 2 x Plates
- Additional: Crockery, Cutlery, Play Food (as described in product features)

3. SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all listed items in Section 2 are present.
2. **Placement:** Place the kitchen set on a flat, stable surface suitable for play.
3. **Familiarization:** Before play, familiarize yourself or the child with each appliance's functions as described in the Operating Instructions section.

4. OPERATING INSTRUCTIONS

4.1. Toaster

1. Insert the imitation toast slices into the toaster slots.
2. Press down the lever on the side of the toaster. The toast will lower into the toaster.
3. After a short period, the toast will 'pop-up' automatically, simulating real toasting.



Figure 2: Operating the toy toaster.

4.2. Coffee Maker

1. Open the lid of the coffee maker.
2. Carefully pour water into the designated reservoir. Do not overfill.
3. Place the coffee pot under the dispenser.
4. Press the 'ON/OFF' switch to activate the coffee maker. Water will drip into the pot, simulating coffee brewing.

4.3. Kettle

1. Remove the lid of the kettle.
2. Fill the kettle with water, observing the water level indicator.
3. Replace the lid securely.
4. Use the movable switch on the kettle to simulate turning it 'ON' or 'OFF'.



Figure 3: The toy kettle with its water level indicator.

4.4. General Play

Utilize the included crockery, cutlery, and play food to create various meal scenarios. The set encourages creative storytelling and interactive play.

Video 1: Demonstration of the Casdon Morphy Richards Kitchen Set, showcasing the kettle, toaster, and coffee machine

in action.

5. MAINTENANCE

- **Cleaning:** Wipe all surfaces with a soft, damp cloth. Do not immerse electronic components (if any) in water. Ensure all parts are dry before storage.
- **Storage:** Store the set in a clean, dry place away from direct sunlight and extreme temperatures to prolong its lifespan.

6. TROUBLESHOOTING

- **Toaster not popping up:** Ensure the toast is correctly inserted and the lever is fully pressed down. Check for any obstructions in the slots.
- **Coffee maker not dispensing water:** Verify that the water reservoir is filled and the 'ON/OFF' switch is activated.
- **General malfunction:** If any part is not functioning as expected, inspect for visible damage or blockages. If issues persist, contact customer support.

7. SAFETY INFORMATION

WARNING: Small Parts!

This product contains small parts which may pose a choking hazard. Not suitable for children under 3 years of age. Adult supervision is recommended during play.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	11.81 x 10.24 x 7.28 inches
Item Weight	2 pounds
ASIN	B0080MSGFQ
Item Model Number	64702
Manufacturer Recommended Age	3 - 8 months (Note: Product description states 3+ years)
Release Date	January 1, 2010
Manufacturer	Casdon

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Casdon website. Keep your proof of purchase for any warranty claims.