

RemotesReplaced 32LK330

RemotesReplaced Compatible Remote Control for LG 32LK330

User Instruction Manual

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your RemotesReplaced compatible remote control for the LG 32LK330 television. This remote is designed as a direct replacement, offering full functionality without the need for complex programming or setup codes. Simply insert batteries, and it is ready for use.

SAFETY INFORMATION

- Do not expose the remote control to direct sunlight, heat sources, or extreme temperatures.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Do not immerse the remote control in water or any other liquid.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations. Do not mix old and new batteries, or different types of batteries.

PACKAGE CONTENTS

- 1 x RemotesReplaced Compatible Remote Control for LG 32LK330
- 1 x User Instruction Manual (this document)

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.

2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Initial Use

Once batteries are correctly installed, the remote control is ready for immediate use with your LG 32LK330 television. No programming or code entry is required.

OPERATING INSTRUCTIONS

This remote control provides all the essential functions of your original LG 32LK330 television remote. Below are common button functions:







Image: Side view of the remote control, illustrating the button layout and infrared emitter.

Button	Function
POWER (Red Button)	Turns the television on or off.
CH +/-	Changes television channels up or down.
VOL +/-	Adjusts the volume level up or down.
MUTE	Mutes or unmutes the television sound.
MENU	Accesses the television's main menu.
INPUT / SOURCE	Selects the input source (e.g., HDMI, AV).
NAVIGATION ARROWS	Navigates through menus and options.
OK / ENTER	Confirms selections in menus.
EXIT	Exits the current menu or function.
NUMBER BUTTONS (0-9)	Direct channel selection.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the remote's surface or internal components.

Battery Replacement

If the remote control's range decreases or it becomes unresponsive, replace the batteries. Always replace both batteries simultaneously with new AAA alkaline batteries. Refer to the "Battery Installation" section for detailed steps.

Storage

When storing the remote control for extended periods, remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not working.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote has short range.	Weak batteries. Obstruction between remote and TV.	Replace batteries. Ensure a clear line of sight to the TV's infrared receiver.
Specific buttons not working.	Dirt or debris under the button.	Clean the remote control. If the issue persists, the remote may be faulty.
TV not responding to remote.	TV's infrared receiver is blocked or faulty.	Check if anything is blocking the TV's IR receiver. Test with another remote if available.

SPECIFICATIONS

Feature	Detail
Brand	RemotesReplaced
Model Name	32LK330
Compatible Devices	LG 32LK330 Television
Connectivity Technology	Infrared (IR)
Color	Black
Number of Buttons	20
Maximum Range	10 Meters
Batteries Required	2 x AAA (not included)
Item Weight	120 Grams

WARRANTY AND SUPPORT

This RemotesReplaced compatible remote control comes with a **1-year warranty** from the date of purchase, covering manufacturing defects. For warranty claims or technical support, please contact your retailer or the RemotesReplaced customer service. Please retain your proof of purchase for warranty validation.