

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Panasonic](#) /

› [Panasonic HHR-75AAA/B-6 Ni-MH Rechargeable Battery User Manual](#)

Panasonic HHR-75AAA/B-6

Panasonic HHR-75AAA/B-6 Ni-MH Rechargeable Battery User Manual

Model: HHR-75AAA/B-6

PRODUCT OVERVIEW

The Panasonic HHR-75AAA/B-6 Ni-MH rechargeable batteries are designed for use in cordless telephones. This pack contains six 700 mAh AAA-sized batteries, providing reliable power for your communication devices. These batteries are compatible with various Panasonic cordless phone models, including Dect 6.0 and KX-TG43xx Series Telephones (e.g., KX-TG1032/33/34, KX-TG823x Series, KX-TG63xx Series, KX-TG93xx Series, KX-TG43xx Series, KX-TH1211/12, KX-TGA101/430/630/930/935).



Image: Panasonic HHR-75AAA/B-6 Ni-MH rechargeable batteries.

Key Features:

- Replacement batteries for Panasonic Cordless Telephones.
- Compatible with most Panasonic phones that use AAA batteries.
- Economical bulk package (pack of 6).
- 700 mAh capacity for extended use.
- Ni-MH (Nickel-Metal Hydride) chemistry for reliable recharging.

SETUP AND INSTALLATION

Follow these steps to properly install your new Panasonic rechargeable batteries into your cordless phone.

1. **Remove Old Batteries:** Before installing new batteries, ensure your cordless phone is disconnected from its power source. Open the battery compartment, typically located on the back or bottom of the handset, and carefully remove the old batteries.
2. **Insert New Batteries:** Insert the new Panasonic HHR-75AAA/B-6 batteries into the compartment, paying close attention to the polarity (+ and -) markings. Incorrect insertion can prevent the phone from functioning and may damage the batteries or device.
3. **Close Compartment:** Securely close the battery compartment cover.
4. **Initial Charge:** Place the handset on its charging base. For optimal performance, allow the batteries to charge for a full 15-24 hours before the first use, even if the phone indicates a full charge sooner. This initial charge helps to condition the batteries.

Important: Use only specified rechargeable batteries. Non-rechargeable batteries can leak or explode if charged.

OPERATING YOUR BATTERIES

Once installed and fully charged, your Panasonic HHR-75AAA/B-6 batteries will power your cordless phone. The 700 mAh capacity provides a good balance of talk time and standby time for typical cordless phone usage.

- **Regular Charging:** For best performance, return the handset to its charging base when not in use. This ensures the batteries are always ready and helps maintain their charge capacity.
- **Battery Indicator:** Monitor your phone's battery indicator. When the indicator shows low battery, place the handset on the charger promptly.
- **Compatibility:** These 700 mAh batteries are designed to work with various Panasonic cordless phone models that use AAA rechargeable batteries. They are generally compatible with devices requiring similar MAH levels.

BATTERY MAINTENANCE AND CARE

Proper care extends the life and performance of your Ni-MH rechargeable batteries.

- **Charging Cycles:** Ni-MH batteries benefit from regular charging. Avoid completely draining the batteries frequently, as this can reduce their overall lifespan.
- **Storage:** If storing batteries for an extended period, charge them fully first. Store them in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cleaning:** Periodically clean the battery contacts on both the batteries and the phone/charger with a dry cloth to ensure good connection.
- **Disposal and Recycling:** Do not dispose of used batteries in household waste. Ni-MH batteries contain materials that should be recycled. Look for local battery recycling programs or contact your local waste management facility for proper disposal instructions. For recycling information, you may also call 1-800-822-8837.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Phone not charging or holding a charge.	Batteries not properly seated.	Re-insert batteries, ensuring correct polarity.
	Dirty battery contacts.	Clean battery and phone contacts with a dry cloth.
	Batteries have reached end of life.	Replace with new Panasonic HHR-75AAA/B-6 batteries.
	Charger base not powered.	Check power connection to the charging base.

Problem	Possible Cause	Solution
Short talk time or standby time.	Batteries not fully charged. Batteries are old and capacity has diminished.	Ensure initial 15-24 hour charge, then regular charging. Replace batteries if they are several years old or show significant degradation.
Phone displays "Check Battery" or similar error.	Incorrect battery type. Faulty battery.	Ensure you are using Ni-MH rechargeable batteries. Try a different battery from the pack to isolate the issue.

PRODUCT SPECIFICATIONS

Brand	Panasonic
Model Number	HHR-75AAA/B-6
Battery Cell Composition	NiMH (Nickel-Metal Hydride)
Battery Capacity	700 Milliampere Hour (mAh)
Voltage	1.2 Volts
Reusability	Rechargeable
Unit Count	6.0 Count (Pack of 6)
Recommended Uses	Cordless Phones
Item Weight	2.24 ounces
Item Dimensions	4 x 3.5 x 0.3 inches

WARRANTY AND SUPPORT

Panasonic products are manufactured to high-quality standards. For specific warranty information regarding your HHR-75AAA/B-6 Ni-MH rechargeable batteries, please refer to the documentation included with your purchase or visit the official Panasonic website.

If you encounter any issues or require technical assistance, please contact Panasonic customer support. Contact details can typically be found on the Panasonic official website or in the packaging of your cordless phone.

For general inquiries or to find more information about Panasonic products, please visit www.panasonic.com