

## LELO 664000020985

# LELO LYLA 2 Remote-Controlled Vibrating Bullet Massager User Manual

Model: 664000020985 | Brand: LELO

## 1. INTRODUCTION

The LELO LYLA 2 is a remote-controlled vibrating bullet massager designed for versatile use. It features SenseMotion technology, allowing for intuitive control of vibration intensity and patterns. This manual provides essential information for the safe and effective use, maintenance, and care of your LYLA 2 device.

### What's in the Box

- LYLA 2 Massager
- Wireless Remote Controller
- USB Charging Cord
- Satin Storage Pouch
- Warranty Registration Card
- Detailed Instruction Manual (this document)
- 2 x AAA Batteries (for remote)



Image: LELO LYLA 2 package contents.

## 2. PRODUCT FEATURES

- **SenseMotion Technology:** Control vibration intensity with motion-sensitive remote.
- **Wireless Range:** Remote control functions up to 39 feet away.
- **Vibration Modes:** 6 pre-set vibration patterns with variable strength.
- **Waterproof Design:** Fully waterproof for use in bath or shower.
- **Rechargeable:** LYLA 2 massager is rechargeable, providing up to 2 hours of use.
- **Material:** Made from body-safe silicone and ABS plastic.



Image: Key features of the LELO LYLA 2 massager and remote.

### 3. SETUP

#### Initial Charging (Massager)

1. Before first use, charge the LYLA 2 massager for 2 hours.
2. Insert the small plug of the USB charging cord into the DC port at the base of the massager.
3. Connect the main USB plug into any USB port (e.g., computer, smartphone charger).
4. The LED on the massager will pulse to indicate charging and emit a steady glow when fully charged.
5. Always use the LELO charging cable to avoid battery damage. Do not leave charging overnight.
6. Disconnect the cable before powering on the device.

Your browser does not support the video tag.

Video: LELO LYLA 2 Instructional video, demonstrating charging and operation.

#### Remote Controller Battery Installation

1. Open the battery compartment of the remote controller.
2. Insert 2 x AAA batteries, ensuring correct polarity.

3. Close the battery compartment and use the provided plastic key to lock it securely. Avoid using coins or other tools that may damage the surface.

## 4. OPERATING INSTRUCTIONS

---

### Locking/Unlocking the Remote

- To lock the remote: Hold down the '+' and '-' buttons simultaneously for 3 seconds until the lights turn off.
- To unlock the remote: Repeat the procedure.

### Using the Massager Without the Remote

1. To turn on: Press the button on the massager.
2. To activate vibrations: Press the button again. The device will cycle through 6 pre-programmed vibration patterns at 100% intensity.
3. To turn off: Hold down the button for approximately 3 seconds.

### Using the Massager With the Remote (SenseMotion Technology)

1. To activate wireless connection: Turn on the remote by pressing the '+' button. The lights on both the massager and remote will illuminate.
2. The massager will enter SenseMotion Mode 1, lowering its vibrations.
3. **SenseMotion Mode 1:** Intensify vibrations by tilting the remote. Moving it from horizontal to vertical position increases vibration strength to maximum.
4. To switch to SenseMotion Mode 2: Press the '()' button on the remote.
5. **SenseMotion Mode 2:** Alter or intensify vibrations by moving the remote in any direction. Faster movements increase intensity.
6. To cycle through 6 pre-programmed vibration patterns: Press the '()' button on the remote. After cycling through all patterns, it will return to SenseMotion Mode 1.
7. To change intensity in pre-programmed modes: Use the '+' and '-' buttons on the remote.
8. To turn off the remote: Hold down the '-' button.

# How to use

## BEFORE FIRST USE

charge for 2 hours

## TO TURN IT ON

press the (()) button on the massager

## THE LED LIGHTS WILL BLINK

to indicate the battery level

## IF YOU'RE USING THE REMOTE

use the + or the - buttons to alter the intensity

## TO SWITCH BETWEEN 8 SETTINGS

press the () button on the remote

## TO TURN IT OFF

press and hold the (()) button on the massager



Image: Basic usage instructions for LELO LYLA 2.

## 5. MAINTENANCE

### Cleaning

The LYLA 2 is fully waterproof, making cleaning simple. Always clean the device thoroughly before and after each use.

1. Rinse the device with water.
2. Apply LELO Premium Cleaning Spray or wash with lukewarm water and antibacterial soap.
3. Rinse off the soap/spray with water.
4. Dry with a lint-free cloth or towel.
5. **Important:** Never use cleaners containing alcohol, petrol, or acetone, as these can damage the silicone material.

### Storage

- Store the device in its satin pouch.
- Keep it in a dry and safe place, away from direct heat or sunlight.

- Remove batteries from the remote when not in use for extended periods.

## 6. TROUBLESHOOTING

- **Device not turning on:** Ensure the massager is fully charged. If the remote is not responding, check if the AAA batteries are correctly installed and charged.
- **LED not lighting up during charging:** If the massager's LED doesn't immediately light up when connected to the charger, the battery might be completely empty. Allow a few minutes for it to start charging.
- **Remote not connecting:** Ensure both the massager and remote are unlocked and within range (up to 39 feet).
- **Reduced vibration intensity:** Recharge the massager. If using the remote, ensure it is not locked and try adjusting intensity with the '+' button or tilting in SenseMotion Mode 1.
- **Accidental activation:** Always lock the remote when not in use to prevent unintended operation.

## 7. SPECIFICATIONS

Attribute	Detail
Model Name	LELO Lyla 2 Design Edition Bullet Vibrator
Item Model Number	664000020985
Brand	LELO
Material	Acrylonitrile Butadiene Styrene (ABS), Silicone
Color	Cerice
Product Dimensions	3.15 x 1.32 x 1.3 inches; 2.68 ounces
Batteries	1 Lithium Polymer battery required (included for massager), 2 x AAA batteries (for remote)
Waterproof	Yes, up to 3 feet

## 8. WARRANTY AND SUPPORT

LELO offers a **1-year warranty** on the LYLA 2 massager, alongside a **10-year quality guarantee**. For warranty claims or technical support, please refer to the contact information provided on your Warranty Registration Card or visit the official LELO website.

## 9. SAFETY INFORMATION

- Clean the device thoroughly before and after each use with soap and warm water or LELO Premium Cleaning Spray.
- Remove batteries from the remote when not in use.
- This product is intended for adult use only. Users must be over 18 to purchase and use.
- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended

to diagnose, treat, cure, or prevent any disease or health condition.

- If you experience any discomfort or adverse reactions, discontinue use immediately and consult a healthcare professional.