

[Manuals.plus](#) /

› [LELO](#) /

› LELO LYLA 2 Remote-Controlled Vibrating Bullet Massager User Manual

LELO 5931

LELO LYLA 2 Remote-Controlled Vibrating Bullet Massager

USER MANUAL

1. What's Included

Your LELO LYLA 2 package contains the following items:

- LYLA 2 Massager
- Wireless Remote Controller
- USB Charging Cord
- Satin Storage Pouch
- Warranty Registration Card
- Detailed Instruction Manual
- 2 x AAA Batteries for Remote



Image: LELO LYLA 2 package contents, showing the massager, remote, USB charging cable, satin pouch, warranty card, and AAA batteries.

2. Setup

2.1. Charging the LYLA 2 Massager

Before first use, fully charge your LYLA 2 massager for 2 hours. Use only the provided LELO charging cable to prevent battery damage. Do not leave it charging overnight.

1. Insert the small plug of the USB charging cord into the DC port located at the base of the LYLA 2 massager.
2. Insert the main USB plug into any standard USB port (e.g., computer, smartphone charger).
3. The LED on the massager will pulse to indicate charging. When fully charged, the LED will emit a steady glow.
4. Disconnect the cable before powering on the device.

If the LED does not light up immediately upon connecting the charger, the battery may be completely depleted. Allow a few minutes for it to begin charging.

2.2. Inserting Remote Batteries

The wireless remote controller requires two AAA batteries (included).

1. Carefully open the battery compartment on the remote.
2. Insert the two AAA batteries, ensuring correct polarity (+/-).
3. Close the battery compartment. Use the plastic key provided to securely lock the battery cover. Avoid using metal tools like coins, as they may damage the remote's surface.

2.3. Locking and Unlocking the Remote

To prevent accidental activation when not in use, you can lock the remote controller.

- **To Lock:** Hold down the '+' and '-' buttons on the remote simultaneously for 3 seconds until the lights turn off.
- **To Unlock:** Repeat the procedure by holding down the '+' and '-' buttons simultaneously for 3 seconds until the lights turn on.

3. Operating Instructions

The LELO LYLA 2 can be used independently or with its wireless remote controller.

3.1. Using LYLA 2 Without the Remote

1. Press the power button on the massager to turn it on.
2. Press the button again to activate vibrations.
3. Continue pressing the button to cycle through the 6 pre-programmed vibration patterns. Each pattern will be at 100% intensity.
4. To turn off the massager, hold down the power button for approximately 3 seconds.

3.2. Using LYLA 2 With the Remote (SenseMotion Technology)

The remote allows for advanced control and SenseMotion features.

1. Ensure both the massager and the remote are unlocked.
2. Turn on the remote by pressing the '+' button. Once the wireless connection is established, the lights on both the massager and the remote will illuminate.
3. The massager will automatically lower its vibrations and enter SenseMotion Mode 1.
4. **SenseMotion Mode 1:** Intensify vibrations by tilting the remote. Moving it from a horizontal to a vertical position will increase vibration strength to the maximum level.
5. Press the parenthesis '(' button on the remote to switch to SenseMotion Mode 2.
6. **SenseMotion Mode 2:** Alter or intensify vibrations by moving the remote in any direction. Faster movements increase the intensity of vibrations.
7. Press the parenthesis '(' button a third time to enter Mode 3, which allows you to cycle through 6 pre-programmed vibration patterns. Adjust intensity with the '+' and '-' buttons.
8. Continue pressing the '(' button to cycle through the six modes. After cycling through all modes, you will return to SenseMotion Mode 1.
9. To turn off the remote, hold down the '-' button for approximately 3 seconds.

3.3. Usage Suggestions

For enhanced comfort and experience, apply a water-based personal moisturizer to the LYLA 2 massager before use. Experiment with different intensities and patterns to discover your preferences. The remote control feature allows for shared experiences, where a partner can control the device from a distance.

Video: LELO LYLA 2 Instructional Video. This video demonstrates charging, battery insertion, locking/unlocking, and various operational modes with and without the remote, including SenseMotion technology and usage suggestions.

4. Maintenance

4.1. Cleaning

The LELO LYLA 2 is fully waterproof, making cleaning simple and essential for hygiene. Always clean the device thoroughly before and after each use.

1. Rinse the device under lukewarm water.
2. Apply LELO Premium Cleaning Spray or a mild antibacterial soap.
3. Gently lather and rinse thoroughly with water until all soap residue is removed.
4. Dry with a lint-free cloth or towel.

Important: Never use cleaners containing alcohol, petrol, or acetone, as these can damage the silicone material.

4.2. Storage

Store your LELO LYLA 2 in a dry and safe place, away from direct heat or sunlight. Use the provided satin pouch for protection.

5. Troubleshooting

Problem	Solution
Device not turning on or vibrating.	Ensure the massager is fully charged. If using the remote, ensure both devices are unlocked and the remote has fresh batteries.
Remote not connecting to the massager.	Verify both devices are turned on and unlocked. Ensure the remote batteries are correctly inserted and not depleted. Try turning both devices off and on again.
Vibrations are weak or inconsistent.	Charge the massager fully. If using the remote, check remote batteries. Ensure no obstructions are interfering with the wireless signal.
LED light not illuminating during charging.	The battery may be completely drained. Leave the device connected to the charger for a few minutes; the light should eventually begin pulsing. Ensure the charging cable is securely connected.

6. Specifications

- **Model Name:** LELO LYLA 2 Design Edition Bullet Vibrator
- **Item Model Number:** 5931
- **Brand:** LELO
- **Color:** Black
- **Material:** Body-safe silicone
- **Dimensions:** 3.15 x 1.32 x 1.3 inches
- **Weight:** 1.27 ounces
- **Battery:** 1 Lithium Polymer battery (included) for massager, 2 AAA batteries (included) for remote.

- **Charging:** USB-rechargeable (2 hours for full charge)
- **Waterproof:** Fully waterproof to 3 feet
- **Features:** SenseMotion Technology, 6 pre-programmed vibration patterns, remote control range up to 39ft.

7. Warranty and Support

7.1. Warranty Information

LELO products are manufactured to the highest standards. The LELO LYLA 2 comes with a 1-year warranty, alongside a 10-year quality guarantee. Please refer to the included Warranty Registration Card for full details and to register your product.

7.2. Customer Support

For further assistance, product registration, or to view additional LELO products, please visit the official LELO website or contact their customer support directly. Contact information can be found on the warranty card or the LELO brand store.

Visit the [LELO Store](#) for more information.