

Casio LW-202H-1AVCF

Casio LW-202H-1AVCF Illuminator Digital Watch User Manual

Model: LW-202H-1AVCF | Brand: Casio

INTRODUCTION

Thank you for choosing the Casio LW-202H-1AVCF Illuminator Digital Watch. This manual provides detailed instructions on how to set up, operate, and maintain your watch to ensure optimal performance and longevity. Please read this manual thoroughly before using your watch.

KEY FEATURES

- Digital time display with LED backlight (Illuminator).
- Daily alarm and hourly time signal.
- 1/100 second stopwatch with elapsed time, split time, and 1st-2nd place times.
- Countdown timer with an auto-repeat function.
- Full auto-calendar (pre-programmed until the year 2099).
- Water resistance up to 50 meters (165 feet).
- Durable resin band and stainless steel case.

SETUP

Button Functions

Your watch has four buttons: **A** (Adjust/Light), **B** (Mode), **C** (Start/Stop), and **D** (Reset).

- **A (Top Left):** Used to adjust settings in setting modes and activate the Illuminator backlight.
- **B (Bottom Left):** Used to cycle through different modes (Timekeeping, Stopwatch, Countdown Timer, Alarm).
- **C (Top Right):** Used to start/stop stopwatch, set values in setting modes.

- **D (Bottom Right)**: Used to reset stopwatch, change display format, or confirm settings.

Setting the Time and Date

1. In Timekeeping Mode, press and hold the **A** button until the seconds begin to flash, indicating the setting screen.
2. Press the **B** button to cycle through the settings in the following order: Seconds → Hour → Minutes → Year → Month → Day → 12/24-hour format.
3. Use the **C** button to increase the flashing value or the **D** button to decrease it (for some settings). For seconds, pressing **C** will reset them to 00.
4. Once all settings are adjusted, press the **A** button to exit the setting screen.



Image: The Casio LW-202H-1AVCF watch worn on a wrist, showing its digital display with time and date. This image illustrates the watch in use.

OPERATING THE WATCH

Mode Navigation

Press the **B** button to cycle through the watch's modes:

Timekeeping Mode → Stopwatch Mode → Countdown Timer Mode → Alarm Mode → Timekeeping Mode

Using the Stopwatch

1. Navigate to Stopwatch Mode using the **B** button.
2. Press **C** to start the stopwatch.
3. Press **C** again to stop the stopwatch.
4. Press **D** to reset the stopwatch to zero.
5. To record split times, press **D** while the stopwatch is running. Press **D** again to release the split and display the current running time.

Using the Countdown Timer

1. Navigate to Countdown Timer Mode using the **B** button.
2. Press and hold **A** until the hour setting flashes.
3. Use **B** to move between hours, minutes, and seconds. Use **C** to increase the flashing value.
4. Press **A** to exit the setting screen.
5. Press **C** to start or stop the countdown.
6. Press **D** to reset the timer to its starting value. An alarm will sound when the countdown reaches zero.

Setting and Using the Alarm

1. Navigate to Alarm Mode using the **B** button.
2. Press and hold **A** until the hour setting flashes.
3. Use **B** to move between hours and minutes. Use **C** to increase the flashing value.
4. Press **A** to exit the setting screen.
5. In Alarm Mode, press **C** to toggle the alarm ON/OFF. An indicator will show when the alarm is active.
6. Press **D** to toggle the hourly time signal ON/OFF.

Using the Illuminator (Backlight)

Press the **A** button at any time to illuminate the watch face for easy viewing in low light conditions.

MAINTENANCE

Water Resistance

Your Casio LW-202H-1AVCF watch is water resistant to 50 meters (165 feet). This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. However, it is *not* recommended for swimming, diving, or prolonged water activities. Do not operate buttons while the watch is wet or submerged.

Cleaning Your Watch

Wipe the watch case and band with a soft, dry cloth. If the watch is exposed to saltwater, rinse it with fresh water and wipe it dry immediately. Avoid using chemical cleaners, as they may damage the watch's materials.

Battery Replacement

The watch is powered by one product-specific battery. When the display becomes dim or the backlight weakens, it may be time to replace the battery. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery.
 - **Time is incorrect:** Re-adjust the time and date settings as described in the "Setting the Time and Date" section. Ensure the 12/24-hour format is set correctly.
 - **Buttons are unresponsive:** Ensure the watch is not wet. If the issue persists, a reset may be required (consult a service center) or the battery may be too low.
 - **Water inside the watch:** Immediately take the watch to a qualified service center. Do not attempt to open the watch yourself, as this will void the warranty and compromise water resistance.
-

SPECIFICATIONS

Model Number	LW-202H-1AVCF
Case Material	Stainless Steel / Resin
Band Material	Resin
Crystal Material	Mineral
Display Type	Digital
Movement	Quartz
Water Resistance	50 meters (165 feet)
Case Diameter	39 mm
Case Thickness	11 mm
Band Width	18 mm
Battery Type	1 x Product Specific (included)
Item Weight	454 Grams



Image: The packaging box for the Casio watch, featuring the brand's logo. This image shows how the product is

typically presented.

WARRANTY AND SUPPORT

Your Casio watch is covered by a manufacturer's warranty. For specific warranty terms, conditions, and duration, please refer to the warranty card included with your purchase or visit the official Casio website. For technical support, service, or inquiries, please contact Casio customer service or an authorized service center in your region.

You can find more information and support resources on the official Casio website: www.casio.com