

Brevi 5075822

Brevi B-Super Hello Kitty Stroller User Manual

Model: 5075822 | Brand: Brevi

INTRODUCTION

Thank you for choosing the Brevi B-Super Hello Kitty Stroller. This manual provides essential information for the safe and proper assembly, operation, and maintenance of your stroller. Please read this manual thoroughly before use and keep it for future reference.

This stroller is designed for children aged 6 months and older, with a maximum recommended weight of 15 kg.

SAFETY INFORMATION

- Always ensure all locking devices are engaged before placing the child in the stroller.
- Do not leave the child unattended in the stroller.
- Ensure the child is clear of any moving parts when adjusting the stroller.
- Always use the 5-point safety harness to secure your child.
- Do not overload the storage basket; refer to the maximum weight capacity.
- This stroller is not suitable for running or skating.
- Regularly check all parts for wear and tear. Replace worn or damaged parts immediately.

SETUP

Unpacking

Carefully remove all components from the packaging. Verify that all listed accessories are present. Retain packaging materials for potential future transport or storage.

Assembly

1. **Unfolding the Stroller:** Release the umbrella-fold lock. Hold the handles and pull upwards until the frame clicks into place, indicating it is fully open. Ensure all locking mechanisms are securely engaged.

2. **Attaching Wheels:** If not pre-attached, firmly push each wheel onto its axle until it clicks into place. Test each wheel to ensure it is secure.
3. **Attaching the Canopy:** Secure the canopy to the designated attachment points on the stroller frame. Ensure it is properly aligned and can be adjusted smoothly.



Figure 1: Fully assembled Brevi B-Super Hello Kitty Stroller.



Figure 2: Front view of the stroller, showing the Hello Kitty design and wheel configuration.

OPERATING INSTRUCTIONS

Adjusting the Backrest

The stroller features a reclining and adjustable backrest. Locate the adjustment mechanism, typically at the rear of the backrest. Follow the instructions on the mechanism to recline or raise the backrest to the desired position. Ensure the backrest is securely locked in place before use.

Using the 5-Point Safety Harness

To secure your child, place them in the seat and bring the shoulder straps over their shoulders, the waist straps around their waist, and the crotch strap between their legs. Insert the buckles into the central buckle until they click. Adjust the straps to ensure a snug, secure fit without being too tight. To release, press the button on the central buckle.

Braking System

The stroller is equipped with double front wheels with brakes and double rear wheels with a central brake system. To engage the brakes, press down on the brake levers located near the wheels until they lock. To release, lift the levers. Always engage the brakes when the stroller is stationary.

Folding the Stroller (Umbrella Fold)

To fold the stroller, ensure the backrest is in its most upright position and the canopy is folded back. Locate the umbrella-fold release mechanism, usually near the handles or on the side of the frame. Follow the specific instructions to collapse the frame downwards until it locks into a compact, folded position. Use the carry handle for easy transport.



Figure 3: The stroller in its compact, folded state, demonstrating portability with the carry handle.



Figure 4: Detail of the stroller's handle and canopy, highlighting the Hello Kitty design.

MAINTENANCE

Cleaning

- **Fabric Parts:** Clean fabric parts with a damp cloth and mild soap. Do not use harsh detergents or bleach. Allow to air dry completely. The stroller is not dishwasher safe.
- **Frame:** Wipe the aluminum frame with a soft, damp cloth. Dry thoroughly to prevent rust.
- **Wheels:** Periodically clean dirt and debris from the wheels and axles to ensure smooth operation.

Storage

Store the stroller in a clean, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure it is clean and dry to prevent mold or mildew.

Rain Cover Usage

The adjustable rain-proof cover can be easily attached to protect your child from rain. Ensure it is securely fitted around the canopy and seat area. After use, wipe the rain cover clean and allow it to dry completely before folding and storing.



Figure 5: The stroller with the adjustable rain-proof cover in place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Stroller does not fold/unfold smoothly.	Locking mechanisms are not fully disengaged/engaged; debris in joints.	Ensure all locks are released. Check for and remove any obstructions in the folding mechanism.
Wheels are squeaky or stiff.	Dirt or debris in wheel bearings; lack of lubrication.	Clean wheels and axles. Apply a small amount of silicone-based lubricant if necessary.
Brakes are not holding.	Brake mechanism is dirty or misaligned.	Clean the brake mechanism. Ensure the brake levers are fully engaged. If issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	5075822
Product Dimensions	81.7 x 47.5 x 98.5 cm
Item Weight	7 kg
Maximum Recommended Weight	15 kg
Material Type	Aluminum
Safety Harness Type	5-point harness
Seat Capacity	1
Certifications	EN 1888
Color	Pink

INCLUDED ACCESSORIES

- Top Cover
- Storage Basket
- Adjustable Rain-Proof Cover

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or contact Brevi customer service. Keep your proof of purchase for any warranty claims.