

[Manuals.plus](#) /

› [Ledlenser](#) /

› Ledlenser Type E Storage Pouch Instruction Manual

Ledlenser Type E Storage Pouch

Ledlenser Type E Storage Pouch Instruction Manual

1. PRODUCT OVERVIEW



Image 1.1: The Ledlenser Type E Storage Pouch. This black nylon sheath is designed to securely hold a flashlight and features an additional compartment for spare batteries. It includes a prominent Ledlenser logo on the front flap.

The Ledlenser Type E Storage Pouch is a durable accessory designed to protect and transport your Ledlenser flashlight. Constructed from robust nylon, it features an innovative double-wall design that provides a dedicated space for spare batteries, ensuring you always have power when needed. The pouch is equipped with an adjustable belt loop, allowing for secure and convenient attachment to various belt sizes. Its compact and functional design makes it an essential companion for outdoor activities, professional use, or everyday carry.

2. KEY FEATURES

- **Durable Construction:** Made from high-quality, durable nylon for long-lasting use and protection.

- **Integrated Battery Storage:** Features an elastic double wall designed to securely hold spare batteries.
- **Adjustable Belt Loop:** Equipped with a versatile fastening loop that accommodates various belt sizes for secure carrying.
- **Compact Design:** Optimized dimensions for efficient storage and portability.
- **Secure Closure:** Ensures the flashlight and batteries remain safely inside the pouch during movement.

3. COMPATIBILITY

This Type E Storage Pouch is designed to be compatible with several Ledlenser flashlight models, including but not limited to:

- Ledlenser PTT (Police Tac Torch)
- Ledlenser P6 Core
- Ledlenser Hokus Focus

Please verify the dimensions of your specific flashlight model against the pouch dimensions to ensure a proper fit.

4. SPECIFICATIONS

Attribute	Value
Brand	Ledlenser
Model	Type E Storage Pouch
Material	Nylon
Color	Black
Dimensions (L x W)	14 cm x 4.5 cm (approx. 5.5 in x 1.8 in)
Number of Pockets	1 (main compartment)
Number of Compartments	2 (main + battery storage)

5. SETUP AND INSTALLATION

- Attaching to a Belt:**

Locate the adjustable loop on the back of the pouch. Thread your belt through this loop. Adjust the loop's tightness if necessary to ensure a snug fit on your belt, preventing excessive movement.
- Inserting the Flashlight:**

Open the main flap of the pouch. Carefully slide your compatible Ledlenser flashlight into the main compartment. Ensure the flashlight is fully seated and the flap can close securely over it.
- Storing Spare Batteries:**

Identify the elastic double-wall compartment within the pouch. Insert your spare batteries into this dedicated space. This compartment is designed to hold common battery sizes securely.

6. OPERATION

The Ledlenser Type E Storage Pouch is designed for straightforward use:

- To access your flashlight, simply unfasten the main flap and retrieve the device.
- To access spare batteries, reach into the elastic compartment.
- Always ensure the flap is securely fastened after use to prevent accidental loss of contents.

7. CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your Ledlenser Type E Storage Pouch, follow these care instructions:

- **Cleaning:** Wipe the pouch with a damp cloth to remove dirt or dust. For stubborn stains, a mild soap solution can be used. Avoid harsh chemicals or abrasive cleaners.
- **Drying:** Allow the pouch to air dry completely before storing or reusing, especially if it has become wet. Do not tumble dry or expose to direct heat sources.
- **Storage:** Store the pouch in a cool, dry place away from direct sunlight when not in use.
- **Inspection:** Periodically inspect the stitching, belt loop, and fabric for any signs of wear or damage.

8. TROUBLESHOOTING

Pouch does not fit my flashlight:

Verify that your flashlight model is listed under the "Compatibility" section (Section 3). If your model is not listed, or if its dimensions exceed 14 cm in length or 4.5 cm in width, it may not fit this specific pouch. Consider checking Ledlenser's official website for other pouch sizes or compatible accessories.

Belt loop feels too loose or too tight:

The belt loop is adjustable. Ensure it is properly threaded and tightened or loosened to match your belt's width. A snug fit is recommended to prevent the pouch from sliding excessively.

Batteries do not stay in the elastic compartment:

Ensure you are using standard battery sizes that fit within the elastic loops. The elastic may lose some tension over extended periods of use or if oversized batteries are forced into it. Avoid overstuffing the compartment.

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, product registration, or technical support for your Ledlenser Type E Storage Pouch, please refer to the official Ledlenser website or contact their customer service directly. Keep your proof of purchase for any warranty claims.

Ledlenser Official Website: www.ledlenser.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00821S9WK>

More documents and user manuals: <https://manuals.plus/>