

Manuals.plus /

› Finish /

› Finish Jet-Dry Rinse Aid, 32oz, Dishwasher Rinse Agent & Drying Agent User Manual

Finish 08335

Finish Jet-Dry Rinse Aid User Manual

Model: 08335

PRODUCT OVERVIEW

The Finish Jet-Dry Rinse Aid is a dishwasher rinse agent and drying agent designed to enhance the performance of your dishwasher. It helps to remove spots and residue, ensuring brilliant shine on your dishes and glassware. This product also includes a glass protection ingredient for lasting shine and is automatically released during the dishwasher's rinse cycle.





Image: Front view of the Finish Jet-Dry Rinse Aid 32oz bottle, highlighting its "5x Power" and "Shine & Protect Glass Protection" features.

SETUP AND FIRST USE

Before using Finish Jet-Dry Rinse Aid, ensure your dishwasher's rinse agent dispenser is clean and accessible. This product is designed for easy refilling.

Filling the Dispenser:

1. Locate the rinse agent dispenser in the door of your dishwasher.

2. Open the dispenser cap or cover.
3. Carefully pour Finish Jet-Dry Rinse Aid into the dispenser until it reaches the indicated fill line. Avoid overfilling.
4. Close the dispenser cap securely.





Image: Back view of the Finish Jet-Dry Rinse Aid bottle, showing directions for use and caution information.

OPERATING INSTRUCTIONS

Once filled, Finish Jet-Dry Rinse Aid will automatically release during the rinse cycle of your dishwasher. No manual intervention is required for each wash.

- For optimal results, use Finish Jet-Dry Rinse Aid in conjunction with your preferred dishwasher detergent.
- It actively works to prevent water spots and residue, leaving dishes with a brilliant shine.
- The integrated glass protection ingredient helps maintain the clarity and shine of your glassware over time.

MAINTENANCE

To ensure continuous optimal performance, it is recommended to refill the rinse agent dispenser monthly. Your dishwasher may have an indicator light or sound to alert you when the rinse agent level is low.

Store the Finish Jet-Dry Rinse Aid bottle in a cool, dry place, away from direct sunlight and out of reach of children.

TROUBLESHOOTING

If you experience issues with your dishes after using Finish Jet-Dry Rinse Aid, consider the following:

Problem	Possible Cause	Solution
Dishes are still wet or have water spots.	Rinse aid dispenser is empty or low.	Refill the rinse aid dispenser. Ensure it is filled to the appropriate level.
Cloudy or filmy residue on dishes/glasses.	Insufficient rinse aid dispensed or very hard water.	Check rinse aid level. If water is very hard, consider increasing the rinse aid setting on your dishwasher if available, or using a water softener.
Product not dispensing correctly.	Dispenser cap not closed properly or dispenser clogged.	Ensure the dispenser cap is securely closed. Check for any blockages in the dispenser opening and clean if necessary.

SPECIFICATIONS

Brand: Finish

Model Number: 08335

Item Form: Liquid

Scent: Unscented

Item Volume: 32 Fluid Ounces

Product Dimensions: 8 x 5 x 9 inches; 2 Pounds

Manufacturer: Reckitt Benckiser

Date First Available: February 12, 2009



Image: The Finish Jet-Dry Rinse Aid bottle held by hands, illustrating its approximate height of 10 inches (25 cm).

IMPORTANT INFORMATION & SUPPORT

Legal Disclaimer:

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

Customer Support:

For further assistance or product information, please visit the official Finish store or contact the manufacturer:

Manufacturer: Reckitt Benckiser

Official Store: Visit the Finish Store on Amazon