

[manuals.plus](#) /

› [One For All](#) /

› [One For All OARH01B Single Device Universal Remote Control User Manual](#)

One For All OARH01B

One For All OARH01B Single Device Universal Remote Control User Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your One For All OARH01B Single Device Universal Remote Control. This remote is designed to provide simplified control for your television, featuring an intuitive layout and essential functions.

PRODUCT FEATURES

The One For All OARH01B remote control is engineered for ease of use and reliability. Key features include:

- **Large, Easy-to-Use Buttons:** Designed for comfortable handling and clear visibility.
- **Intuitive Key Grouping:** Buttons are logically arranged with easy-to-recognize icons for quick access to functions.
- **Glow Keys:** Volume, Channel, and Sleep keys illuminate for easy identification in low-light conditions.
- **Braille Support:** Tactile indicators for Power, Channel, and Volume buttons enhance accessibility.
- **Comprehensive Functionality:** Includes dedicated keys for Menu, Sleep, Input, Closed Captioning (CC), and Previous Channel.
- **Digital Sub-Channel Capability:** Supports navigation of digital sub-channels (e.g., 59.1) for modern TV programming.
- **Secure Battery Compartment:** Features a secure screw for the battery door, preventing accidental opening.



A black universal remote control with large, clearly labeled buttons. The top features a red power button and a code search button. Below are the numeric keypad (0-9), followed by navigation buttons for volume, channel, enter, and input. Mute and previous channel buttons are centrally located. Further down are buttons for sleep, menu, and closed captioning. The 'ONE FOR ALL' logo is at the bottom.

GETTING STARTED: BATTERY INSTALLATION

To begin using your remote control, you must first install the batteries.

1. Locate the battery compartment on the back of the remote control.
2. Using a small screwdriver, carefully remove the secure screw from the battery compartment door.
3. Slide the battery compartment door open.
4. Insert two (2) AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align with the indicators inside the compartment.
5. Close the battery compartment door and re-insert the secure screw to fasten it.

Note: Always use new batteries and dispose of old batteries responsibly.

SETUP: PROGRAMMING THE REMOTE

Your One For All OARH01B remote control needs to be programmed to operate your specific television. There are typically two methods for programming:

Method 1: Direct Code Entry

1. Turn on the television you wish to control.
2. Press and hold the **CODE SEARCH** button on the remote until the indicator light illuminates.
3. Refer to the code list provided with your remote (or available online from One For All) and find the 3-digit code for your TV brand.
4. Enter the 3-digit code using the number buttons on the remote. The indicator light should turn off after the last digit is entered.
5. Point the remote at your TV and press the **POWER** button. If the TV turns off, the remote is successfully programmed.
6. If the TV does not respond, repeat the process with the next code listed for your brand.

Method 2: Auto Code Search

1. Turn on the television you wish to control.
2. Press and hold the **CODE SEARCH** button on the remote until the indicator light illuminates.
3. Press the **POWER** button once. The indicator light will flash, indicating the remote is searching for a code.
4. Point the remote at your TV and wait. The remote will send power codes to your TV every few seconds.
5. As soon as your TV turns off, immediately press the **ENTER** button to save the code. If you wait too long, the remote may pass the correct code.
6. Test the remote's functions (Volume, Channel, etc.). If all functions work correctly, programming is complete. If not, repeat the auto search process.

OPERATING THE REMOTE

Once programmed, your One For All OARH01B remote provides control over your television's primary functions.

- **POWER:** Turns your television on or off.
- **Number Pad (0-9):** Used to directly enter channel numbers.
- **ENTER:** Confirms channel selection or menu options.
- **INPUT:** Cycles through available video inputs on your TV (e.g., HDMI 1, AV, Component).
- **VOL (+/-):** Increases or decreases the television's volume.
- **MUTE:** Silences the television's audio.
- **CHAN (Up/Down):** Changes the television channel up or down.
- **PREV CH:** Switches to the previously viewed channel.
- **SLEEP:** Activates the TV's sleep timer function (if available).
- **MENU:** Accesses the television's on-screen menu. Use VOL and CHAN buttons to navigate menu options, and ENTER to select.
- **CLOSED CAPTIONING (CC):** Toggles closed captions on or off.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common solutions:

- **Remote Not Responding:**

- Check if the batteries are correctly installed and have sufficient power. Replace if necessary.
- Ensure there is a clear line of sight between the remote and the TV's infrared sensor. Remove any obstructions.

- **Remote Not Controlling TV:**

- The remote may not be programmed correctly for your TV. Re-attempt the programming steps (Direct Code Entry or Auto Code Search).
- If using Direct Code Entry, try other codes listed for your TV brand.

- **Specific Functions Not Working (e.g., Input, Menu):**

- Some advanced TV functions may not be fully supported by all universal remotes. Verify if your TV model is fully compatible with the remote's features.
- When navigating TV menus, remember that VOL and CHAN buttons often serve as navigation arrows. Press ENTER to confirm selections.

- **Indicator Light Not Functioning:**

- This usually indicates low battery power. Replace the batteries.

MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades or the indicator light fails to illuminate. Always replace both batteries at the same time.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as this can damage internal components.

SPECIFICATIONS

Specification	Detail
Brand	One For All
Model	OARH01B
Compatible Devices	Television
Max Number of Supported Devices	1
Power Source	Battery Powered

Batteries Required	2 x AAA (not included)
Connector Type	Infrared
Dimensions (LxWxH)	17.8 x 2.5 x 5.1 Centimeters
Item Weight	104 g

WARRANTY AND SUPPORT

Your One For All OARH01B Universal Remote Control comes with a **Limited Lifetime Warranty**. For specific terms and conditions, please refer to the warranty documentation included with your purchase or visit the official One For All website.

For further assistance, troubleshooting tips, or to find the latest device codes, please visit the [One For All support website](#). You may also contact their customer service for personalized support.

© 2023 One For All. All rights reserved.

Documents - One For All – OARH01B

no relevant documents