

[Manuals.plus](#) /

› [Epson](#) /

› Epson PowerLite 1751 Projector User Manual

Epson V11H479120

Epson PowerLite 1751 Projector User Manual

Model: V11H479120 | Brand: Epson

1. OVERVIEW

The Epson PowerLite 1751 is an ultraportable 3LCD projector designed for brilliant presentations. It features XGA resolution and high brightness levels, making it suitable for various environments, including office and on-the-go use. Its compact and lightweight design enhances portability, while multiple connectivity options ensure ease of use.



Figure 1: Epson PowerLite 1751 Projector. This image displays the compact and lightweight design of the projector, highlighting its main lens and control panel.

2. KEY FEATURES

- **Lightweight and travel friendly:** Thin as a laptop, weighing just 3.7 lb.
- **XGA performance:** 2600 lumens color and 2600 lumens white light output, native XGA resolution.
- **Easy connectivity:** USB Plug 'n Play for Windows and Mac compatibility.
- **HDMI connectivity:** Simplifies connection to HDMI devices for audio and video.
- **PC-free presentations:** Ability to display directly from a USB memory device.

3. SETUP GUIDE

Follow these steps to set up your Epson PowerLite 1751 projector:

1. **Placement:** Position the projector on a stable, flat surface. Ensure adequate ventilation around the unit.
2. **Power Connection:** Connect the power cord to the projector and then to a power outlet.
3. **Source Connection:**
 - **HDMI:** Connect an HDMI cable from your source device (e.g., laptop, Blu-ray player) to the HDMI port on the projector.
 - **USB Plug 'n Play:** For Windows and Mac computers, connect a USB cable from your computer to the projector's USB-B port.
 - **USB Memory Device:** Insert a USB memory device into the USB-A port for PC-free presentations.
4. **Power On:** Press the power button on the projector or the remote control to turn on the unit.
5. **Image Adjustment:**
 - **Focus:** Adjust the focus ring on the lens until the image is sharp.
 - **Keystone Correction:** The projector features automatic vertical keystone correction. For manual adjustment, refer to the operating instructions.



Video 1: Epson 1700 Series Overview. This video provides a visual overview of the Epson 1700 series projectors, demonstrating their key features including brightness, portability, versatility with various connections like USB Plug 'n Play and HDMI, and the iProjection App for wireless functionality. It also highlights the 3LCD technology for vivid color quality and ease of travel.

4. OPERATING INSTRUCTIONS

Once set up, operating the PowerLite 1751 is straightforward:

- **Power On/Off:** Use the power button on the projector or the remote control. Allow the projector to cool down properly after use before unplugging.
- **Source Selection:** Use the "Source Search" or dedicated input buttons on the remote control or projector panel to switch between connected devices (HDMI, Computer, USB).
- **PC-Free Presentations:** If a USB memory device is inserted, the projector can display compatible files directly without a computer. Navigate files using the remote control.
- **Wireless Projection (Optional):** Utilize the iProjection App for wireless presentations from compatible devices. Refer to the app's instructions for pairing and usage.
- **Volume Control:** Adjust the audio volume using the remote control.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your projector:

- **Lamp Life:** The projector lamp has a life expectancy of up to 5000 hours. Replace the lamp when brightness significantly diminishes or the lamp indicator light illuminates.
- **Cleaning:**
 - **Lens:** Gently wipe the lens with a soft, lint-free cloth designed for optical surfaces. Do not use abrasive cleaners.

- **Exterior:** Clean the projector's exterior with a soft, dry cloth.
- **Air Filter:** Regularly check and clean the air filter to prevent dust buildup, which can affect performance and cause overheating. Refer to the full manual for filter cleaning/replacement instructions.
- **Cooling:** Ensure the projector's ventilation vents are not blocked during operation. The cooling fan may produce audible noise, which is normal. Allow the projector to complete its cooling cycle after shutdown before moving or storing it.

6. TROUBLESHOOTING

If you encounter issues with your projector, refer to the following common problems and solutions:

- **No Image or "No Signal" Message:**
 - Verify all cables (power, HDMI, USB) are securely connected to both the projector and the source device.
 - Ensure the correct input source is selected on the projector.
 - Check if the source device (e.g., laptop) is outputting video to an external display.
- **Image is Blurry or Out of Focus:**
 - Adjust the focus ring on the projector lens.
 - Ensure the projector is at an appropriate distance from the screen for the desired image size.
- **Image is Distorted (Trapezoid Shape):**
 - The projector has automatic vertical keystone correction. If the distortion persists, manually adjust keystone settings via the projector menu.
 - Ensure the projector is placed as perpendicular to the screen as possible.
- **Projector Overheating or Fan Noise:**
 - Ensure ventilation vents are clear and not obstructed.
 - Operate the projector in a well-ventilated area.
 - Clean the air filter if it is dusty.
 - Excessive fan noise can occur if the projector is working hard or if the filter is clogged.

For more complex issues, consult the comprehensive user manual available on the Epson support website or contact Epson customer support.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	11.5 x 8.3 x 2.1 inches
Item Weight	3.7 pounds
ASIN	B0082CG8AO
Item Model Number	V11H479120
Batteries	2 AAA batteries required (included)
Manufacturer	Epson

Feature	Detail
Language	English
Recommended Uses	Business
Special Feature	Speakers
Connectivity Technology	HDMI
Display Resolution	1024x768 (XGA)

8. WARRANTY AND SUPPORT

Epson provides support for the PowerLite 1751 projector. For detailed warranty information, please refer to the warranty card included with your product or visit the official Epson support website. Extended protection plans may also be available for purchase to cover your device beyond the standard warranty period.

For technical assistance, troubleshooting, or service inquiries, please contact Epson customer support through their official channels. Keep your product model number (V11H479120) and serial number ready when contacting support.

- **2-Year Protection Plan:** Available for purchase.
- **3-Year Protection Plan:** Available for purchase.
- **Complete Protect:** Monthly plan covering eligible past and future purchases.

© 2024 Epson Corporation. All rights reserved. Information subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0082CG8AO>

More documents and user manuals: <https://manuals.plus/>