

Oster CKSTSB100-B-2NP

Oster CKSTSB100-B-2NP Solid Single Burner Instruction Manual

Model: CKSTSB100-B-2NP | Brand: Oster

PRODUCT OVERVIEW

Be well-equipped for any occasion with extra cooking power when you need it. This single burner is stylish and elegant to display on your countertop while preparing holiday meals and entertaining. With 900 watts of cooking power and an adjustable temperature setting, you can create all your recipes with ease and control.

Key Features

- 900 watts of power
- Adjustable temperature controls
- Cycle indicator light
- Easy-to-clean solid disc heating element
- Skid resistant will not slide

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE.

- DO NOT touch hot surface, the handles or knobs.
- To protect against electrical shock do not immerse the cord, plug, temperature controller or this appliance in water or other liquid. See instructions for cleaning.
- Close supervision is necessary when appliance is used by or near children.
- Do not use appliance unattended.
- Unplug from outlet when not in use and before cleaning. Turn control knob to OFF before removing plug. Allow to cool before cleaning or storing appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over the edge of a table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner or in a heated oven.
- Extreme caution must be used when moving any pot or pan containing hot oil or other liquid from this appliance.
- To disconnect, turn the control to OFF, then remove plug from wall outlet.
- Do not use appliance for other than intended use.

Household Use Only

This appliance is not intended for commercial use. Do not attempt to service this product. There are no user-serviceable parts inside. Refer servicing to qualified service personnel.

Extension Cord Use

A short power-supply cord is provided to reduce the risk resulting from entanglement or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance. The extension cord is not to be allowed to drape over the counter or tabletop where it can be pulled on by children or tripped over.

SETUP AND FIRST USE

Upon unboxing your Oster Solid Single Burner, ensure all components are present and inspect the unit for any damage. The burner is designed for immediate use after a quick setup.



The Oster Solid Single Burner is a compact and portable electric cooktop, featuring a durable solid disc heating element and an adjustable temperature control knob. A red indicator light illuminates when the unit is powered on and heating.

This video demonstrates the unboxing process of the Oster Solid Single Burner, showing how the unit is packaged and the included components, such as the user guide and power cord.

OPERATING YOUR SINGLE BURNER

The Oster Single Burner features an adjustable temperature control knob, allowing you to select the desired heat level for your cooking needs. The power indicator light will illuminate when the unit is active.



This image provides a side view of the Oster Solid Single Burner, highlighting its compact height of 4.1 inches (10 cm), making it suitable for various countertop spaces.

This video demonstrates the temperature control functionality of the Oster Single Burner, showing how to adjust the heat settings from low to high and observing the indicator light.

This video showcases the ease of use of the Oster Single Burner, demonstrating its quick heating capabilities and stable performance for various cooking tasks.

CARE AND CLEANING

To ensure the longevity and optimal performance of your Oster Single Burner, proper care and cleaning are essential. Always unplug the unit from the power outlet and allow it to cool completely before cleaning.

Wipe the solid disc heating element and the exterior surfaces with a damp cloth. For stubborn stains, a mild, non-abrasive cleaner can be used. Do not immerse the unit in water or any other liquid, as this can damage the electrical components and pose a shock hazard.

TROUBLESHOOTING COMMON ISSUES

If the unit cycles on and off during operation, this is often a normal function of the built-in thermostat. It helps to maintain a consistent temperature and prevent overheating. This is not an indication of a malfunction.

If the unit does not heat up or maintain heat, ensure it is properly plugged into a functioning electrical outlet. Verify that the temperature control knob is set to the desired heat level (Low, Medium, or High). Refer to the "Specifications" section for wattage requirements and ensure your power supply meets these needs. If issues persist after checking these points, it is recommended to contact Oster customer support for further assistance.

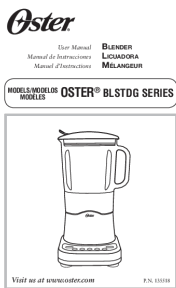 
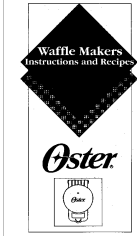 

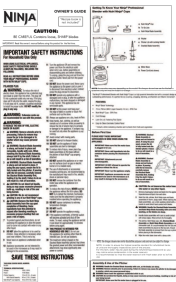 

PRODUCT SPECIFICATIONS

Feature	Detail
Color	Black
Brand	Oster
Heating Elements	1
Wattage	900 watts
Controls Type	Knob
Burner type	Induction
Power Source	AC
Item Weight	4.35 pounds
Manufacturer	Oster
UPC	034264450332
Global Trade Identification Number	00034264450332
Product Dimensions	4.4 x 10.5 x 11.1 inches
ASIN	B0082JMCB6
Item model number	CKSTSB100-B-2NP
Date First Available	May 12, 2012

WARRANTY AND CUSTOMER SUPPORT

Thank you for purchasing the Oster® Single Burner. Before you use this product for the first time, please take a few moments to read these instructions and keep it for reference. Pay particular attention to the safety statements. To learn more about Oster® products, please visit www.oster.com or call us at 1-800-334-0759.

Related Documents - CKSTSB100-B-2NP

 <p>The Manual BLENDER Manual de Instrucciones LICUADORA Mélangeur</p> <p>MODELS/MODELLES MODÈLES OSTER® BLSTDG SERIES</p> <p>Visit us at www.oster.com</p>	<p>Oster BLSTDG Series Blender User Manual and Recipes</p> <p>Comprehensive user manual for the Oster BLSTDG Series Blender, covering important safeguards, features, operating instructions, cleaning, storage, recipes, and warranty information.</p>
 <p>Waffle Makers Instructions and Recipes</p> <p>Oster</p>	<p>Oster Waffle Makers: Instructions and Recipes</p> <p>A comprehensive guide to using Oster waffle makers, including important safety information, operating instructions, care and cleaning tips, and a variety of delicious waffle recipes and toppings.</p>
 <p>Oster</p> <p>CKSTPCEC8801</p>	<p>Manual de Instrucciones Oster XL Express Multi-Cooker CKSTPCEC8801</p> <p>Guía completa de instrucciones para el Oster XL Express Multi-Cooker (Modelo CKSTPCEC8801), cubriendo seguridad, uso, mantenimiento y solución de problemas.</p>
 <p>NINJA</p> <p>OWNER'S GUIDE</p> <p>IMPORTANT SAFETY INSTRUCTIONS</p> <p>SAVE THESE INSTRUCTIONS</p>	<p>Oster BL660 Owner's Guide: Refurbished Product Information and Support</p> <p>Comprehensive owner's guide for the Oster BL660 blender, detailing accessory variations, important notes on refurbished units, and product support contact information.</p>
 <p>Oster</p> <p>Automatic Juice Extractor</p>	<p>Oster Automatic Juice Extractor: Recipes and Instructions Manual</p> <p>Comprehensive user manual for the Oster Automatic Juice Extractor, including important safeguards, assembly and disassembly instructions, usage tips, care and cleaning guides, a juicing guide, vitamin information, and a collection of juice and food recipes.</p>



[Oster Steam Generator Press X Press GCSTSG1200 User Manual & Instructions](#)

Comprehensive user manual and instructions for the Oster Steam Generator Press X Press GCSTSG1200, covering safety, operation, cleaning, and troubleshooting.