

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Audiovox](#) /

› [Audiovox VE927 9-inch LCD Drop-Down TV with Built-in DVD Player and Clock Radio User Manual](#)

Audiovox VE927

Audiovox VE927 9-inch LCD Drop-Down TV with Built-in DVD Player and Clock Radio User Manual

Model: VE927

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Audiovox VE927 9-inch LCD Drop-Down TV with Built-in DVD Player and Clock Radio. Please read this manual thoroughly before using the product to ensure proper function and safety.



Figure 1: Audiovox VE927 unit with the 9-inch LCD screen in the extended, viewing position. The main unit is mounted under a cabinet, and the screen swivels down for use.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Audiovox VE927 9-inch LCD Drop-Down TV/DVD Player Unit
- Mounting Stand/Bracket
- Remote Control
- Power Adapter
- User Manual (this document)

SETUP AND INSTALLATION

1. Mounting the Unit

The VE927 is designed for under-cabinet mounting. Ensure the mounting surface is sturdy and capable of supporting the unit's weight (approximately 6 pounds). Use appropriate screws and tools for secure installation.

1. Identify a suitable location under a cabinet, ensuring sufficient clearance for the screen to swivel down (270° swivel capability).
2. Attach the mounting stand/bracket to the underside of the cabinet using appropriate fasteners.
3. Securely attach the VE927 unit to the installed mounting stand/bracket. Refer to the detailed mounting diagram in the separate installation guide for precise instructions.

2. Power Connection

Connect the provided power adapter to the DC input port on the VE927 unit, then plug the adapter into a standard electrical outlet.

3. Initial Power On

Press the Power button on the unit or the remote control to turn on the device. The initial setup wizard may appear for language selection and time setting.

OPERATING INSTRUCTIONS

1. Screen Adjustment

The 9-inch LCD screen can swivel up to 270 degrees. Gently adjust the screen to your desired viewing angle. Avoid excessive force.

2. DVD Player Operation

1. Insert a DVD disc into the disc slot on the front of the unit. The unit will automatically detect the disc and begin playback.
2. Use the remote control for playback functions such as Play, Pause, Stop, Fast Forward, Rewind, and Chapter Skip.
3. Access the DVD menu for language, subtitle, and multi-angle selections.

3. TV Tuner Operation (ATSC/NTSC)

1. Ensure an antenna is connected to the TV antenna input (if applicable).
2. Press the "TV" button on the remote control to switch to TV mode.
3. Perform a channel scan to find available digital (ATSC) and analog (NTSC) channels in your area. Refer to the on-screen menu for scanning options.
4. Use the Channel Up/Down buttons to navigate between channels.

4. AM/FM Clock Radio

1. Press the "Radio" button to switch to radio mode.
2. Use the "Band" button to select between AM and FM frequencies.
3. Tune to desired stations using the tuning buttons or by performing an auto-scan.
4. Set the clock using the menu options.

5. Cooking Timer

The unit includes a cooking timer function. Access the timer settings through the main menu or a dedicated button on the remote control. Set the desired countdown time, and an alarm will sound upon completion.

6. USB Connectivity

The unit features USB connectivity. Insert a USB flash drive into the USB port to play compatible media files (e.g., photos, music, videos). Navigate files using the remote control.

MAINTENANCE

Cleaning the Unit

- Always disconnect the power adapter before cleaning.
- Use a soft, dry cloth to wipe the exterior of the unit.
- For the LCD screen, use a soft, lint-free cloth specifically designed for electronics screens. Do not use abrasive cleaners or solvents.
- Avoid spraying liquids directly onto the unit.

Disc Care

- Handle discs by their edges to avoid fingerprints.
- Keep discs clean and free from scratches. Use a soft cloth to wipe discs from the center outwards.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected; outlet not functioning.	Ensure power adapter is securely connected to the unit and a working electrical outlet.
No picture/sound from DVD	Disc is dirty or scratched; disc inserted incorrectly; incorrect input selected.	Clean the disc; reinsert the disc correctly; ensure DVD mode is selected.
Poor TV reception	Antenna not connected or positioned incorrectly; weak signal.	Connect and adjust the antenna; perform a channel scan; consider a stronger antenna.
Remote control not working	Batteries are dead or inserted incorrectly; obstruction between remote and unit.	Replace batteries; ensure correct polarity; remove obstructions; point remote directly at the unit.

SPECIFICATIONS

Model: VE927

Screen Size: 9 Inches

Display Type: LCD

Aspect Ratio: 16:9

Swivel Screen: 270°

Media Type: SD, DVD, USB

Connectivity Technology: USB

Tuner: ATSC/NTSC Digital Tuner

Radio: AM/FM Clock Radio

Special Features: Cooking Timer, Stereo Speakers, Language/Sub-Title/Multi-Angle Selection

Item Weight: 6 pounds

Manufacturer: Audiovox

First Available: April 27, 2011


WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Audiovox website. For technical support or service inquiries, please contact Audiovox customer service directly. Keep your purchase receipt as proof of purchase.

© 2023 Audiovox. All rights reserved.

Related Documents - VE927

 <p>D1888 8" LCD MONITOR, DVD PLAYER WITH BUILT-IN BATTERY</p> <p><small>Product Contents: 1 - 8" LCD Monitor with DVD Player 1 - Remote Control 1 - AC Power Cord 1 - Audio/Video Input 1 - Power Adapter</small></p>	<p><u>Audiovox D1888 8" LCD Monitor DVD Player User Manual</u></p> <p>This user manual provides comprehensive instructions for operating the Audiovox D1888 portable 8-inch LCD monitor and DVD player. It covers setup, controls, disc playback, menu navigation, audio/subtitle settings, specifications, battery care, and warranty information.</p>
 <p>LCM45NB 4.5" Wide Screen LCD Monitor Owner's Manual</p> <p><small>Product Contents: 1 - 4.5" Wide Screen LCD Monitor 1 - Remote Control 1 - AC Power Cord 1 - Audio/Video Input 1 - Power Adapter</small></p>	<p><u>Audiovox LCM45NB 4.5-Inch Wide Screen LCD Monitor Owner's Manual</u></p> <p>Owner's manual for the Audiovox LCM45NB 4.5-inch widescreen LCD monitor, detailing features, controls, operation, maintenance, troubleshooting, and specifications. Includes information on camera inputs and navigation.</p>
 <p>DPF800 8" DIGITAL PICTURE FRAME</p> <p><small>Product Contents: 1 - 8" Digital Picture Frame 1 - Remote Control 1 - AC Power Cord</small></p>	<p><u>Audiovox DPF800 8-Inch Digital Picture Frame User Manual</u></p> <p>Comprehensive user manual for the Audiovox DPF800 8-inch digital picture frame, covering setup, operation, features, specifications, and warranty information.</p>
 <p>DPF700 7" DIGITAL PHOTO FRAME</p> <p><small>Product Contents: 1 - 7" Digital Photo Frame 1 - Remote Control 1 - AC Power Cord</small></p>	<p><u>DPF700 Digital Photo Frame User Manual</u></p> <p>Comprehensive user manual for the Audiovox DPF700 7-inch Digital Photo Frame, detailing setup, operation, features, specifications, and warranty information.</p>

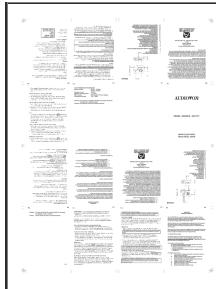

[AUDIOVOX AXC 571 Owner's Manual - Setup and Operation Guide](#)

Comprehensive guide for the AUDIOVOX AXC 571 audio system. Learn how to set up, operate, and troubleshoot your device with detailed instructions and safety information.



OWNER'S MANUAL
DPF701
Digital Photo Frame

[Audiovox DPF701 Digital Photo Frame Owner's Manual](#)

This owner's manual provides comprehensive instructions for the Audiovox DPF701 Digital Photo Frame, covering safety, setup, operation, settings, troubleshooting, specifications, and warranty information.