

[Manuals.plus](#) /

› [Power-Pole](#) /

› Power-Pole Remote Control Transmitter Fob - C-Monster 2.0 (CM2) User Manual

Power-Pole CM2-KF-STD-PP

Power-Pole Remote Control Transmitter Fob - C-Monster 2.0 (CM2) User Manual

Brand: Power-Pole | **Model:** CM2-KF-STD-PP

INTRODUCTION

This manual provides instructions for the Power-Pole Remote Control Transmitter Fob, designed for use with C-Monster 2.0 (CM2) compatible shallow water anchor systems. This wireless 2-button key fob offers convenient control of your Power-Pole anchor from various locations on your boat.

Key Features:

- **Wireless 2-Button Key Fob:** Provides remote operation of your Power-Pole anchor.
- **Auto Up/Down Feature:** Simplifies anchor deployment and retraction.
- **Waterproof Key Fob:** Designed to withstand marine environments.
- **Floating Lanyard:** Helps prevent loss if dropped in water.
- **CM2 Compatible:** Ensures seamless integration with C-Monster 2.0 anchor systems.



Image: The Power-Pole C-Monster 2.0 (CM2) Remote Control Fob, featuring two red buttons for 'Up' and 'Down' functions, designed for wireless operation of shallow water anchor systems.

SETUP

- 1. Battery Installation:** The fob typically comes with a pre-installed battery (CR2032 coin cell). If replacement is needed, carefully open the fob casing, replace the old battery with a new CR2032, ensuring correct polarity, and securely close the casing.
- 2. Pairing with Power-Pole System:**
 - Ensure your Power-Pole anchor system is powered on.
 - Refer to your Power-Pole anchor system's main control unit manual for specific pairing instructions. Generally, this involves pressing a pairing button on the control unit, then simultaneously pressing both buttons on the remote fob until a confirmation signal (e.g., LED flash, audible beep) is received.
 - Test the remote's functionality by pressing the 'Up' and 'Down' buttons to ensure the anchor responds correctly.

OPERATING INSTRUCTIONS

The Power-Pole Remote Control Fob provides simple, intuitive control of your shallow water anchor.

- **Deploying the Anchor (Down):** Press and hold the **DOWN** button to lower your Power-Pole anchor. Release the button when the anchor is fully deployed or at your desired depth.
- **Retracting the Anchor (Up):** Press and hold the **UP** button to raise your Power-Pole anchor. Release the button when the anchor is fully retracted.
- **Auto Up/Down:** For some CM2 systems, a quick press and release of the UP or DOWN button may initiate an automatic full deployment or retraction. Consult your Power-Pole anchor system's manual for specific auto-mode functionality.
- **Range:** The remote operates wirelessly. Maintain a clear line of sight to the Power-Pole system's receiver for optimal performance. Obstructions or distance may affect signal strength.

MAINTENANCE

- **Battery Replacement:** When the remote's range decreases or it becomes unresponsive, it's likely time to replace the battery. The fob uses a CR2032 coin cell battery. Refer to the "Setup" section for replacement instructions.
- **Cleaning:** Clean the fob with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Waterproofing:** While the fob is waterproof, ensure the casing is always securely closed after battery replacement to maintain its water resistance. Avoid prolonged submersion.
- **Storage:** Store the remote in a cool, dry place when not in use. Avoid direct sunlight or extreme temperatures.
- **Lanyard Inspection:** Periodically check the floating lanyard for wear and tear. Replace if damaged to prevent accidental loss.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding	Dead or low battery; Not paired; Out of range.	Replace battery; Re-pair the remote (see Setup); Move closer to the Power-Pole system.
Short operating range	Low battery; Signal interference; Obstructions.	Replace battery; Move away from sources of electronic interference; Ensure clear line of sight.
Buttons feel sticky or unresponsive	Dirt or debris under buttons; Water ingress.	Clean the fob thoroughly; Ensure casing is sealed properly. If water ingress is suspected, discontinue use and contact support.

SPECIFICATIONS

Feature	Detail
Model Number	CM2-KF-STD-PP

Feature	Detail
Compatibility	Power-Pole C-Monster 2.0 (CM2) anchor systems
Buttons	2 (Up, Down)
Power Source	CR2032 Coin Cell Battery
Water Resistance	Waterproof design
Package Dimensions	4.69 x 3.39 x 1.46 inches
Item Weight	0.212 ounces
Manufacturer	JL MARINE
Date First Available	May 23, 2012

WARRANTY INFORMATION

This Power-Pole product is covered by a manufacturer's warranty. For detailed information regarding warranty terms, conditions, and registration, please refer to the official Power-Pole website or contact their customer support directly. Keep your proof of purchase for warranty claims.

SUPPORT

For technical assistance, troubleshooting beyond this manual, or to inquire about replacement parts, please contact Power-Pole customer support. You can find contact information, FAQs, and additional resources on the official Power-Pole website:

www.power-pole.com

When contacting support, please have your product model number (CM2-KF-STD-PP) and purchase date available.

