

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Amazon](#) /
- › [Kindle Fire \(Previous Generation - 2nd\) User Manual](#)

Amazon Kindle Fire (Previous Generation - 2nd)

Kindle Fire User Manual

Model: Previous Generation - 2nd

INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your Kindle Fire (Previous Generation - 2nd). The Kindle Fire is a versatile tablet designed for entertainment and productivity, offering access to a vast library of digital content, web browsing, and integrated communication features.



Figure 1: Front view of the Kindle Fire tablet, showing the home screen interface with content such as "Ice Age: Continental Drift" and app icons for Pinterest, Email, Spotify, and Facebook.

SETUP

1. Charging Your Device

Before first use, fully charge your Kindle Fire. Connect the included USB cable to the micro-USB port on the device and the other end to a compatible USB power adapter or a computer's USB port. The device will indicate charging status.

2. Initial Power On and Wi-Fi Connection

Press and hold the power button to turn on your Kindle Fire. Follow the on-screen prompts to select your language and connect to a Wi-Fi network. You will need your Wi-Fi network name (SSID) and password.

3. Amazon Account Registration

Register your Kindle Fire to your Amazon account. This links your device to your purchased content and allows access to Amazon services. If you do not have an Amazon account, you will be prompted to create one.

4. Setting Up Parental Controls (Optional)

The Kindle Fire offers robust parental control features. To access these, pull down from the top of the screen to reveal the "Settings" menu. Tap "More" (the plus sign icon), then "Parental Controls." You can set a password, block web browsing, email, and password-protect purchases and video playback. Additionally, the Freetime application allows for creating child profiles with customized content access and daily time limits. Freetime is typically pre-installed or available via system update.

OPERATING YOUR KINDLE FIRE

1. Navigation and Home Screen

The home screen features a "Carousel" displaying recently accessed content. Below the Carousel, you will find tabs for "Shop," "Games," "Apps," "Books," "Music," "Videos," and "Newsstand." Tap on a tab to browse content within that category. Swipe left or right to navigate through the Carousel or content lists.

2. Accessing Content

- **Books:** Tap the "Books" tab to access your library. Tap a book cover to open it. To turn pages, tap the side of the screen or swipe your finger across.
- **Apps & Games:** The "Apps" tab displays all your applications. The "Games" tab filters these to show only games. Tap an icon to launch an app or game.
- **Music & Videos:** Access your purchased or streamed music and videos through their respective tabs.
- **Web:** The built-in web browser allows for fast internet browsing over Wi-Fi.
- **Email:** Configure your email accounts (Gmail, Hotmail, Yahoo!, Exchange) through the integrated email application.

3. Settings and Notifications

Swipe down from the top of the screen to access quick settings and notifications. Here you can adjust Wi-Fi, screen brightness, volume, and access the full "More" settings menu.

MAINTENANCE

1. Battery Care

To prolong battery life, avoid extreme temperatures. Charge the device regularly, but it is not necessary to fully discharge it before recharging. Unplug the charger once the device is fully charged.

2. Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of your Kindle Fire. Do not use abrasive cleaners or solvents. Avoid getting moisture into openings.

3. Software Updates

Your Kindle Fire will periodically check for and download software updates automatically when connected to Wi-Fi. Ensure your device is charged during updates. You can manually check for updates in the "Settings" menu under "Device" then "System Updates."

4. Storage Management

To free up space, you can remove downloaded content (books, videos, apps) from your device. Content purchased from

Amazon remains available in the cloud for re-downloading. Go to "Settings" > "Storage" to manage your device's storage.

TROUBLESHOOTING

Common Issues and Solutions:

- **Device is unresponsive:** Press and hold the power button for 20-30 seconds until the device restarts.
- **Cannot connect to Wi-Fi:** Ensure Wi-Fi is enabled in settings. Verify your network password. Try restarting your Wi-Fi router.
- **Apps are slow or crashing:** Close unused applications. Restart the device. Clear app cache in "Settings" > "Apps & Games" > "Manage All Applications."
- **Battery drains quickly:** Reduce screen brightness. Turn off Wi-Fi when not in use. Close background applications.
- **Content not downloading:** Check Wi-Fi connection. Ensure sufficient storage space. Sync your device from "Settings" > "Sync Your Kindle."

Factory Reset:

If issues persist, you may perform a factory reset. This will erase all data and settings on your device. Go to "Settings" > "Device Options" > "Reset to Factory Defaults." **Warning:** This action is irreversible and will remove all personal data.

SPECIFICATIONS







Processor	Improved processor (40% faster than 1st Gen)
Memory (RAM)	Twice the memory of 1st Gen
Display	7-inch color touchscreen (1024x600 resolution)
Connectivity	Built-in Wi-Fi (802.11b/g/n)
Battery Life	Longer battery life compared to 1st Gen
Audio	Stereo speakers, 3.5mm stereo jack
Ports	Micro-USB 2.0

Note: Specific internal storage capacity may vary by model.

WARRANTY AND SUPPORT

For information regarding your product's warranty, please refer to the warranty card included with your purchase or visit the official Amazon support website. For technical assistance, troubleshooting, or service inquiries, please contact Amazon Customer Service.

Online Support: www.amazon.com/devicesupport

	<p>Amazon Fire Tablet and Kindle E-Reader Quick Setup Guide</p> <p>A quick setup guide for Amazon Fire tablets and Kindle e-readers, covering battery charging, Wi-Fi connection, account registration, payment settings, content download, and sharing features like Family Library.</p>
	<p>Amazon Fire Tablet and Kindle E-Reader Quick Setup Guide</p> <p>A quick setup guide for Amazon Fire tablets and Kindle e-readers, covering initial charging, Wi-Fi connection, account registration, payment settings, content download, and family sharing features.</p>
	<p>Amazon Fire Kids Edition Tablet Safety and Warranty Information</p> <p>Comprehensive safety guidelines, warranty details, and usage instructions for the Amazon Fire Kids Edition Tablet and Kid-Proof Case, designed for parents and young users.</p>
	<p>Amazon Fire HD 8 (12th Gen) Quick Start Guide</p> <p>A concise guide to setting up, activating, exploring features, and charging your Amazon Fire HD 8 (12th Generation) tablet. Includes troubleshooting information.</p>
	<p>Amazon Kindle Oasis Quick Start Guide and Information</p> <p>Concise guide for the Amazon Kindle Oasis e-reader, covering device overview, multilingual support information, and links to further resources. Optimized for accessibility and SEO.</p>
	<p>User Manual: 6ft White PVC USB 2.0 Cables for Charging and Data Transfer</p> <p>Official user manual for 6ft white PVC USB 2.0 cables, detailing compatibility with USB-C and Micro-USB devices, charging, data transfer, and care instructions. Compatible with various Kindle models.</p>