

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Timex](#) /

› [Timex Men's Expedition Base Shock 45mm Watch Blackout - Instruction Manual](#)

Timex T49896SU

Timex Men's Expedition Base Shock 45mm Watch Blackout

Model: T49896SU

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Timex Men's Expedition Base Shock 45mm Watch Blackout. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your timepiece. This watch is designed for durability and functionality, featuring shock resistance and water resistance suitable for various activities.



Front view of the Timex Expedition Base Shock watch, displaying the digital time and date. The watch features a black resin case and strap, with

buttons labeled for various functions including **SET**, **MODE**, **START/SPLIT**, **STOP/RESET**, and **INDIGLO**.

SETUP

1. Initial Time and Date Setting

1. Press and hold the **SET** button until the display flashes, indicating setup mode.
2. Press the **MODE** button to cycle through settings: seconds, hours, minutes, year, month, day.
3. Use the **START/SPLIT** and **STOP/RESET** buttons to adjust the flashing value up or down.
4. Once all settings are correct, press the **SET** button again to exit setup mode.

2. 12/24-Hour Format

- In time display mode, press the **START/SPLIT** button to toggle between 12-hour (AM/PM indicator) and 24-hour (military time) formats.

3. Setting Second Time Zone (T2)

1. From the main time display, press the **MODE** button repeatedly until 'T2' appears on the display.
2. Press and hold the **SET** button until the T2 time flashes.
3. Use the **MODE** button to select hours or minutes, and **START/SPLIT / STOP/RESET** to adjust.
4. Press **SET** to confirm and exit T2 setup.



Left side view of the watch, highlighting the SET and MODE buttons used for navigating and adjusting settings.

OPERATING FUNCTIONS

1. Chronograph (Stopwatch)

1. From the main time display, press the **MODE** button until 'CHRONO' or 'STW' appears.
2. Press **START/SPLIT** to begin timing.
3. Press **START/SPLIT** again to record a split time (lap time). The main timer continues running.
4. Press **STOP/RESET** to pause the chronograph.
5. Press **STOP/RESET** again to reset the chronograph to zero.

2. Countdown Timer

1. From the main time display, press the **MODE** button until 'TIMER' or 'CDT' appears.
2. Press and hold the **SET** button to enter timer setting mode.
3. Use **MODE** to select hours, minutes, or seconds, and **START/SPLIT / STOP/RESET** to adjust the values.
4. Press **SET** to confirm the countdown time.

5. Press **START/SPLIT** to begin the countdown. An alarm will sound when the timer reaches zero.
6. Press **STOP/RESET** to pause or reset the timer.

3. Alarms

1. From the main time display, press the **MODE** button until 'ALARM' or 'ALM' appears.
2. Press and hold the **SET** button to enter alarm setting mode.
3. Use **MODE** to select hours or minutes, and **START/SPLIT / STOP/RESET** to adjust the alarm time.
4. Press **SET** to confirm the alarm time.
5. Press **START/SPLIT** to toggle the alarm ON/OFF. An alarm icon will appear when activated.
6. When the alarm sounds, press any button to silence it.

4. Indiglo Night-Light

- Press the **INDIGLO** button (located below the display) to activate the night-light for easy viewing in low-light conditions.

MAINTENANCE

1. Cleaning

- Regularly clean your watch with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.
- For resin straps, mild soap and water can be used, followed by thorough rinsing and drying.

2. Battery Replacement

- The watch requires 1 Lithium Metal battery (included).
- Battery replacement should ideally be performed by a qualified watch technician to ensure water resistance is maintained. Improper replacement can compromise the watch's seals.

3. Water Resistance

- This watch is water-resistant to 100 meters (330 feet). This makes it suitable for snorkeling and swimming, but not for diving.
- Do not operate buttons while the watch is submerged in water to prevent water ingress.
- Avoid exposing the watch to extreme temperature changes, which can affect the water-resistant seals.



Rear view of the watch, displaying the stainless steel case back with engraved details including water resistance rating and battery type (CR2025).

TROUBLESHOOTING

Common Issues and Solutions:

- Display is blank or dim:** The battery may be low or depleted. Replace the battery (CR2025) by a professional.
- Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, refer to specific model features). Try a soft reset by holding all four side buttons simultaneously for a few seconds, then re-setting the time. If issues persist, battery replacement may be necessary.
- Time is inaccurate:** Re-set the time and date as per the 'Setup' section. If the inaccuracy continues, the battery may be weak, or the watch module may require servicing.
- Water inside the watch:** Immediately take the watch to a qualified service center. Do not attempt to open it yourself, as this can cause further damage.

SPECIFICATIONS

Model Number	T49896SU
Brand	Timex
Case Diameter	45mm
Case Material	Resin
Lens Material	Acrylic
Strap Material	Resin
Strap Width	22mm
Water Resistance	100m (330 ft)
Movement	Digital Quartz
Battery Type	1 Lithium Metal (CR2025)
Features	100-hour chronograph, 24-hour countdown timer, alarms, shock resistant (I.S.O. standards), 24-hour military time mode, 2 time zones, month/day/date calendar, INDIGLO light-up watch dial


WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Timex website or contact Timex customer service directly. Keep your proof of purchase for any warranty claims.

Manufacturer: Timex


Related Documents - T49896SU

	<p>Timex Expedition 4-Pusher Digital Watch User Manual and Guide</p> <p>Comprehensive user manual for the Timex Expedition 4-Pusher Digital watch, covering features, operation, time and date setting, chronograph, alarm, countdown timer, water resistance, strap and bracelet adjustment, battery replacement, and warranty information.</p>
	<p>Timex Expedition North Slack Tide User Guide and Safety Information</p> <p>Comprehensive user guide for the Timex Expedition North Slack Tide watch, covering setup, features, water resistance, safety precautions, warranty, and battery information.</p>
	<p>Timex Expedition Digital Watch User Manual</p> <p>Comprehensive user manual for the Timex Expedition Digital watch, covering basic operations, alarm settings, timer functions, chronograph usage, INDIGLO® night-light, water and shock resistance, and battery information.</p>

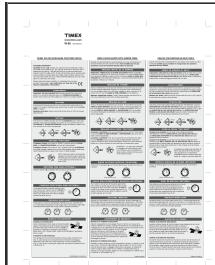

[Timex Watch User Manual and Warranty Information](#)

A comprehensive guide for Timex watches, covering setup, operation, features like INDIGLO night-light, bracelet adjustment, water and shock resistance, battery care, and international warranty details.

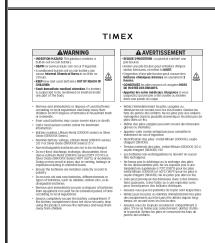

[Timex W-225 Watch User Manual and Features Guide](#)

Comprehensive user guide for the Timex W-225 watch, detailing its compass, tide, thermometer functions, operation, maintenance, and safety information. Includes setup instructions and warranty details.



[Timex Expedition Digital Watch User Guide](#)

Comprehensive user guide for the Timex Expedition Digital watch, detailing functions, basic operations, time/date settings, alarms, timers, chronographs, INDIGLO® night-light, water and shock resistance, and warranty information.