

Orion 076R074050

Orion 076R074050 Infrared Remote Control User Manual

Model: 076R074050

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Orion 076R074050 Infrared Remote Control. This remote is designed to operate various television models from brands including Orion, Broksonic, Emerson, Memorex, Newtech, and Sansui. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

SETUP

Battery Installation

The remote control requires two (2) AA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two (2) AA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect installation can prevent the remote from functioning.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Back of the remote control, illustrating the battery compartment location.

Always replace both batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

OPERATING INSTRUCTIONS

Point the remote control directly at the television's infrared sensor. Ensure there are no obstructions between the remote and the TV.

Button Functions



Image: Front view of the remote control, displaying all operational buttons.

- **POWER:** Turns the television on or off.
- **0-9 (Number Buttons):** Directly select channels.
- **MUTE:** Silences the television audio. Press again to restore audio.
- **VOL (+/-):** Increases or decreases the volume level.

- **CH (+/-)**: Changes the television channel up or down sequentially.
- **MENU**: Accesses the television's on-screen menu system.
- **SET (+/-)**: Used for adjusting settings within the TV menu.
- **ENTER**: Confirms selections within the TV menu.
- **RESET**: Resets certain TV settings or functions (refer to your TV manual for specifics).
- **TV**: Switches the input source to TV mode.
- **CH.1/2**: Toggles between two previously viewed channels.
- **CAPTION/TEXT**: Activates or deactivates the Closed Captioning (CCD) feature.
- **SLEEP**: Sets a timer for the TV to automatically turn off.
- **QUICK VIEW / CALL**: May recall previous channel or access specific TV functions (functionality varies by TV model).

Closed Captioning (CCD)

To enable or disable Closed Captioning, press the **CAPTION/TEXT** button. This feature displays on-screen text of the audio content, useful for hearing-impaired viewers or in noisy environments. The availability and specific settings for closed captioning may vary depending on your television model and broadcast content.

MAINTENANCE

Proper care ensures the longevity of your remote control:

- **Cleaning**: Use a soft, dry cloth to clean the remote's surface. For stubborn dirt, lightly dampen the cloth with water. Do not use harsh chemicals or abrasive cleaners.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage**: Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops**: Protect the remote from physical impact, as internal components can be damaged.

TROUBLESHOOTING

If you experience issues with your remote control, try the following solutions:

- **Remote Not Responding**: Check if the batteries are inserted correctly with the correct polarity. Replace old batteries with new AA batteries.
- **Limited Range or Intermittent Function**: Ensure there is a clear line of sight between the remote and the TV's infrared sensor. Remove any objects blocking the path. Bright light sources can sometimes interfere with infrared signals.
- **Specific Button Not Working**: If only certain buttons are unresponsive, try cleaning around the button with a cotton swab lightly dampened with rubbing alcohol. If the issue persists, the remote may require replacement.
- **Closed Captioning Not Turning Off**: Some TV models or broadcast content may have specific settings for closed captioning that override the remote's direct control. Consult your television's user manual for advanced closed captioning settings.

If the problem persists after trying these steps, consult your television's user manual for TV-specific troubleshooting or contact customer support.

SPECIFICATIONS

Model Number	076R074050
Connectivity Technology	Infrared
Controller Type	Button Control
Compatible Devices	Television
Battery Type	2 x AA (Alkaline recommended)
Item Weight	Approximately 0.01 Ounces (without batteries)
Special Feature	Ergonomic Design

COMPATIBLE TELEVISION MODELS

The Orion 076R074050 remote control is originally supplied with, and compatible with, the following television models:

- **BROKSONIC:** CTVD-5463GVC
- **EMERSON:** TC1927
- **MEMOREX:** MT-1195, MT-1196
- **NEWTECH:** TV-1303
- **ORION:** TV1318, TV1319, TV1326, TV1326A, TV1326BW, TV1326C, TV1326W, TV1926, TV1926A, TV1926AC, TV1926AW, TV1927, TV1928, TV1928A, TV2525, TV2525C
- **SANSUI:** TVM1302, TVM1302A, TVM1313, TVM1902, TVM1902A, TVM1903, TVM1913, TVM2502, TVM2502A

This list may not be exhaustive. If your model is not listed, refer to your TV's original documentation or contact the manufacturer for compatibility information.

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Orion 076R074050 remote control, please refer to the documentation provided with your television or contact the original seller or manufacturer of your television. Specific warranty terms and support channels are typically managed by the television manufacturer.