



Manuals.plus /

› HP /

› HP X3000 Wireless Mouse User Manual

HP X3000

HP X3000 Wireless Mouse User Manual

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your HP X3000 Wireless Mouse. Please read this guide thoroughly to ensure optimal performance and longevity of your device.

PACKAGE CONTENTS

Verify that all items are present in your product packaging:

- HP X3000 Wireless Mouse
- USB Wireless Receiver
- 1 AA Battery
- Quick Start Guide (this document)

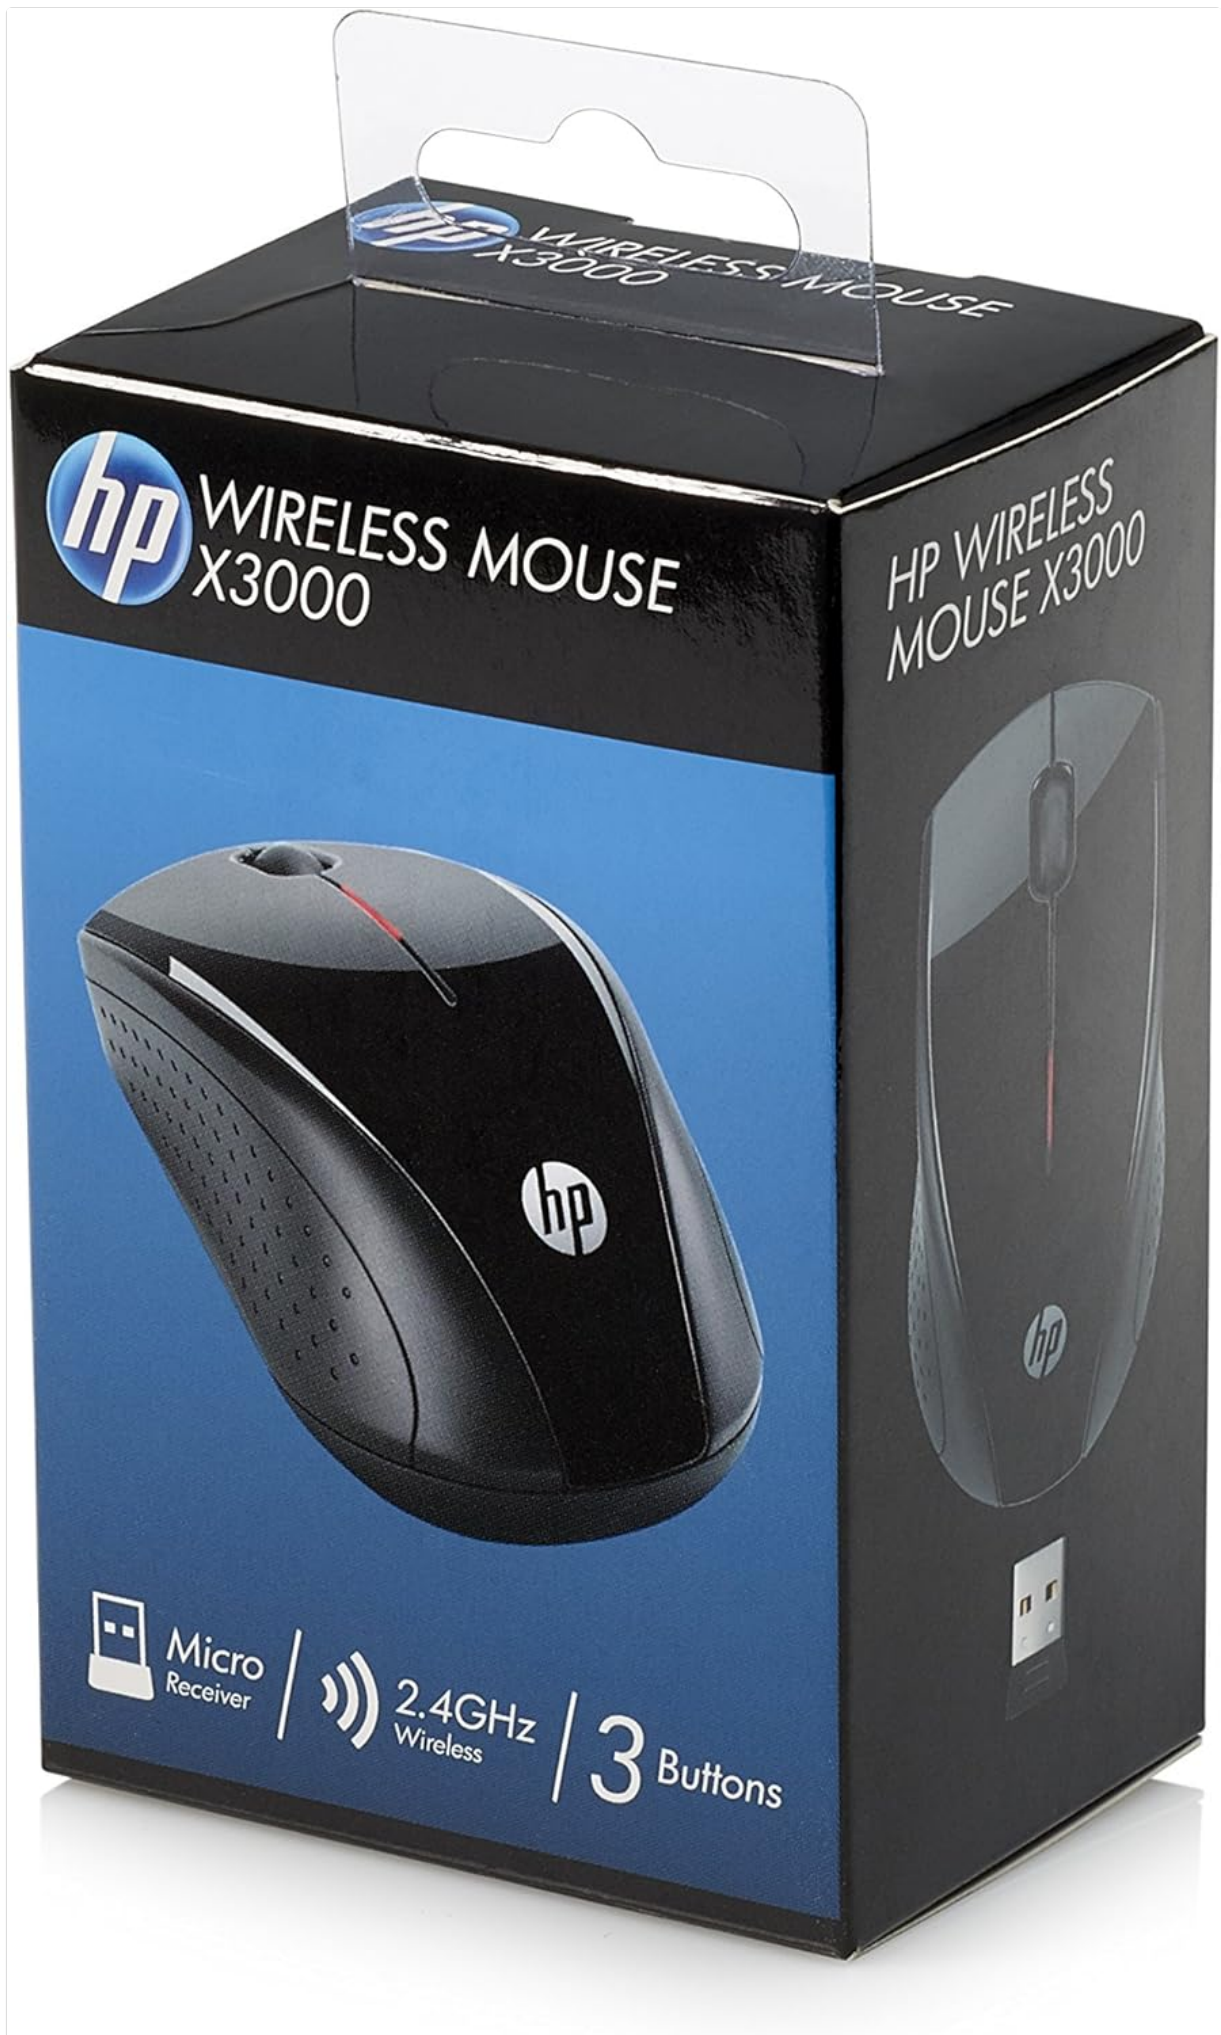


Image: HP X3000 Wireless Mouse packaging.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the underside of the mouse.
2. Slide the cover open or press the release button, depending on the model.
3. Insert the provided AA battery, ensuring correct polarity (+ and - terminals).
4. Close the battery compartment cover securely.

2. USB Wireless Receiver Connection

1. Locate an available USB port on your computer.
2. Remove the USB wireless receiver from its storage slot, usually located inside the battery compartment or near it.
3. Insert the USB wireless receiver firmly into the USB port. Your computer should automatically detect and install the necessary drivers.



Image: HP X3000 Wireless Mouse with its USB receiver.

3. Power On

If your mouse has a power switch (typically on the underside), slide it to the 'ON' position. The mouse is now ready for use.

OPERATING THE MOUSE

The HP X3000 Wireless Mouse features a standard three-button design with a scroll wheel for intuitive navigation.

- **Left Button:** Primary click function for selecting items, opening files, and interacting with software.
- **Right Button:** Secondary click function, typically used to open context menus.
- **Scroll Wheel:** Roll up or down to navigate through documents and web pages. The scroll wheel can

also be pressed as a middle button for additional functions in some applications.



Image: HP X3000 Wireless Mouse, side view.

MAINTENANCE

Cleaning

To maintain optimal performance, periodically clean your mouse:

- Ensure the mouse is powered off.
- Use a soft, lint-free cloth lightly dampened with water or a mild cleaning solution.
- Gently wipe the exterior surfaces of the mouse. Avoid excessive moisture.
- Do not spray cleaners directly onto the mouse.

Battery Replacement

When the mouse performance degrades or it stops responding, it may be time to replace the battery. Follow the battery installation steps outlined in the Setup section to replace the AA battery.

TROUBLESHOOTING

If you encounter issues with your HP X3000 Wireless Mouse, refer to the following common solutions:

Problem	Solution
Mouse not responding	<ul style="list-style-type: none">• Ensure the mouse is powered on.• Check battery level and replace if necessary.• Verify the USB receiver is securely plugged into a working USB port.• Try plugging the receiver into a different USB port.• Restart your computer.
Erratic cursor movement	<ul style="list-style-type: none">• Clean the optical sensor on the underside of the mouse.• Ensure you are using the mouse on a suitable surface (not highly reflective or transparent).• Move the mouse closer to the USB receiver to reduce interference.
Connection issues	<ul style="list-style-type: none">• Remove and reinsert the USB receiver.• If available, try pairing the mouse again (refer to your computer's operating system instructions for wireless device pairing).• Ensure no other wireless devices are causing interference.

SPECIFICATIONS

Feature	Detail
Model Number	H2C22AA#ABB
Connectivity Technology	Wireless (2.4 GHz)
Movement Detection Technology	Laser
Power Source	1 AA Battery (included)
Product Dimensions (L x W x H)	3.74 x 2.24 x 1.54 inches
Item Weight	2.11 ounces
ASIN	B00849TIPW
Date First Available	August 7, 2012

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official HP support website. You can also find more information on the HP Store on Amazon.

