

Wahl 79520-340

WAHL 79520-340 Chrome Pro Haircutting Kit Instruction Manual

Model: 79520-340

INTRODUCTION

This manual provides detailed instructions for the safe and effective use, setup, operation, and maintenance of your WAHL 79520-340 Chrome Pro 22 Piece Complete Haircutting Kit. Please read all instructions carefully before using the product.

IMPORTANT SAFETY INFORMATION

Always unplug and remove batteries before cleaning. Keep blades away from eyes and face. Do not use on infants or children without adult supervision. Keep away from water sources. Clean and oil blades regularly. Always store safely out of reach of children.

PACKAGE CONTENTS

Your WAHL Chrome Pro Haircutting Kit includes the following items:

- Corded Hair Clipper with self-sharpening precision ground blades and adjustable taper lever.
- Battery-operated Touch-Up Trimmer (requires 2 AA batteries, not included).
- 2 Blade Guards.
- Durable Storage Case.
- Barber Comb.
- Styling Comb.
- Cleaning Brush.
- Blade Oil.
- 2 Trimmer Guide Combs (1/8" & 3/16").
- 11 Clipper Guide Combs (1/16", 1/8", 1/4", 3/8", 1/2", 5/8", 3/4", 7/8", 1", left and right ear tapers).



Image: All components included in the WAHL Chrome Pro 22 Piece Haircutting Kit, neatly arranged in its storage case.

SETUP

Main Clipper Setup

1. Unpack all components from the storage case.
2. Inspect the clipper for any visible damage.
3. Ensure the blades are clean and lightly oiled before first use. Refer to the Maintenance section for oiling instructions.
4. Plug the clipper into a suitable electrical outlet.

Battery-Operated Trimmer Setup

1. Open the battery compartment on the trimmer.
2. Insert 2 AA batteries, ensuring correct polarity.
3. Close the battery compartment securely.
4. Ensure the trimmer blades are clean and lightly oiled before first use.

OPERATING INSTRUCTIONS

Attaching and Detaching Guide Combs

The kit includes various guide combs to achieve different hair lengths. The standard guide combs range from 1/16" to 1" (sizes #1/2 to #8). Specialty combs include left and right ear tapers, and an eyebrow comb.

To attach a guide comb, align the front teeth of the comb with the clipper blade, then press down on the back of the comb until it clicks securely into place. To detach, push the back of the comb off first, then roll it forward to

release.

Video: This video demonstrates the correct method for attaching and detaching Wahl clipper guide combs, ensuring a secure fit for consistent cutting results.

Haircutting with the Main Clipper

Select the desired guide comb for the hair length you wish to achieve. For best results, start with a longer comb and gradually move to shorter lengths if needed. The adjustable taper lever allows for fine-tuning cutting lengths without changing guide combs. Always cut against the direction of hair growth for an even cut. Use the barber comb to lift hair and guide the clipper.

Using the Battery-Operated Trimmer

The battery-operated trimmer is ideal for detailing, necklines, sideburns, and light beard trimming. Use the smaller guide combs provided with the trimmer for precise length control. For close trimming, use the trimmer without a guide comb, holding the blade flat against the skin.

MAINTENANCE

Cleaning the Blades

After each use, turn off and unplug the clipper (or remove batteries from the trimmer). Use the cleaning brush to remove any loose hairs from the blades. For a more thorough cleaning, you may carefully remove the blades according to the product's specific instructions (if applicable) and brush away debris.

Oiling the Blades

To ensure optimal performance and longevity, oil the blades regularly, ideally after every few haircuts or at least once a month. Apply 2-3 drops of Wahl clipper oil across the top of the blades and 1 drop on each side of the blade heel. Turn the clipper on for a few seconds to distribute the oil, then wipe off any excess with a soft cloth.

Video: This video illustrates the proper technique for oiling Wahl trimmer blades, a crucial step for maintaining blade sharpness and preventing rust.

TROUBLESHOOTING

- **Clipper/Trimmer not turning on:** Ensure the corded clipper is properly plugged in. For the battery-operated trimmer, check that batteries are correctly inserted and have sufficient charge.
- **Blades pulling hair or cutting poorly:** Blades may be dull, dirty, or improperly oiled. Clean and oil the blades as described in the Maintenance section. If the issue persists, blade replacement may be necessary.
- **Excessive vibration or noise:** Ensure the blades are securely attached and properly aligned. Oiling the blades can also reduce friction and vibration.

SPECIFICATIONS






- **Brand:** Wahl
- **Model Number:** 79520-3401
- **Power Source (Clipper):** Corded Electric
- **Power Source (Trimmer):** Battery Powered (2 AA batteries)
- **Blade Type:** Self-sharpening precision ground high carbon steel blades
- **Product Dimensions:** 2.5 x 3 x 7 inches
- **Item Weight:** 1 Pound
- **Color:** Silver

- UPC: 043917795058

WARRANTY AND SUPPORT

The WAHL 79520-340 Chrome Pro Haircutting Kit comes with a 5-year manufacturer warranty on the clipper and a 2-year manufacturer warranty on the trimmer. For warranty claims, technical support, or additional product information, please refer to the contact details provided in your product packaging or visit the official Wahl website.

Related Documents - 79520-340

	<p>Wahl Home Hair Clipper User Manual and Guide</p> <p>Comprehensive guide to using Wahl home hair clippers, including cutting techniques, maintenance, safety precautions, and guide comb usage. Learn how to achieve professional results at home.</p>
	<p>Wahl Clipper User Guide and Haircutting Instructions</p> <p>Comprehensive guide to using Wahl clippers, including safety precautions, maintenance, and step-by-step haircutting instructions for various styles. Learn how to properly oil, align, and use guide combs for professional-quality haircuts at home.</p>
	<p>Wahl Hair Clipper User Manual: Cutting, Maintenance, and Warranty Guide</p> <p>Comprehensive guide for Wahl hair clippers, covering step-by-step cutting techniques, blending, detailing, essential maintenance, blade alignment, attachment guard usage, and warranty information.</p>
	<p>Wahl Clipper User Manual: How to Use and Maintain Your Hair Clipper</p> <p>Comprehensive guide to using and maintaining your Wahl hair clipper, including safety instructions, maintenance tips, and step-by-step haircutting techniques.</p>
	<p>Wahl Lithium-Ion Vacuum Trimmer 9870L: Safety Instructions and Warnings</p> <p>Official user manual and safety instructions for the Wahl Lithium-Ion Vacuum Trimmer 9870L. Includes detailed warnings, operating procedures, charging guide, troubleshooting, and battery disposal information in multiple languages.</p>



[Wahl Electric Clipper User Manual and Safety Instructions](#)

This document provides essential safety guidelines, operating instructions, maintenance tips, and warranty information for Wahl electric clippers, designed for professional use.