

Clarity D703

Clarity Dect 6.0 Amplified Low Vision Cordless Phone D703 User Manual

Model: D703

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Clarity Dect 6.0 Amplified Low Vision Cordless Phone, Model D703. Designed for ease of use, this phone features amplified sound, large buttons, and a clear display to enhance communication for users with low vision or hearing challenges. Please read this manual thoroughly to ensure proper use and to maximize the benefits of your new phone.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Clarity D703 Cordless Handset
- Clarity D703 Base Unit
- AC Power Adapter for Base Unit
- Telephone Line Cord
- 2 AAA Rechargeable Batteries (included)
- User Manual (this document)
- Belt Clip

SETUP

Follow these steps to set up your Clarity D703 phone:

1. Battery Installation

1. Remove the battery compartment cover on the back of the handset.
2. Insert the two AAA rechargeable batteries, observing the correct polarity (+ and -).
3. Replace the battery compartment cover.

2. Connecting the Base Unit

1. Connect one end of the telephone line cord to the TEL LINE jack on the back of the base unit.
2. Connect the other end of the telephone line cord to a telephone wall jack.

3. Plug the small end of the AC power adapter into the DC IN 6V jack on the back of the base unit.
4. Plug the large end of the AC power adapter into a standard electrical outlet.

Important: Use only the supplied AC power adapter and telephone line cord. Place the base unit near a power outlet and telephone jack.

3. Charging the Handset

Place the handset on the base unit with the display facing forward. The handset will emit a tone to confirm it is properly seated and charging. Allow the handset to charge for at least 12-16 hours before initial use to ensure optimal battery performance.

4. Initial Settings

After the initial charge, the handset may prompt you to set the date and time. Follow the on-screen instructions using the navigation buttons and the MENU/SELECT button.



Image: The Clarity D703 cordless phone handset resting in its charging base. The handset features large, high-contrast buttons and a clear digital display. The base unit is compact and black.

OPERATING INSTRUCTIONS

Making and Receiving Calls

- **To Make a Call:** Press the **TALK/FLASH** button, then dial the number using the large keypad.
- **To Receive a Call:** When the phone rings, press the **TALK/FLASH** button.
- **To End a Call:** Press the **END/CLEAR** button or place the handset back on the base unit.

Volume Adjustment and Amplification

During a call, use the **UP/DOWN arrow buttons** on the handset to adjust the earpiece volume. For additional amplification, press the **BOOST** button located on the side of the handset. This feature significantly increases the incoming audio volume.

Speed Dial Programming

The D703 features ten speed dial buttons for frequently called numbers. Refer to the on-screen menu for detailed instructions on programming these numbers. Typically, this involves accessing the menu, selecting a speed dial slot, entering the number, and saving it.

Caller ID Display

When a call comes in, the Caller ID information (if available from your service provider) will be displayed on the handset screen. You can review past calls by pressing the **RD/P** (Redial/Pause) button to access the Caller ID log.

Ringer Settings

The phone offers ten distinct ringer melodies and six volume levels. Access the handset's menu to customize your preferred ringer tone and volume. The "Hear-It-Ring" feature ensures loud and clear alerts.

Using the Belt Clip

Attach the included belt clip to the back of the handset for hands-free mobility. This allows you to carry the phone conveniently while moving around your home or office.

MAINTENANCE

Proper care ensures the longevity of your Clarity D703 phone:

- **Cleaning:** Wipe the handset and base unit with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Battery Care:** For optimal battery life, always return the handset to the base unit when not in use. If the phone will be stored for an extended period, remove the batteries.
- **Environment:** Avoid exposing the phone to extreme temperatures, direct sunlight, or moisture.

TROUBLESHOOTING

If you encounter issues with your phone, try the following solutions:

| Problem | Solution |
|------------------------------|--|
| No dial tone | <ul style="list-style-type: none">• Ensure the telephone line cord is securely connected to both the base unit and the wall jack.• Verify the AC power adapter is plugged in and the base unit has power.• Test the wall jack with another phone. |
| Poor sound quality or static | <ul style="list-style-type: none">• Move the handset closer to the base unit.• Ensure the handset batteries are fully charged.• Check for other electronic devices (Wi-Fi routers, microwaves, baby monitors) that might cause interference.• Adjust the earpiece volume or activate the BOOST feature. |

| Problem | Solution |
|--------------------------|---|
| Handset not charging | <ul style="list-style-type: none">• Ensure the handset is correctly seated on the base unit.• Clean the charging contacts on both the handset and base unit with a dry cloth.• Verify the AC power adapter is connected and the outlet is functional. |
| Caller ID not displaying | <ul style="list-style-type: none">• Confirm that you have Caller ID service activated with your telephone service provider.• Ensure the phone's date and time settings are correct. |

SPECIFICATIONS

- **Model:** D703
- **Product Dimensions:** 7.8 x 4.7 x 4 inches (Handset and Base)
- **Item Weight:** 14 ounces
- **Batteries:** 2 AAA rechargeable batteries (included)
- **Power Source:** Battery Powered (Handset), AC Adapter (Base)
- **Material:** Plastic
- **Telephone Type:** Cordless Landline
- **Dialer Type:** Single Keypad



Image: A visual representation of the Clarity D703 cordless phone handset and base, showing its approximate dimensions of 8.0 inches (20 cm) in height.





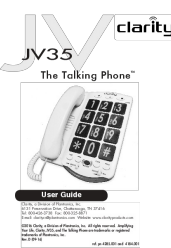

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries regarding your Clarity D703 phone, please contact Clarity customer service. Refer to the packaging or the official Clarity website for the most current contact details.

Legal Disclaimer: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Please handle with care and refer to product safety guidelines.

© 2024 Clarity. All rights reserved.

Related Documents - D703

| | |
|---|---|
|  <p>clarity CLARITY is a Division of Phonetics, Inc. 4331 Riverchase Drive • Decatur, GA 30026 800-866-2707 • Tel: 404-222-9977 Email: central@clarityproducts.com • Website: www.clarityproducts.com ©2024 Clarity. Division of Phonetics, Inc. All rights reserved. Clarity, Clarity Products, and the Clarity logo are trademarks of Phonetics, Inc. or its subsidiaries. All other trademarks are the property of their respective owners. Rev. 2-2024 Printed in China</p> | <p>Clarity XLC3.4 User Guide: Extra Loud Cordless Speakerphone</p> <p>This comprehensive user guide for the Clarity XLC3.4 extra loud cordless speakerphone details installation, setup, features like Caller ID and ClarityLogic, battery management, volume and tone adjustments, and troubleshooting. Learn to optimize its use for clear and accessible conversations. Visit clarityproducts.com for more information.</p> |
|  <p>clarity User Guide E814CC – Amplified Big Button Cordless Phone with Corded Digital Answering Machine</p> | <p>Clarity E814CC Amplified Big Button Cordless Phone User Guide</p> <p>User guide for the Clarity E814CC amplified big button cordless phone with corded digital answering machine. Learn about setup, features, and safety instructions.</p> |
|  <p>clarity SempreMini User Guide</p> | <p>Clarity SempreMini Bluetooth Headset User Guide</p> <p>Comprehensive user guide for the Clarity SempreMini Bluetooth headset, covering setup, pairing, usage, troubleshooting, and safety instructions. Learn how to connect, manage calls, and optimize your audio experience.</p> |
|  <p>clarity Chat+ User Guide</p> | <p>Clarity Chat+ Hearing Aid Quick Start Guide - Setup and Usage</p> <p>Comprehensive quick start guide for Clarity Chat+ hearing aids (model JH-DW3F). Learn how to activate, fit, charge, connect via Bluetooth, and use the app for these OTC hearing devices.</p> |
|  <p>clarity JV35 The Talking Phone™ User Guide</p> | <p>Clarity JV35 Talking Phone User Guide</p> <p>Comprehensive user guide for the Clarity JV35 Talking Phone, detailing installation, features, and operation for enhanced communication.</p> |
|  <p>CLARITY AlertMaster™ AL10™ Visual Alert System User Guide</p> | <p>AlertMaster AL10 Visual Alert System User Guide</p> <p>User guide for the Clarity AlertMaster AL10 Visual Alert System, detailing features, installation, operation, troubleshooting, and accessories for enhanced home notification and safety.</p> |