

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [TAG Heuer](#) /
- › [TAG Heuer Link Men's Watch CJ1110.BA0576 Instruction Manual](#)

TAG Heuer CJ1110.BA0576

TAG Heuer Link Men's Watch CJ1110.BA0576 Instruction Manual

Model: CJ1110.BA0576

INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of your TAG Heuer Link Men's Watch, model CJ1110.BA0576. Please read this manual carefully to ensure optimal performance and longevity of your timepiece.





Figure 1: Front view of the TAG Heuer Link Men's Watch CJ1110.BA0576.

SETUP

1. Setting the Time

1. Unscrew the crown (if applicable) and pull it out to position 2.
2. Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time.
3. Push the crown back into position 0 and screw it down firmly to ensure water resistance.

2. Setting the Date

1. Unscrew the crown (if applicable) and pull it out to position 1.
2. Rotate the crown clockwise to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this may damage the movement.
3. Once the date is set, push the crown back into position 0 and screw it down firmly.

3. Adjusting the Bracelet

The stainless steel bracelet features a deployment clasp. For proper fit, the bracelet may need to be adjusted by adding or removing links. It is recommended to have this adjustment performed by a qualified watchmaker or an authorized TAG Heuer service center to prevent

damage to the bracelet or clasp mechanism.



Figure 2: Side view showing the crown and pushers.

OPERATING THE CHRONOGRAPH

Your TAG Heuer Link watch is equipped with a chronograph function for measuring elapsed time.

1. **Start:** Press the upper pusher to start the chronograph. The central chronograph second hand will begin to move.
2. **Stop:** Press the upper pusher again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** After stopping the chronograph, press the lower pusher to reset all chronograph hands to their zero positions.
4. **Intermediate Times (Split Time):** Some chronograph models allow for intermediate time measurement. Consult a detailed TAG Heuer specific manual for advanced chronograph functions if applicable to your model.

MAINTENANCE

1. Cleaning

Regularly clean your watch with a soft, damp cloth. For stainless steel bracelets, a soft brush and mild soapy water can be used, ensuring

the crown is fully screwed down to maintain water resistance. Rinse thoroughly with fresh water and dry with a soft cloth.

2. Water Resistance

Your watch is water-resistant to 200 meters (660 feet). This rating is suitable for swimming, showering, and snorkeling. However, it is crucial to ensure the crown and pushers are fully screwed down or pushed in before any contact with water. Water resistance is not a permanent feature and may be affected by aging gaskets or accidental impacts. It is recommended to have the water resistance checked annually by an authorized service center.

3. Battery Replacement

This watch is powered by a quartz movement and requires a battery. When the battery is low, the second hand may jump every four seconds (End-of-Life indicator). Battery replacement should only be performed by an authorized TAG Heuer service center to ensure the correct battery type is used and the water resistance is maintained.

4. Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. Use the original watch box or a soft pouch for protection.



Figure 3: Case back and deployment clasp.

TROUBLESHOOTING

- **Watch not running:** Check if the crown is pushed in and screwed down. If the watch has stopped completely, the battery may need replacement. Contact an authorized service center.
- **Incorrect time/date:** Refer to the "Setting the Time" and "Setting the Date" sections. Ensure the crown is fully engaged in the correct position for adjustment.
- **Chronograph hands not resetting to zero:** This may indicate a need for calibration or service. Do not attempt to force the hands.

Contact an authorized service center.

- **Condensation under the crystal:** This indicates a loss of water resistance. Immediately take the watch to an authorized service center to prevent further damage to the movement.

SPECIFICATIONS

Model Number	CJ1110.BA0576
Brand	TAG Heuer
Movement	Quartz
Case Material	Stainless Steel
Bracelet Material	Stainless Steel
Crystal	Sapphire Crystal
Water Resistance	200 Meters (660 Feet)
Clasp Type	Deployment Clasp
Functions	Time (Hours, Minutes, Seconds), Date, Chronograph

WARRANTY AND SUPPORT

Your TAG Heuer watch is covered by a manufacturer's warranty against manufacturing defects. The duration and terms of the warranty may vary by region and purchase date. Please refer to the official warranty card provided with your watch or visit the official TAG Heuer website for detailed warranty information.

For service, repairs, or any inquiries, please contact an authorized TAG Heuer service center or your official TAG Heuer retailer. Unauthorized repairs or modifications may void your warranty and compromise the watch's performance and water resistance.

Official TAG Heuer Website: www.tagheuer.com

