



Manuals.plus /

› Playskool /

› Playskool Lullaby Gloworm Toy (Model A1203) Instruction Manual

## Playskool A1203

# Playskool Lullaby Gloworm Toy (Model A1203) Instruction Manual

Your guide to setting up, operating, and maintaining your Lullaby Gloworm Toy.

## 1. INTRODUCTION

---

The Playskool Lullaby Gloworm Toy is designed to provide comfort and soothing entertainment for infants and toddlers. This soft, cuddly toy features gentle lights and lullabies to assist in a calm transition to sleep. It offers multiple modes of operation to suit your child's needs.



Image 1.1: The Playskool Lullaby Glowworm Toy in its blue color variant. This image displays the toy's overall appearance, featuring its soft, plush body, friendly face, and the signature glowing element.

## 2. IMPORTANT SAFETY INFORMATION

- **Adult Supervision:** Always ensure adult supervision when the toy is in use, especially with infants.
- **Battery Safety:**
  - Do not mix old and new batteries.
  - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
  - Remove batteries if the toy is not used for an extended period.
  - Dispose of used batteries properly.
  - Keep batteries out of reach of children.
- **Choking Hazard:** This toy contains no small parts that pose a choking hazard under normal use.

However, regularly inspect the toy for any damage that could create small parts.

- **Cleaning:** Refer to the "Maintenance" section for proper cleaning instructions. Do not immerse the toy in water.

### 3. PACKAGE CONTENTS

Your Playskool Lullaby Gloworm Toy package should contain the following items:

- 1 x Playskool Lullaby Gloworm Toy (Blue)
- 3 x AA Batteries (pre-installed)





Image 3.1: The Playskool Lullaby Gloworm Toy presented in its original retail packaging. This view confirms the product's appearance as it would be received, including branding and basic information.

## 4. SETUP: BATTERY INSTALLATION/REPLACEMENT

The Lullaby Gloworm Toy comes with 3 AA batteries pre-installed. If replacement is needed, follow these steps:

1. Locate the battery compartment on the back of the toy. It is typically secured with a small screw.
2. Using a Phillips head screwdriver, carefully loosen and remove the screw.
3. Open the battery compartment cover.
4. Remove the old batteries and dispose of them responsibly.
5. Insert 3 new AA (1.5V) alkaline batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
6. Replace the battery compartment cover and secure it with the screw. Do not overtighten.

*Note: For optimal performance, use fresh alkaline batteries.*

## 5. OPERATING INSTRUCTIONS

The Lullaby Gloworm Toy is designed for simple operation to provide comfort to your child.

### 5.1 Activating the Toy

To activate the toy's lights and music, simply **squeeze the toy's body**. The toy is designed to respond to a gentle squeeze, making it easy for little hands to operate.



Image 5.1: A demonstration of how to activate the Lullaby Gloworm Toy by squeezing its body. The image clearly shows the toy's face illuminated, indicating successful activation.

## 5.2 Understanding the Modes

The Lullaby Gloworm Toy features three distinct modes to cater to different preferences:

- **Short Play Mode:** Provides a brief sequence of lights and lullabies.
- **Long Play Mode:** Offers an extended duration of lights and lullabies, typically lasting up to 10 minutes. This mode is ideal for helping a child fall asleep.
- **Glow Only Mode:** Activates only the gentle glowing light without music. This can be useful for a soft nightlight effect.

To switch between modes, locate the mode selector switch, usually found near the battery compartment. Adjust the switch to your desired setting before activating the toy.

## 6. CARE AND MAINTENANCE

Proper care will ensure the longevity of your Lullaby Gloworm Toy.

- **Cleaning:** Surface wash only. Use a damp cloth with mild soap to gently clean the surface of the toy. Do not submerge the toy in water, as this can damage the electronic components. Allow to air dry

completely before use.

- **Storage:** Store the toy in a clean, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.
- **Inspection:** Regularly inspect the toy for any signs of wear, tear, or damage. Discontinue use if any damage is found and contact customer support.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toy does not turn on or lights/music are intermittent.	Low or depleted batteries; incorrectly installed batteries.	Replace with fresh AA alkaline batteries, ensuring correct polarity. Refer to Section 4: Setup.
Music is distorted or sounds garbled.	Low battery power.	Replace with fresh AA alkaline batteries.
Light is dim.	Low battery power.	Replace with fresh AA alkaline batteries.
Toy does not respond to squeeze.	Mode selector switch is off or toy is damaged.	Check the mode selector switch. If the issue persists after checking batteries, contact customer support.

## 8. SPECIFICATIONS

- **Model Number:** A1203
- **Product Dimensions:** 3.19 x 5.98 x 10.98 inches
- **Item Weight:** 8 ounces
- **Batteries:** 3 x AA (1.5V) Alkaline batteries (included)
- **Recommended Age:** 6 months and up
- **Manufacturer:** Hasbro

## 9. WARRANTY AND CUSTOMER SUPPORT

For information regarding warranty coverage, product support, or to report any issues with your Playskool Lullaby Glowworm Toy, please contact Hasbro customer service. Contact details can typically be found on the product packaging or on the official Playskool/Hasbro website.

You can visit the official Playskool store for more information: [Playskool Store on Amazon](#)