

[Manuals.plus](#) /

> [Sauder](#) /

> Sauder Carson Forge Entertainment Credenza Model 412922 Instruction Manual

## Sauder 412922

# Sauder Carson Forge Entertainment Credenza Model 412922 Instruction Manual

Brand: Sauder | Model: 412922

[Introduction](#)   [Safety Information](#)   [Parts List](#)   [Assembly Instructions](#)   [Operating Instructions](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Sauder Carson Forge Entertainment Credenza, Model 412922. Designed to accommodate TVs up to 60 inches, this credenza features a Washington Cherry finish, a Digital Dock for electronics, adjustable shelving, and a storage drawer. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



## 2. SAFETY INFORMATION

---

- Always follow assembly instructions carefully.
- Ensure all fasteners are securely tightened before use.
- Do not overload shelves or drawers. Refer to specifications for weight limits.
- Place the credenza on a level surface to prevent tipping.
- Use caution when moving the assembled unit. It is recommended to have two or more people for moving.
- Keep small parts away from children during assembly.
- This unit is designed for indoor use only.

## 3. PARTS LIST

---

Before beginning assembly, verify that all parts and hardware are present. Refer to the included components list in your packaging. If any parts are missing or damaged, contact Sauder customer support.

**Included Components:** Assembly instructions, Hardware, Materials.

## 4. ASSEMBLY INSTRUCTIONS

---

Follow these steps to assemble your Sauder Carson Forge Entertainment Credenza. It is recommended to assemble the unit in the room where it will be used.

### 4.1. Identifying Drawer Glides

Proper identification of drawer glides is crucial for correct drawer assembly and function. The glides consist of universal cabinet rails and drawer glides (marked "Drawer Right" and "Drawer Left").

Your browser does not support the video tag.

Video 4.1.1: Instructions on how to identify the different types of drawer rails and glides for assembly.

Ensure you separate the universal cabinet rails from the drawer glides. The universal cabinet rails are used for the main cabinet structure, while the drawer glides (marked "Drawer Right" and "Drawer Left") are attached to the drawer box itself. Pay close attention to the orientation of the flanges and rollers as shown in the video.

### 4.2. Cam and Dowel Fastening System

Your furniture utilizes a cam and dowel fastening system for secure connections. This system may include hidden cams with cam dowels or cam screws, or both.

Your browser does not support the video tag.

Video 4.2.1: Detailed guide on assembling components using the cam and dowel fastening system.

When inserting hidden cams, ensure the arrow on the cam points towards the edge of the board. If using cam dowels, insert the metal end into the hidden cam. For cam screws, screw them into the designated hole until the shoulder rests on the board. Always tighten hidden cams by turning them 210 degrees with a screwdriver to ensure a secure connection and prevent parts from separating.

### 4.3. General Assembly Tips

- Lay out all components on a soft, clean surface to prevent scratches.
- Use the provided hardware and tools. Do not substitute.

- Do not overtighten screws unless specified, as this can damage the wood.
- Periodically check and re-tighten all fasteners to ensure stability.



Image 4.3.1: Dimensions of the credenza and its internal compartments.

## 5. OPERATING INSTRUCTIONS

---

Your Sauder Carson Forge Entertainment Credenza is designed for versatile use. Here's how to utilize its features:

### 5.1. Digital Dock

The credenza features a flip-up panel that reveals a Digital Dock. This area is designed for parking, recharging, and syncing mobile electronics and game controllers. Lift the panel gently to access the compartment.

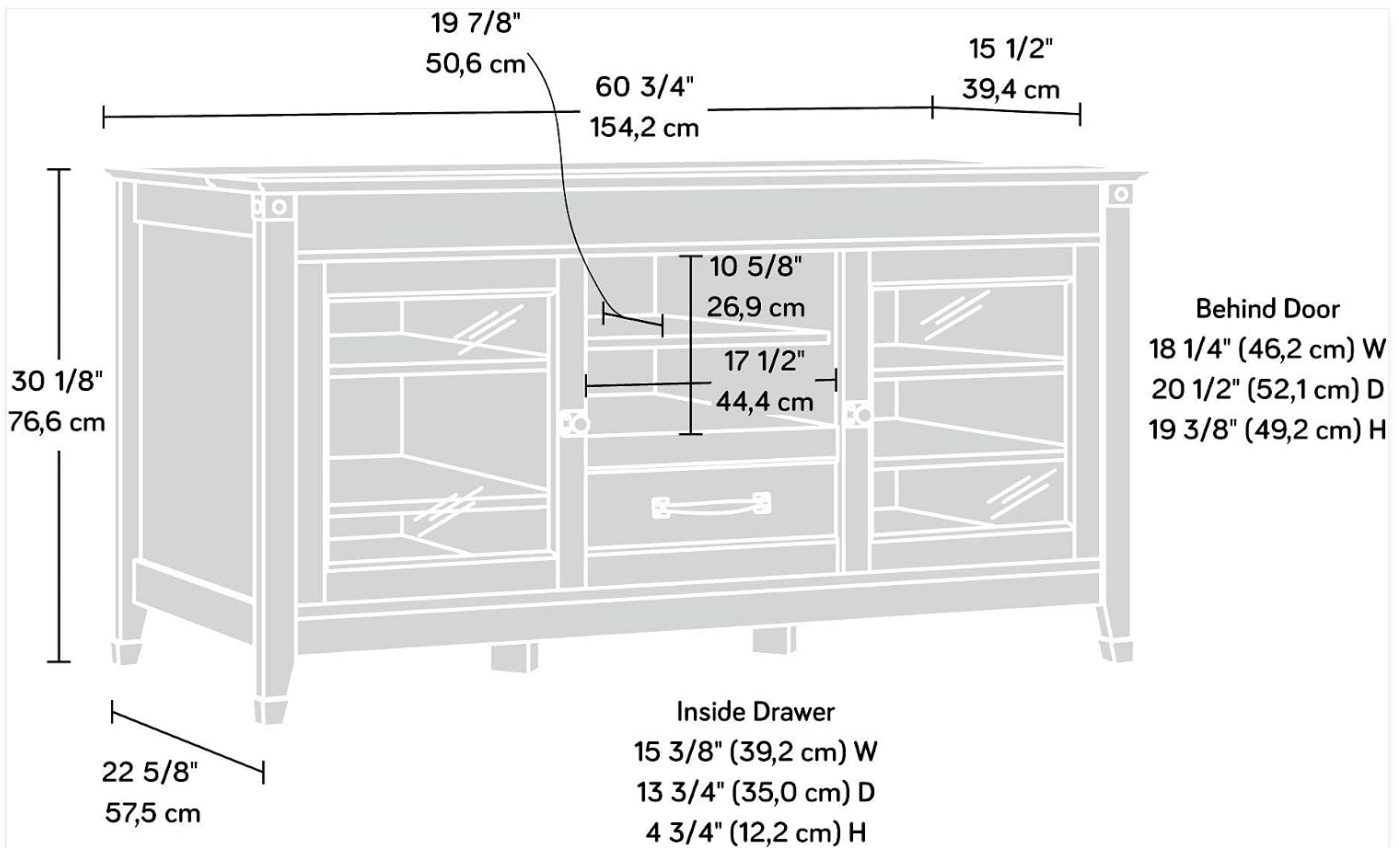


Image 5.1.1: Digital Dock with flip-up panel open, showing space for devices and cable access.

## 5.2. Adjustable Shelves

The center compartment and the areas behind the framed, safety-tempered glass doors feature adjustable shelves. These are ideal for holding audio/video equipment, books, knick-knacks, or decorative plants. To adjust a shelf, remove any items, lift the shelf, and reposition the shelf pins to the desired height.

## 5.3. Storage Drawer

A storage drawer is located below the center adjustable shelf. This drawer opens and closes on smooth metal runners, providing convenient storage for movies, games, or other accessories.



Image 5.3.1: Detail of the storage drawer and its handle.

## 5.4. Cable Management

The enclosed back panel includes cord access cutouts to help keep wires neat and organized, preventing tangles and improving aesthetics.

## 6. MAINTENANCE

---

To maintain the appearance and longevity of your credenza, follow these simple care instructions:

- **Cleaning:** Wipe surfaces with a damp cloth. Avoid harsh chemicals or abrasive cleaners, as these can damage the Washington Cherry finish.
- **Dusting:** Regularly dust with a soft, dry cloth.
- **Spills:** Blot spills immediately with a clean, dry cloth.
- **Hardware:** Periodically check all screws and fasteners to ensure they are tight. Re-tighten as necessary.

- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your credenza, refer to the following common solutions:

- **Wobbly Unit:** Ensure the credenza is on a level surface. Check and tighten all cam and dowel fasteners and screws.
- **Drawer Not Sliding Smoothly:** Verify that the drawer glides are correctly installed and free of obstructions. Ensure the drawer is not overloaded.
- **Doors Not Aligning:** Check the hinge adjustments. Minor adjustments can often correct door alignment issues.
- **Missing Parts:** If parts are missing during initial assembly, do not proceed. Contact Sauder customer support for replacements.

## 8. SPECIFICATIONS

---

<b>Product Dimensions</b>	60.71 x 22.64 x 30.16 inches (W x D x H)
<b>Item Weight</b>	167 pounds
<b>Manufacturer</b>	Sauder Woodworking Co
<b>Model Number</b>	412922
<b>Finish Type</b>	Washington Cherry Finish
<b>Assembly Required</b>	Yes
<b>Number of Shelves</b>	8 (including fixed and adjustable)
<b>TV Accommodation</b>	Up to 60" TV weighing 95 lbs. or less

## 9. WARRANTY & SUPPORT

---

This product comes with a **5-year parts warranty**. For warranty claims, missing parts, or any other support needs, please contact Sauder customer service directly. Refer to the contact information provided in your product packaging or visit the official Sauder website.

