



Manuals.plus /

› Bell+Howell /

› Bell+Howell Upgraded 2025 Ultrasonic Pest Repeller Indoor 4 Pk Instruction Manual

Bell+Howell EM-001677

Bell+Howell Ultrasonic Pest Repeller Instruction Manual

Model: EM-001677

1. INTRODUCTION AND OVERVIEW

The Bell+Howell Ultrasonic Pest Repeller is designed to help you maintain a pest-free environment in your home or office. This innovative device utilizes advanced ultrasonic technology to emit high-frequency sound waves that are irritating to pests but are inaudible to humans and most household pets. It offers a safe, chemical-free, and odor-free solution to deter unwanted visitors such as mice, rats, spiders, ants, and roaches.



Figure 1: Bell+Howell Ultrasonic Pest Repeller units in a 4-pack.

Unlike traditional pest control methods that rely on harmful chemicals or messy traps, the Bell+Howell Pest Repeller provides a clean and convenient alternative. Simply plug it into a standard electrical outlet, and it begins working immediately to create an uncomfortable environment for pests, encouraging them to leave your premises.

2. SETUP INSTRUCTIONS

Setting up your Bell+Howell Ultrasonic Pest Repeller is quick and easy. No complicated wiring or batteries are required.

1. **Unpack the Device:** Carefully remove the pest repeller unit from its packaging.
2. **Choose a Location:** Select an indoor area where pest activity is observed or where you wish to prevent pests. Ensure the chosen electrical outlet is clear of obstructions.
3. **Plug In:** Insert the pest repeller directly into a standard two-prong US electrical outlet. The unit should be plugged into an outlet that is not obstructed by furniture, curtains, or other soft objects, as these can absorb the ultrasonic waves.
4. **Verify Operation:** Once plugged in, a red LED indicator light on the front of the unit will illuminate and blink, confirming that the device is powered on and emitting ultrasonic waves.

PLUG IN PEST REPELLER



Figure 2: The Bell+Howell Pest Repeller is designed for easy plug-in installation.

For optimal performance, it is recommended to use one unit per room, as ultrasonic waves do not penetrate walls. For larger rooms or areas with significant pest issues, multiple units may be necessary to ensure complete coverage.

Video 1: Official guide on how to use the Bell+Howell Pest Repeller.

3. OPERATING INSTRUCTIONS

The Bell+Howell Ultrasonic Pest Repeller operates continuously once plugged in, providing 24/7 protection against pests. The device emits a mix of highly effective ultrasonic frequencies that are specifically tuned to be irritating to rodents and insects.

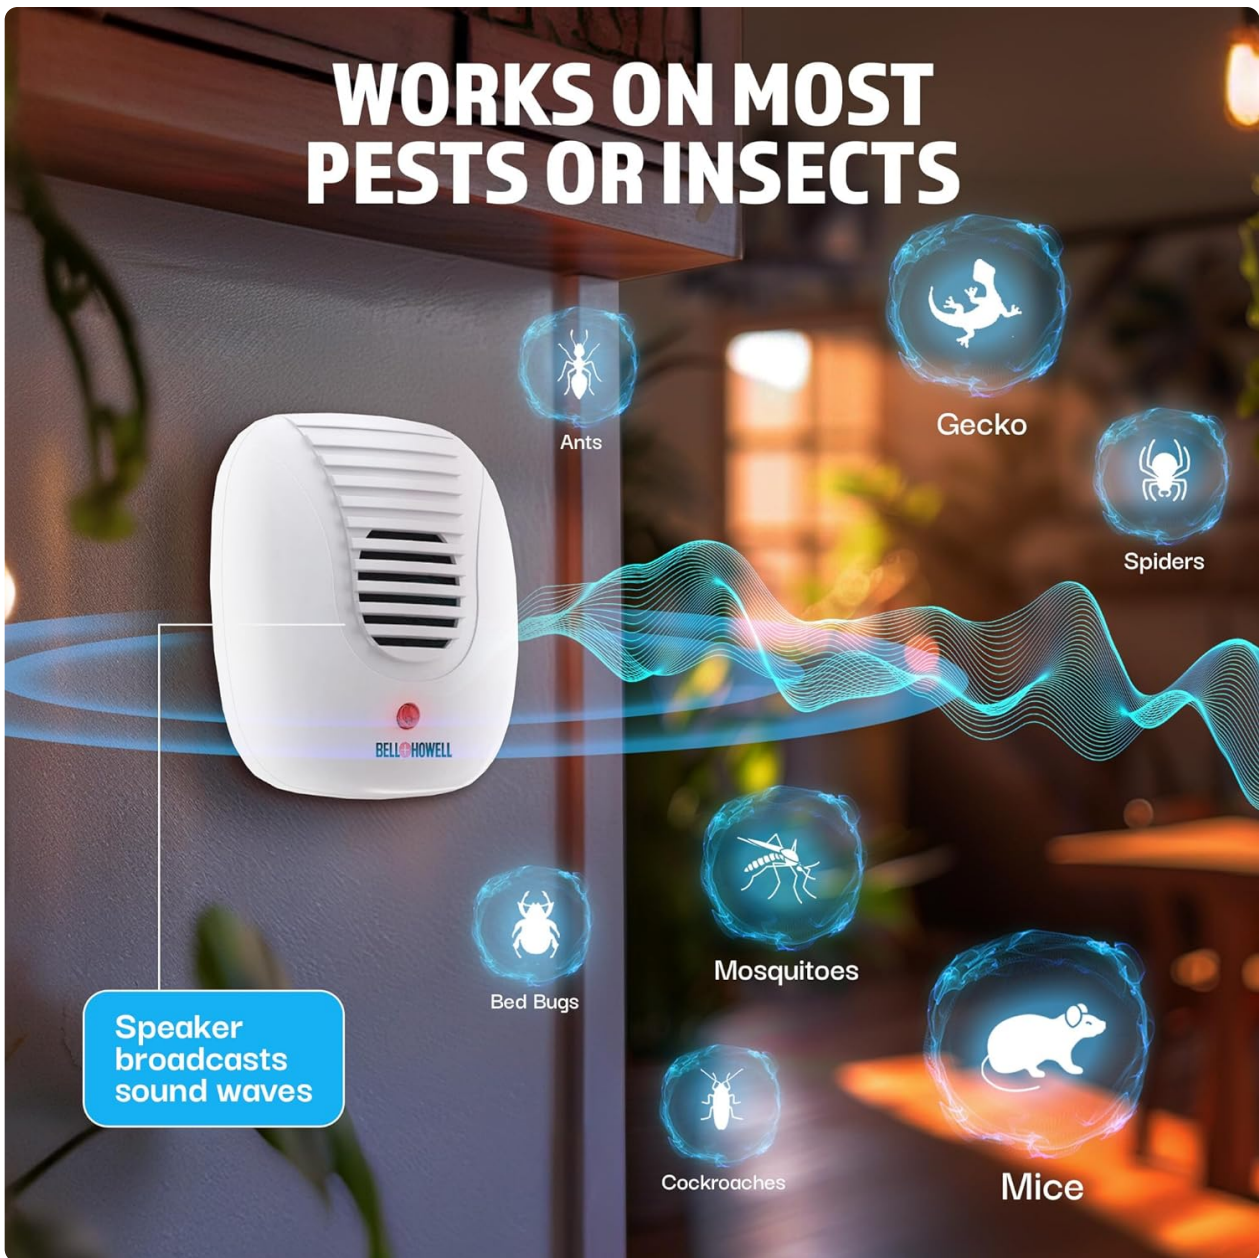


Figure 3: The repeller targets a variety of common household pests including ants, mice, rats, spiders, and roaches.

These sound waves create an uncomfortable environment for pests, disrupting their communication and navigation, which ultimately drives them away from the protected area. The intelligent variable technology ensures that the frequency of the waves constantly changes, preventing pests from becoming accustomed to the sounds.

COMPLETE ROOM COVERAGE

Each Pest Repeller is Designed for One Room
For Optimal Performance, Use One Per Room



Figure 4: For complete room coverage, place one unit in each room as ultrasonic waves do not pass through walls.

The device is silent to human ears and does not produce any odors, making it ideal for use in living areas, bedrooms, kitchens, and bathrooms. It is safe for use around humans, children, and non-rodent pets such as dogs and cats.

Video 2: An official video demonstrating the Bell+Howell Pest Repeller in action.

4. MAINTENANCE

The Bell+Howell Ultrasonic Pest Repeller requires minimal maintenance. It is designed for continuous operation without the need for refills, chemicals, or regular upkeep. Simply ensure the unit remains plugged into a functioning electrical outlet.

Keep the area around the device clear of large furniture, curtains, or other soft objects that could absorb the ultrasonic waves and reduce its effectiveness. Periodically wipe the unit with a dry cloth to remove any dust buildup.

5. TROUBLESHOOTING

- **Pests still present after initial setup:** It may take 2-4 weeks for the pest repeller to achieve full

effectiveness. Pests may initially increase activity as they are driven out of their hiding places. Continued use is essential.

- **Reduced effectiveness:** Ultrasonic signals can be absorbed by soft objects like carpets, curtains, and furniture, and reflected by hard surfaces. Ensure the unit is not obstructed and that there are no large objects directly in front of it. Signals cannot penetrate walls, floors, or within cracks, so ensure adequate coverage for all areas.
- **Pests returning:** In some cases, certain rodents may become accustomed to signals over time. They may return to their feeding or nesting areas even in the presence of a pest repeller aid. Consider repositioning the unit or adding additional units to increase coverage and signal intensity.
- **No LED light:** Check if the unit is properly plugged into a working electrical outlet. If the outlet is functional and the light still does not illuminate, the unit may be faulty.

6. SPECIFICATIONS

Feature	Detail
Brand	Bell+Howell
Model Number	EM-001677
Color	White
Material	Plastic
Product Dimensions	4"L x 4"W x 4"H
Item Weight	0.55 Pounds (8.8 ounces)
Number of Pieces	4 (in pack)
Is Electric	No (refers to non-battery operated, plugs into outlet)
Target Species	Cockroach, Mouse, Rat, Ant, Spider
Unit Count	4.0 Count
UPC	852374001325

7. WARRANTY AND SUPPORT

For information regarding product warranty or to obtain technical support, please refer to the contact information provided on the product packaging or visit the official Bell+Howell website. Keep your purchase receipt as proof of purchase for any warranty claims.