

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Synergy](#) /

› [Synergy Cordless Phone Battery 173269-3-1/2AA-B User Manual](#)

Synergy 173269-3-1/2AA-B

Synergy Cordless Phone Battery 173269-3-1/2AA-B User Manual

Model: 173269-3-1/2AA-B

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Synergy 173269-3-1/2AA-B cordless phone battery. This Ni-CD battery is designed for compatibility with various cordless phone models, including Sanyo 3N-270AA(mtm) and Sony BP-T16. Please read this manual thoroughly before installation and use.

SETUP AND INSTALLATION

Follow these steps to properly install the battery into your cordless phone:

- 1. Identify Battery Compartment:** Locate the battery compartment on your cordless phone handset. This is typically on the back or bottom of the handset.
- 2. Remove Old Battery (if applicable):** If replacing an existing battery, carefully disconnect it from the phone's connector and remove it. Observe the polarity (+/-) for correct orientation.
- 3. Connect New Battery:** Connect the Synergy 173269-3-1/2AA-B battery's connector to the corresponding port inside the phone's battery compartment. Ensure a secure connection.
- 4. Insert Battery:** Place the battery into the compartment, ensuring it fits snugly. Do not force the battery if it does not fit. Verify compatibility with your phone model.
- 5. Close Compartment:** Replace the battery compartment cover.
- 6. Initial Charge:** Place the handset on its charging base for at least 12-16 hours for the initial charge, even if the phone indicates a full charge sooner. This conditions the battery for optimal performance.



Image: Synergy 173269-3-1/2AA-B cordless phone battery. This image shows the battery itself, which is a rectangular pack with a connector, ready for installation into a compatible cordless phone handset.

OPERATING INSTRUCTIONS

Once installed and initially charged, the battery operates as a standard power source for your cordless phone. No special operating procedures are required beyond normal phone usage.

- **Regular Charging:** Always return the handset to its charging base when not in use to ensure the battery remains charged.
- **Battery Indicator:** Monitor your phone's battery level indicator. Recharge the battery when the indicator shows low power.
- **Discharge Cycle:** For Ni-CD batteries, it is beneficial to occasionally allow the battery to fully discharge before recharging to help maintain its capacity. This is typically recommended once every few months.

MAINTENANCE AND CARE

Proper maintenance extends the life of your battery:

- **Temperature:** Store and operate the battery within normal room temperature ranges. Avoid extreme heat or cold, which can degrade battery performance and lifespan.
- **Cleaning:** Keep the battery contacts and phone charging contacts clean and free of dust or debris. Use a dry, soft cloth for cleaning.
- **Disposal:** Do not dispose of batteries in household waste. Ni-CD batteries contain materials that require special recycling. Consult your local regulations for proper battery recycling facilities.
- **Avoid Short Circuits:** Do not short-circuit the battery terminals.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Phone does not power on after battery installation.	Battery not properly connected or not charged.	Ensure battery connector is securely plugged in. Place handset on charging base for initial charge (12-16 hours).
Short talk time or rapid battery drain.	Battery not fully charged or reaching end of lifespan.	Ensure handset is consistently placed on the charging base. Perform a full discharge/recharge cycle. If problem persists, battery may need replacement.
Battery does not fit into compartment.	Incorrect battery model for your phone.	Verify the battery model number (173269-3-1/2AA-B) against your phone's requirements. Do not force the battery.

SPECIFICATIONS

- **Model:** Synergy 173269-3-1/2AA-B
- **Battery Cell Composition:** Ni-CD (Nickel-Cadmium)
- **Voltage:** 3.6V
- **Capacity:** 400 mAh (Milliamp Hours)
- **Dimensions:** 6 x 6 x 6 inches (Product packaging dimensions, actual battery dimensions may vary slightly)
- **Item Weight:** 1.6 ounces
- **Compatibility:** Sanyo 3N-270AA(mtm), Sony BP-T16, and other compatible models.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the original purchase documentation or contact Synergy Digital customer service. Keep your purchase receipt for warranty claims.

Note: This product is from a small business brand. Support small businesses.

