

[Manuals.plus](#) /

› [Vestal](#) /

› Vestal ZR-3 Minimalist Chronograph Watch User Manual (Model ZR3019)

Vestal ZR3019

Vestal ZR-3 Minimalist Chronograph Watch User Manual

Model: ZR3019

1. INTRODUCTION

This manual provides essential information for the proper use and care of your Vestal ZR-3 Minimalist Chronograph Watch, Model ZR3019. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.

The Vestal ZR-3 Minimalist Chronograph Watch features a 6-hand premium chronograph movement, housed within a durable 52mm wide 316L surgical grade stainless steel case. It is equipped with a 24mm wide 3-link 316L surgical grade stainless steel band and is water resistant up to 100 meters (330 feet).



Figure 1.1: Front view of the Vestal ZR-3 Minimalist Chronograph Watch. This image displays the watch face, hands, and chronograph subdials.

2. SETUP

2.1 Setting the Time

1. Pull the crown (located on the right side of the watch case) out to position 2.
2. Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time.
3. Once the time is set, push the crown back into position 1 (normal operating position).

2.2 Adjusting the Band

The stainless steel band can be adjusted for a comfortable fit. This typically involves removing or adding links. It is recommended to have this adjustment performed by a qualified jeweler or watch technician to prevent damage to the band or clasp mechanism.



Figure 2.1: Rear view of the Vestal ZR-3 Watch, showing the case back and deployment clasp. The clasp mechanism allows for secure wearing and removal.

2.3 Battery Information

The watch is powered by one product-specific battery, which is included and pre-installed. When the battery requires replacement, it is advisable to seek professional service to ensure proper sealing and maintain water resistance.

3. OPERATING THE CHRONOGRAPH

The Vestal ZR-3 features a 6-hand chronograph for measuring elapsed time. The chronograph functions are controlled by the two pushers located on either side of the crown.

3.1 Starting and Stopping the Chronograph

1. Press the upper pusher (A) to start the chronograph. The chronograph second hand will begin to move.
2. Press the upper pusher (A) again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.

3.2 Resetting the Chronograph

1. Ensure the chronograph is stopped (if it is running, press the upper pusher (A) once).
2. Press the lower pusher (B) to reset the chronograph. All chronograph hands will return to their zero positions.

3.3 Water Resistance

This watch is water resistant to 100 meters (330 feet). This makes it suitable for snorkeling and swimming. **It is not suitable for diving.** Ensure the crown is fully pushed in before exposing the watch to water. Do not operate the pushers or crown while the watch is wet or submerged.

4. MAINTENANCE

4.1 Cleaning

To maintain the appearance of your watch, wipe the case and band with a soft, dry cloth regularly. For stainless steel components, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials.

4.2 Battery Replacement

When the watch stops running, the battery may need replacement. It is strongly recommended to have the battery replaced by an authorized service center or a professional watchmaker. This ensures the correct battery type is used and the watch's water resistance is maintained through proper re-sealing.

4.3 General Care

- Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes.
- Protect the watch from strong impacts or shocks.
- Keep the watch away from strong magnetic fields, which can affect timekeeping accuracy.

5. TROUBLESHOOTING

5.1 Watch Not Running

- **Check the crown:** Ensure the crown is fully pushed in to position 1. If it is pulled out, the watch will not run.
- **Battery:** The battery may be depleted. Refer to Section 4.2 for battery replacement.

5.2 Chronograph Hands Not Resetting to Zero

If the chronograph hands do not return to their zero positions after pressing the lower pusher (B), a recalibration may be necessary. This procedure varies by movement; consult a professional watch technician for assistance.

5.3 Water Inside the Watch

If you notice condensation or water inside the watch, immediately stop using it and take it to an authorized service center. Water ingress can cause significant damage to the movement.

6. SPECIFICATIONS

Model Number	ZR3019
Movement Type	Japanese Quartz, 6-hand chronograph
Display Type	Analog
Case Material	316L Surgical Grade Stainless Steel
Case Diameter	52 Millimetres
Case Thickness	15 Millimetres

Crystal Material	Mineral
Band Material	316L Surgical Grade Stainless Steel
Band Width	24 Millimetres
Clasp Type	Push Button Deployment Clasp
Water Resistance Depth	100 Meters (330 Feet)
Battery	1 Product Specific battery (included)
Item Weight	404 g (0.89 Pounds)
Product Dimensions	17.78 x 10.16 x 10.16 cm
UPC	844271012177



Figure 6.1: Watch size comparison chart, illustrating various case diameters. The ZR-3 model has a 52mm case diameter.

7. WARRANTY INFORMATION

The warranty for your Vestal ZR-3 Minimalist Chronograph Watch is provided by the seller of record. For specific details regarding warranty coverage, duration, and claims, please refer to the documentation provided at the time of purchase or contact the seller directly.

8. SUPPORT

For technical assistance, service, or inquiries not covered in this manual, please contact the retailer where the watch was purchased or visit the official Vestal website for support resources.



Figure 8.1: The Vestal watch packaging box. Retain original packaging and purchase receipts for warranty and support purposes.