

KRUPS 708o-70

KRUPS Mini Pro 708 Small Food Processor User Manual

Model: 708o-70

INTRODUCTION

Thank you for choosing the KRUPS Mini Pro 708 Small Food Processor. This compact yet powerful appliance is designed to simplify your food preparation tasks, offering efficient chopping and processing for various ingredients. Please read this manual carefully before first use to ensure safe and optimal operation of your new appliance.

SETUP AND ASSEMBLY

1. Unpacking and Initial Cleaning

Carefully remove all components from the packaging. Before first use, wash the processing bowl, lid, and blade in warm, soapy water. Rinse thoroughly and dry all parts completely. The motor base should only be wiped with a damp cloth.



Image: The KRUPS Mini Pro 708 Small Food Processor, fully assembled, showing its compact design.

2. Component Identification

- **Motor Base:** Contains the motor and control button.
- **Processing Bowl:** Transparent bowl where food is processed.
- **S-Blade:** Stainless steel blade for chopping and mincing.
- **Lid:** Transparent lid with a safety locking mechanism.



Image: The motor base of the food processor, showing the power unit.



Image: The transparent processing bowl, ready for blade insertion.



Image: The stainless steel S-blade, designed for efficient chopping.

3. Assembly Steps

1. Place the motor base on a stable, flat surface.
2. Carefully place the S-blade onto the central spindle inside the processing bowl. Ensure it sits securely.
3. Place the processing bowl onto the motor base, aligning the tabs on the bowl with the slots on the base. Twist gently to lock it into place.
4. Place the lid onto the processing bowl, ensuring the safety tab on the lid aligns with the slot on the motor base. Twist the lid clockwise until it clicks into a locked position. The appliance will not operate unless the lid is correctly locked.
5. Plug the power cord into a standard electrical outlet.

OPERATING INSTRUCTIONS

1. Safety Precautions

- Always ensure the appliance is unplugged before assembling, disassembling, or cleaning.
- The blades are very sharp. Handle with extreme care.
- Never operate the appliance without the lid securely locked in place.
- Do not overfill the processing bowl. Refer to the maximum fill line if present, or ensure there is enough space for food to circulate.
- Do not immerse the motor base in water or any other liquid.
- Keep hands and utensils out of the bowl during operation.



Image: Top view of the processor lid, showing safety warnings and instructions for secure locking before operation.

2. Food Preparation

- Cut large pieces of food into smaller, uniform chunks (approximately 1-inch pieces) to ensure even processing.
- Remove any hard pits, bones, or tough skins from ingredients.
- For best results, process similar textures of food together.

3. Processing Steps

1. With the appliance assembled and plugged in, place the prepared food into the processing bowl.
2. Ensure the lid is securely locked.

3. Press and hold the green power button located on the side of the motor base to activate the blades.
4. Process food in short pulses for coarse chopping, or hold the button down for continuous processing until desired consistency is reached.
5. Do not operate continuously for more than 30 seconds to prevent motor overheating. Allow a short break between cycles.
6. Once processing is complete, release the button and wait for the blades to come to a complete stop.
7. Unplug the appliance from the power outlet.
8. Twist the lid counter-clockwise to unlock and remove it.
9. Carefully remove the S-blade before emptying the processed food from the bowl.

CARE AND MAINTENANCE

1. Cleaning

Regular cleaning will prolong the life of your KRUPS Mini Pro 708. Always unplug the appliance before cleaning.

- **Processing Bowl, Lid, and Blade:** These parts are **hand wash only**. Wash immediately after use in warm, soapy water to prevent food from drying on. Use a brush for hard-to-reach areas and exercise extreme caution when handling the sharp blade. Rinse thoroughly and dry completely before storing.
- **Motor Base:** Wipe the motor base with a soft, damp cloth. Never immerse the motor base in water or place it under running water.
- Do not use abrasive cleaners or scouring pads, as they may scratch the surfaces.



Image: The S-blade, which requires careful hand washing due to its sharp edges.



Image: The processing bowl, which should be hand washed after each use.

2. Storage

Store the assembled food processor or its components in a clean, dry place, away from direct sunlight and heat sources. Ensure the blade is safely stored within the bowl or in a protective cover to prevent accidental injury.

TROUBLESHOOTING

If you encounter issues with your KRUPS Mini Pro 708, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Lid not securely locked; Bowl not correctly assembled.	Ensure power cord is firmly plugged into a working outlet. Check that the lid is twisted and locked into place. Verify the processing bowl is correctly seated and locked onto the motor base.
Food is not processing evenly.	Bowl is overfilled; Ingredients are too large or unevenly cut.	Reduce the amount of food in the bowl. Cut ingredients into smaller, more uniform pieces. Use pulse action for better control.
Motor sounds strained or stops.	Overloaded; Hard ingredients; Overheating.	Do not overload the bowl. Avoid processing extremely hard ingredients. If the motor stops, unplug the unit and let it cool down for at least 15-20 minutes before attempting to use it again.

If the problem persists after trying these solutions, please contact KRUPS customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	KRUPS
Model Name	708
Item Model Number	7080-70
Color	White
Blade Material	Stainless Steel
Included Components	Lid, S Blade
Product Care Instructions	Hand Wash
Item Weight	2.15 pounds
Package Dimensions	8.5 x 5.4 x 5.2 inches
UPC	010942105336
Date First Available	December 9, 2012

WARRANTY AND SUPPORT

For detailed information regarding the product warranty, please refer to the warranty card included with your purchase or visit the official KRUPS website. For customer support, service, or replacement parts, please contact KRUPS directly through their official channels.

You can find more information and contact details on the [KRUPS Store on Amazon](#).

