

- › [Best Choice Products](#) /
- › [Best Choice Products French Easel 32-Piece Beginner's Kit Instruction Manual](#)

Best Choice Products Artist's Easels-1346

Best Choice Products French Easel 32-Piece Beginner's Kit Instruction Manual

Model: Artist's Easels-1346
Brand: Best Choice Products

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your Best Choice Products French Easel 32-Piece Beginner's Kit. This portable wooden easel is designed for artists, offering adjustable features and integrated storage for art supplies. Please read through these instructions carefully before initial use to ensure proper setup and longevity of your product.



Figure 1: Best Choice Products French Easel with included 32-piece beginner's art kit.

INCLUDED COMPONENTS

The 32-piece beginner's kit includes the following items:

- French Box Easel (Portable Wooden Folding Adjustable Sketch Box Artist Tripod)
- 6 x Brushes
- 3 x Canvas Panels (16"x20")
- 12 x Acrylic Paints (12ML)
- 1 x Wood Palette
- 1 x Plastic Palette
- 8 x Canvas Panel Wedges
- 1 x Carrying Strap

BEGINNERS KIT

This set comes complete with all the staple tools for an aspiring painter



16"x20"
Canvas Panel (x3)



Canvas Panel
Wedges (x8)



Carrying Strap



Nylon Brush Set (x6)



Plastic Palette



Wood Palette



12ML Acrylic
Paints (x12)



Pine Box Easel

Figure 2: Contents of the 32-piece beginner's art kit.

SETUP

Follow these steps to set up your French Easel:

1. **Unfolding the Easel:** Carefully unlatch the clasps on the easel box. Gently unfold the legs outwards until they are fully extended.
2. **Adjusting Leg Height:** Each leg features adjustable sections. Loosen the wing nuts on each leg section, extend the leg to your desired height (between 48 to 69 inches), and then securely tighten the wing nuts to lock the legs in place. Ensure all three legs are adjusted evenly for stability.
3. **Setting the Canvas Holder:** The canvas holder can be adjusted for height and angle. Loosen the knobs on the vertical support to slide the canvas holder up or down. Securely tighten the knobs once the desired height is achieved. The top canvas clamp can also be adjusted to hold canvases of various sizes.
4. **Tabletop Use:** For tabletop use, fold the legs completely and place the easel on a flat, stable surface.



FULLY ADJUSTABLE

Each leg can adjust to suit your height while the easel holder can support canvases large and small

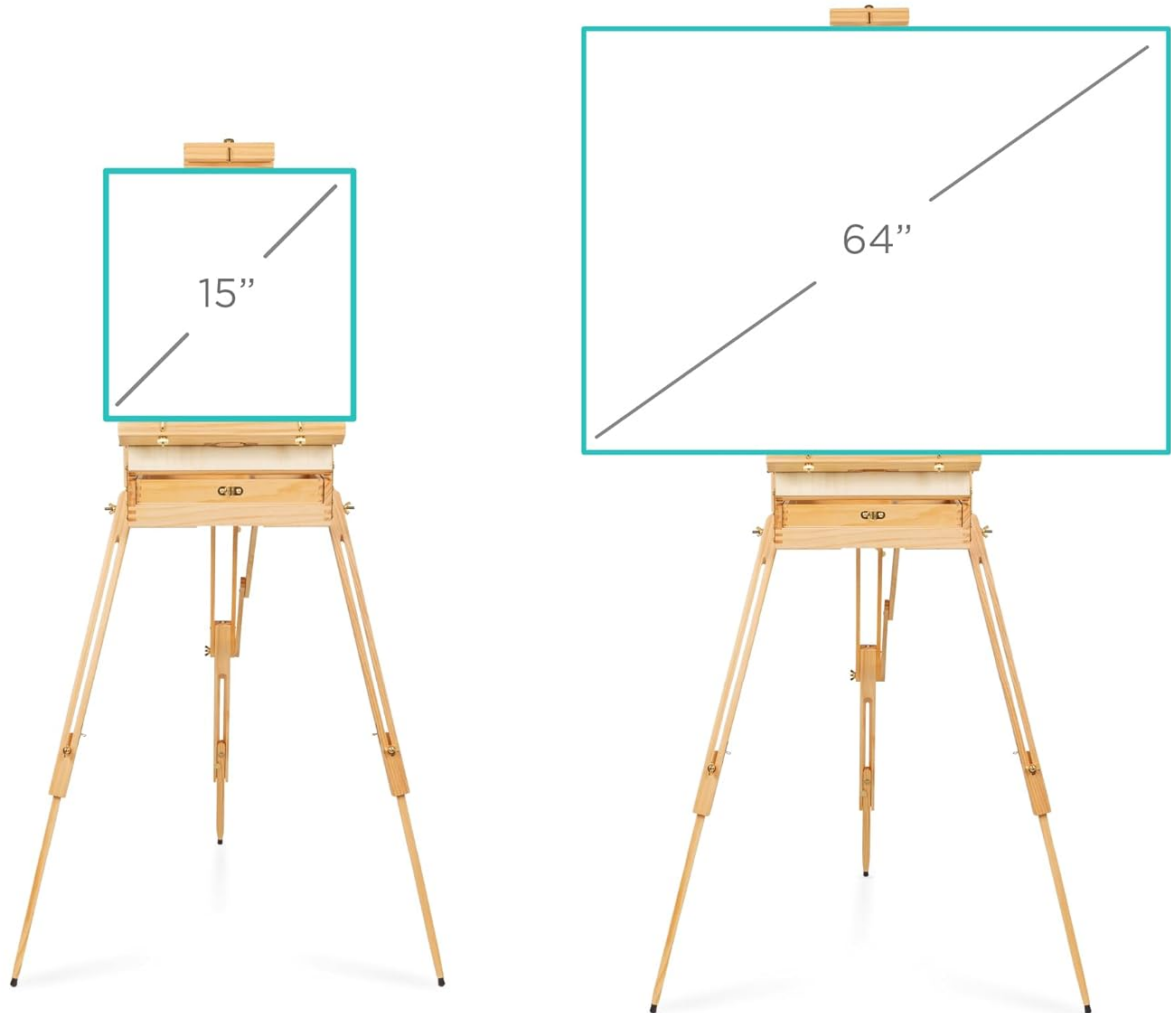 


Figure 3: Easel height and canvas size adjustment.

Your browser does not support the video tag.

Video 1: Demonstration of the portable folding French style easel, showing unfolding and adjustments.

OPERATING INSTRUCTIONS

Once the easel is set up, you can begin using it for your artistic endeavors:

- **Placing a Canvas:** Position your canvas or art board on the lower canvas holder. Adjust the top canvas clamp to securely hold the canvas in place. Ensure the canvas is stable before beginning to paint.
- **Using the Storage Drawer:** The easel features an integrated storage drawer for your art supplies. Unlatch the front clasp and pull out the drawer to access compartments for paints, brushes, and other small tools. Close and latch the drawer when not in use to secure contents.
- **Adjusting Angle:** The angle of the easel can be adjusted by manipulating the rear support leg and the canvas holder's position. Experiment to find the most comfortable and effective angle for your painting style.



Figure 4: Easel in use, showcasing the French box design.

MAINTENANCE

Proper care will extend the life of your easel:

- **Cleaning:** Wipe down wooden surfaces with a dry or slightly damp cloth after each use to remove paint residue or dust. Avoid harsh chemicals that may damage the wood finish.
- **Hardware Care:** Periodically check all metal fittings and screws for tightness. Tighten any loose components to maintain stability.
- **Storage:** When not in use, fold the easel into its compact form and store it in a dry environment. Avoid prolonged exposure to extreme humidity or direct sunlight, which can affect the wood.

NATURAL MATERIALS

Built with a durable pine wood body for reliable support



Figure 5: Easel construction details.

TROUBLESHOOTING

If you encounter any issues, refer to the following common solutions:

- **Stiff Joints:** If the wooden joints or adjustable parts become stiff, apply a small amount of wood lubricant or wax to the moving components.
- **Loose Components:** Regularly inspect and tighten all wing nuts and screws to prevent wobbling or instability during use.
- **Difficulty Adjusting Legs:** Ensure that the wing nuts are sufficiently loosened before attempting to extend or retract the legs. Do not force the wooden parts.

SPECIFICATIONS

Feature	Detail
Color	Natural
Product Dimensions (Open)	34"(L) x 30.25"(W) x 48-69"(H)

Feature	Detail
Material	Wood (Pine)
Item Weight	12.34 Pounds
Model Name	Portable Wooden French Easel w/ 32pc Beginners Kit
Item Model Number	Artist's Easels-1346
Assembly Required	No
Number of Items	32 (Kit)



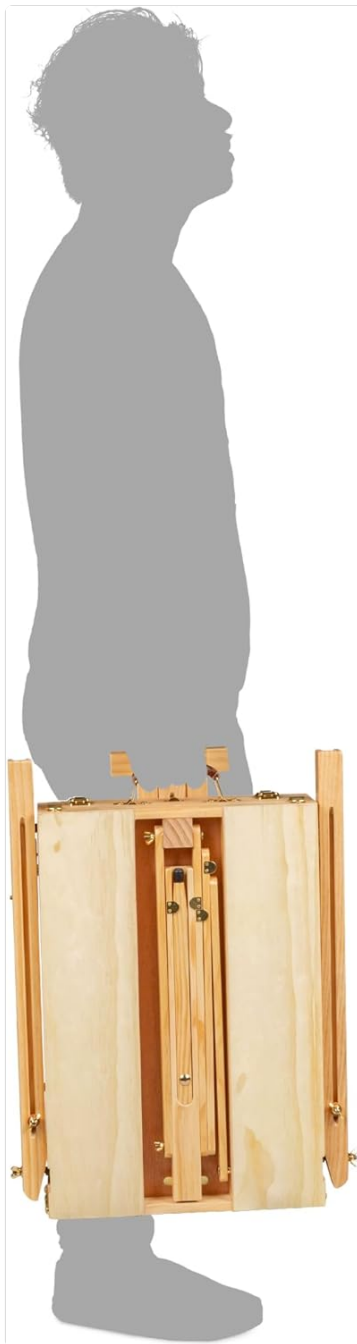 
Figure 6: Easel dimensions (open and folded).

PORTABILITY

The easel is designed for easy transport. It folds down into a compact size and includes a shoulder strap for convenient carrying. The internal storage compartments keep your supplies organized and secure during transit.

PORTABLE DESIGN

Fold down and carry your easel when you want to paint in the great outdoors or transport your supplies



Handle



Strap

Figure 7: Easel in its portable, folded configuration.

WARRANTY AND SUPPORT

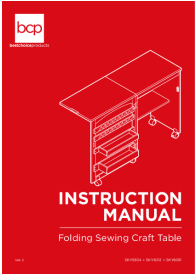 
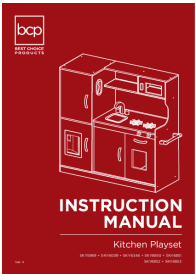 


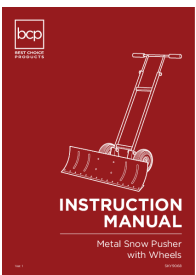 
For warranty information, product support, or to inquire about replacement parts, please refer to the contact information provided with your purchase or visit the official Best Choice Products website. Keep your proof of purchase for any warranty claims.

Related Documents - Artist's Easels-1346



[Best Choice Products Foldable Wooden Adirondack Chair Assembly Instructions](#)

Comprehensive instruction manual for assembling the Best Choice Products SKY2253 Foldable Wooden Adirondack Chair. Includes parts list, tools required, hardware details, step-by-step assembly guide, safety notices, and warranty information.

	<p>Best Choice Products Folding Sewing Craft Table Instruction Manual</p> <p>Detailed instruction manual for assembling the Best Choice Products Folding Sewing Craft Table (Models SKY5834, SKY6212, SKY6281). Includes parts list, tools required, assembly steps, and warranty information.</p>
	<p>Best Choice Products Kitchen Playset Instruction Manual</p> <p>Comprehensive instruction manual for assembling the Best Choice Products Kitchen Playset, including parts lists, hardware details, and step-by-step assembly instructions for models SKY5969, SKY6009, SKY6346, SKY6850, SKY6851, SKY6852, and SKY6853.</p>
	<p>Best Choice Products Pretend Play Corner Kitchen Wooden Toy Set - SKY6910, 6911, 6912</p> <p>Overview of parts and components for the Best Choice Products Pretend Play Corner Kitchen Wooden Toy Set, models SKY6910, SKY6911, and SKY6912. This document outlines the various numbered parts and lettered components that make up the toy kitchen.</p>
	<p>Best Choice Products Upholstered Adjustable Bed Base Instruction Manual (SKY5671, SKY5679)</p> <p>Instruction manual for Best Choice Products (BCP) Upholstered Adjustable Queen Bed Base (SKY5671) and Split King Bed Base (SKY5679). Covers assembly, operation, remote control, troubleshooting, safety warnings, and warranty.</p>
	<p>Best Choice Products Metal Snow Pusher with Wheels Instruction Manual</p> <p>Instruction manual for the Best Choice Products Metal Snow Pusher with Wheels (Model SKY9068), detailing assembly, parts, warnings, and warranty information.</p>