

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PROSCAN](#) /

› [Proscan 19-Inch LED TV with Built-in DVD Player Instruction Manual \(PLEDV1945A-B\)](#)

PROSCAN PLEDV1945A-B

Proscan 19-Inch LED TV with Built-in DVD Player Instruction Manual

Model: PLEDV1945A-B

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before operating this television. Keep this manual for future reference. Observe all warnings and instructions marked on the product.

- **Ventilation:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- **Power Source:** Operate this product only from the type of power source indicated on the marking label.
- **Power Cord Protection:** Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- **Cleaning:** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- **Water and Moisture:** Do not use this product near water (e.g., near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool).
- **Lightning:** For added protection during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system.
- **Servicing:** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Proscan PLEDV1945A-B 19-Inch 720P 60Hz LED TV-DVD Combo
- Remote Control (batteries not included)
- Instruction Manual (this document)
- TV Stand components
- Warranty Information

3. SETUP

3.1 Attaching the TV Stand

Carefully place the TV screen-down on a soft, clean surface to prevent scratches. Align the stand components with the mounting holes on the bottom of the TV. Secure the stand using the provided screws. Ensure the stand is firmly attached before placing the TV upright.

3.2 Connecting Power

Connect the power cord to the AC IN port on the back of the TV, then plug the other end into a standard AC 100-240V, 50/60Hz wall outlet.

3.3 Connecting External Devices

The TV offers various input ports for connecting external devices:

- **HDMI (1 port):** For high-definition audio and video from devices like Blu-ray players, game consoles, or cable/satellite boxes.
- **VGA (1 port):** For connecting a computer. Use a separate audio cable for sound if your computer does not output audio via VGA.
- **YPBPR (Component Video, 1 port):** For high-quality analog video from compatible devices.
- **Audio/Video (Composite, 1 port):** For standard definition video and stereo audio from devices like older DVD players or VCRs.
- **Antenna/Cable (RF):** Connect an antenna or cable TV coaxial cable for receiving broadcast channels.
- **PC Audio In:** For audio input when using the VGA port.
- **Headphone Jack:** For connecting headphones.

After connecting devices, press the **SOURCE** button on the remote control to select the appropriate input.



Image: Front view of the Proscan 19-Inch LED TV, model PLEDV1945A-B, displaying a soccer match. A DVD disc is shown partially inserted into the side slot, indicating the integrated DVD player feature.

4. OPERATING INSTRUCTIONS

4.1 Basic TV Functions

- **Power On/Off:** Press the **POWER** button on the remote control or on the TV panel.
- **Channel Selection:** Use the **CH+/-** buttons to change channels sequentially, or use the number buttons to enter a specific channel.
- **Volume Adjustment:** Use the **VOL+/-** buttons to increase or decrease the volume.
- **Mute:** Press the **MUTE** button to temporarily turn off the sound. Press again to restore.
- **Menu Navigation:** Press the **MENU** button to access the on-screen display (OSD) menu. Use the arrow buttons to navigate and **ENTER** to confirm selections.

4.2 DVD Player Operation

The integrated DVD player supports standard DVD discs. Ensure the TV is powered on.

1. **Select DVD Source:** Press the **SOURCE** button on the remote control and select "DVD" from the input list.
2. **Insert Disc:** Gently insert a DVD disc into the disc slot on the side of the TV with the label facing towards the rear (wall side). The player will automatically load the disc.
3. **Playback:** The DVD should begin playing automatically. If a menu appears, use the arrow buttons and **ENTER** to navigate.
4. **Controls:** Use the **PLAY/PAUSE, STOP, REWIND**, and **FAST FORWARD** buttons on the remote control to manage playback.
5. **Eject Disc:** Press the **EJECT** button on the remote control or on the TV panel to remove the disc.

Note: The DVD player does not retain playback position after the TV is turned off. You will need to manually navigate to your last viewing point.

4.3 Using as a Computer Monitor

Connect your computer to the TV using a VGA cable for video and a 3.5mm audio cable for sound (if your computer requires separate audio output). Select the VGA input source using the **SOURCE** button.

5. MAINTENANCE

5.1 Cleaning the Screen

Before cleaning, unplug the TV from the power outlet. Use a soft, lint-free cloth slightly dampened with water or a specialized screen cleaner. Do not spray cleaner directly onto the screen. Avoid using abrasive cleaners, waxes, or solvents.

5.2 Cleaning the Cabinet

Wipe the TV cabinet with a soft, dry cloth. Do not use any liquid or aerosol cleaners directly on the cabinet.

5.3 Disc Care

Handle DVD discs by their edges. Keep discs clean and free of scratches. Store discs in their cases when not in use.

6. TROUBLESHOOTING

| Problem | Possible Cause / Solution |
|----------|--|
| No power | Ensure the power cord is securely plugged into the TV and the wall outlet. Check if the wall outlet is functioning by plugging in another device. Press the POWER button on the remote or TV panel. |

| Problem | Possible Cause / Solution |
|---|--|
| No picture, but sound is present | <p>Check the input source. Press the SOURCE button to select the correct input.</p> <p>Ensure all video cables are securely connected.</p> <p>Adjust brightness and contrast settings in the TV menu.</p> |
| No sound, but picture is present | <p>Check the volume level. Press VOL+.</p> <p>Ensure the TV is not muted. Press the MUTE button.</p> <p>Check audio cable connections for external devices.</p> <p>If using HDMI, ensure the audio output setting on the connected device is correct.</p> |
| DVD disc does not play or is unreadable | <p>Ensure the disc is inserted correctly with the label facing the rear of the TV.</p> <p>Check if the disc is clean and free of scratches or smudges.</p> <p>Try a different disc to determine if the issue is with the disc or the player.</p> <p>Ensure the input source is set to "DVD".</p> |
| Remote control not working | <p>Replace the batteries in the remote control.</p> <p>Ensure there are no obstructions between the remote and the TV's IR sensor.</p> <p>Point the remote directly at the TV.</p> |

7. SPECIFICATIONS

| Feature | Detail |
|---------------------------------------|--|
| Model Number | PLEDV1945A-B |
| Screen Size | 19 Inches |
| Display Technology | LED |
| Resolution | 720p |
| Refresh Rate | 60 Hz |
| Aspect Ratio | 16:9 |
| Product Dimensions (W x H x D) | With stand: 17.38" x 13" x 5.13" Without stand: 17.38" x 11.13" x 2.25" |
| Item Weight | 8 Pounds |
| Power Requirements | AC 100-240V, 50/60Hz |
| Power Consumption | 80 Watts (Max), 48 Watts (Typical) |
| Inputs | HDMI: 1 VGA: 1 YPBPR (Component): 1 Audio/Video (Composite): 1 Antenna (RF): 1 PC Audio In: 1 |
| Outputs | Headphone Jack: 1 Coax Audio: 1 |

| Feature | Detail |
|-------------------------|------------------------------------|
| Special Features | Integrated DVD Player, Flat Screen |

8. WARRANTY INFORMATION

This product is covered by a limited manufacturer's warranty. Please refer to the warranty card included in your package for specific terms, conditions, and duration of coverage. Keep your purchase receipt as proof of purchase for warranty claims.

9. CUSTOMER SUPPORT

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Proscan customer support. Contact information can typically be found on the manufacturer's website or on the warranty card provided with your product.

Online Resources: Visit the official Proscan website for updated manuals, FAQs, and support contact details.