

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ultrasport](#) /

› [Ultrasport Electronic Dartboard with Doors User Manual](#)

Ultrasport 380100000142

Ultrasport Electronic Dartboard with Doors

Model: 380100000142

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Ultrasport Electronic Dartboard. Designed for up to 16 players, this dartboard offers 38 different games with 202 variations, ensuring versatile entertainment. Please read this manual thoroughly before use to ensure proper function and longevity of your product.



Image: The Ultrasport Electronic Dartboard with its protective doors open, displaying the dartboard face, a set of 15 soft-tip darts, and three throw line markers on the floor. The display shows '81' for Player 1 and '21' for Player 2, indicating an active game.

SAFETY INFORMATION

- Keep the dartboard away from water or excessive moisture.
- Use only the provided power adapter.
- Ensure the dartboard is securely mounted to prevent falling.
- Use only soft-tip darts with this electronic dartboard. Do not use steel-tip darts.
- Supervise children during play.
- Do not attempt to open or repair the dartboard yourself. Refer to qualified service personnel.

SETUP

1. Unboxing and Component Check

Carefully remove all components from the packaging. Verify that all items listed below are present:

- Ultrasport Electronic Dartboard with Doors
- 12 Soft-Tip Darts

- 100 Replacement Soft Tips
- Power Adapter
- Throw Line Stickers
- Mounting Hardware (2 screws, 2 dowels)
- User Manual

Electronic Dartboard in tournament size



Image: A diagram illustrating the dimensions of the electronic dartboard (23.23 inches height, 19.69 inches width, 9.45 inches depth when open) and showcasing the included accessories: 15 darts, 100 soft tips, and 3 throw lines.

2. Mounting the Dartboard

Select a suitable wall location, ensuring sufficient space for throwing and player movement. The dartboard should be mounted so that the center of the bullseye is 1.73 meters (5 feet 8 inches) from the floor. Use the provided screws and dowels to securely fasten the dartboard to the wall. The integrated doors can be closed to protect the dartboard when not in use.



Image: The Ultrasport Electronic Dartboard with its protective doors closed, displaying its compact dimensions of 51 cm width and 60 cm height.

3. Power Connection


Connect the provided power adapter to the dartboard's power input jack, typically located on the side or bottom. Plug the adapter into a standard electrical outlet. The dartboard is now ready for use.

OPERATING INSTRUCTIONS

1. Basic Controls

The control panel features several buttons for game selection, player management, and sound control:

- **POWER:** Turns the dartboard on or off.
- **START/HOLD:** Starts a game or pauses/holds the current game.
- **SELECT:** Used to confirm selections or navigate menus.
- **GAME:** Cycles through available game modes.
- **PLAYER/PAGE:** Selects the number of players or pages through player scores.
- **CYBER-MATCH:** Activates the game mode against the computer.
- **SOUND:** Adjusts volume or mutes sound.
- **RESET:** Resets the current game or settings.
- **BOUNCE OUT:** Manually registers a dart that bounced out but should have scored.
- **DART OUT / DOUBLE / MISS:** Used for specific game rules or correcting missed throws.
- **KEY LOCK:** Locks the control panel to prevent accidental changes during play.

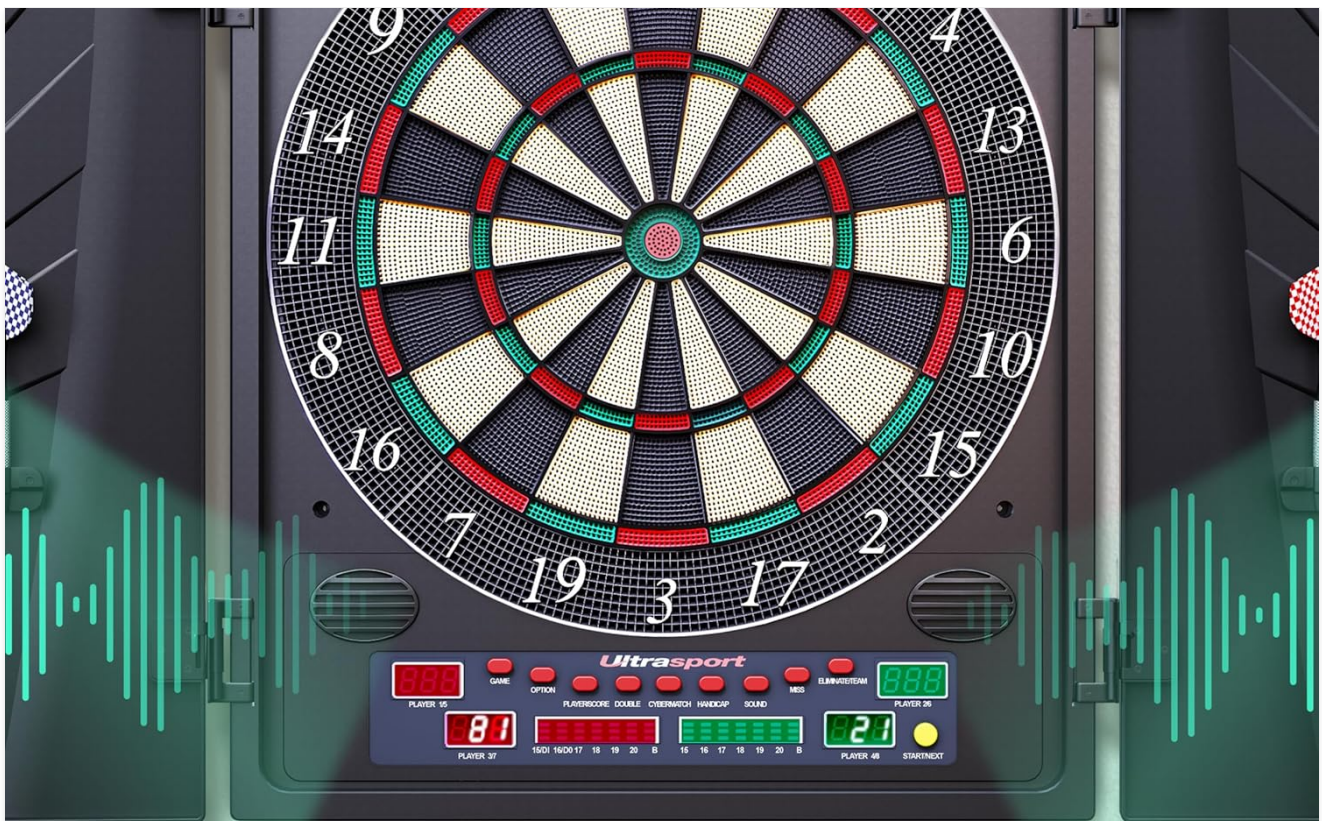

Crystal-clear sound with 2 integrated speakers



**Built-in mute
function**



**Adjustable
volume**



**Realistic
sound effects**

Image: A close-up view of the Ultrasport Electronic Dartboard's control panel, featuring various buttons for game selection, player control, and sound adjustments. Sound wave graphics emanate from the integrated speakers, highlighting the audio features.

2. Game Selection and Play

The dartboard offers 38 different games with 202 variations. To select a game:

1. Press the **POWER** button to turn on the dartboard.
2. Use the **GAME** button to cycle through the available games displayed on the LED screen.
3. Once your desired game is selected, press **SELECT** to confirm.
4. Use the **PLAYER/PAGE** button to choose the number of players (up to 16).
5. Press **START/HOLD** to begin the game.

3x more game variations for unlimited darts fun

✓ **Ultrasport**
27 games with
202 game variations

✗ **OTHERS**
Only 65 game
variations



Up to **8 players** at
once

Plug & Play
Includes Power Adapter



Cybermatch feature
Challenge the computer

Image: Two individuals are shown playing darts, illustrating the dartboard's capacity for multiple players and its extensive game variations. Text overlays highlight '27 games with 202 game variations' and the 'Cybermatch feature' for playing against the computer.

3. Scoring and Display

The dartboard features an advanced LED display that automatically tracks scores for all players. Interactive sound effects and voice output enhance the gaming experience, announcing scores and turns.

Cutting-edge LED technology for high-contrast score display



Image: A person is shown from behind, throwing a dart at the Ultrasport Electronic Dartboard. The bright LED display is clearly visible, showing a score of '21', indicating its high-contrast visibility during play.

4. Sound Control

The dartboard includes a built-in mute function and adjustable volume. Use the **SOUND** button to cycle through volume levels or to mute the sound entirely, allowing for quiet play.

5. Cybermatch Feature

For solo play, activate the Cybermatch feature to compete against the computer. This mode offers five levels of difficulty, allowing you to challenge yourself as your skills improve.

MAINTENANCE

1. Cleaning

Wipe the dartboard's surface and casing with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid abrasive cleaners or solvents.

2. Dart Tip Replacement

The soft-tip darts are designed for durability, but tips may wear down or break over time. Replace damaged tips with the included 100 replacement soft tips to ensure proper scoring and prevent damage to the dartboard segments.

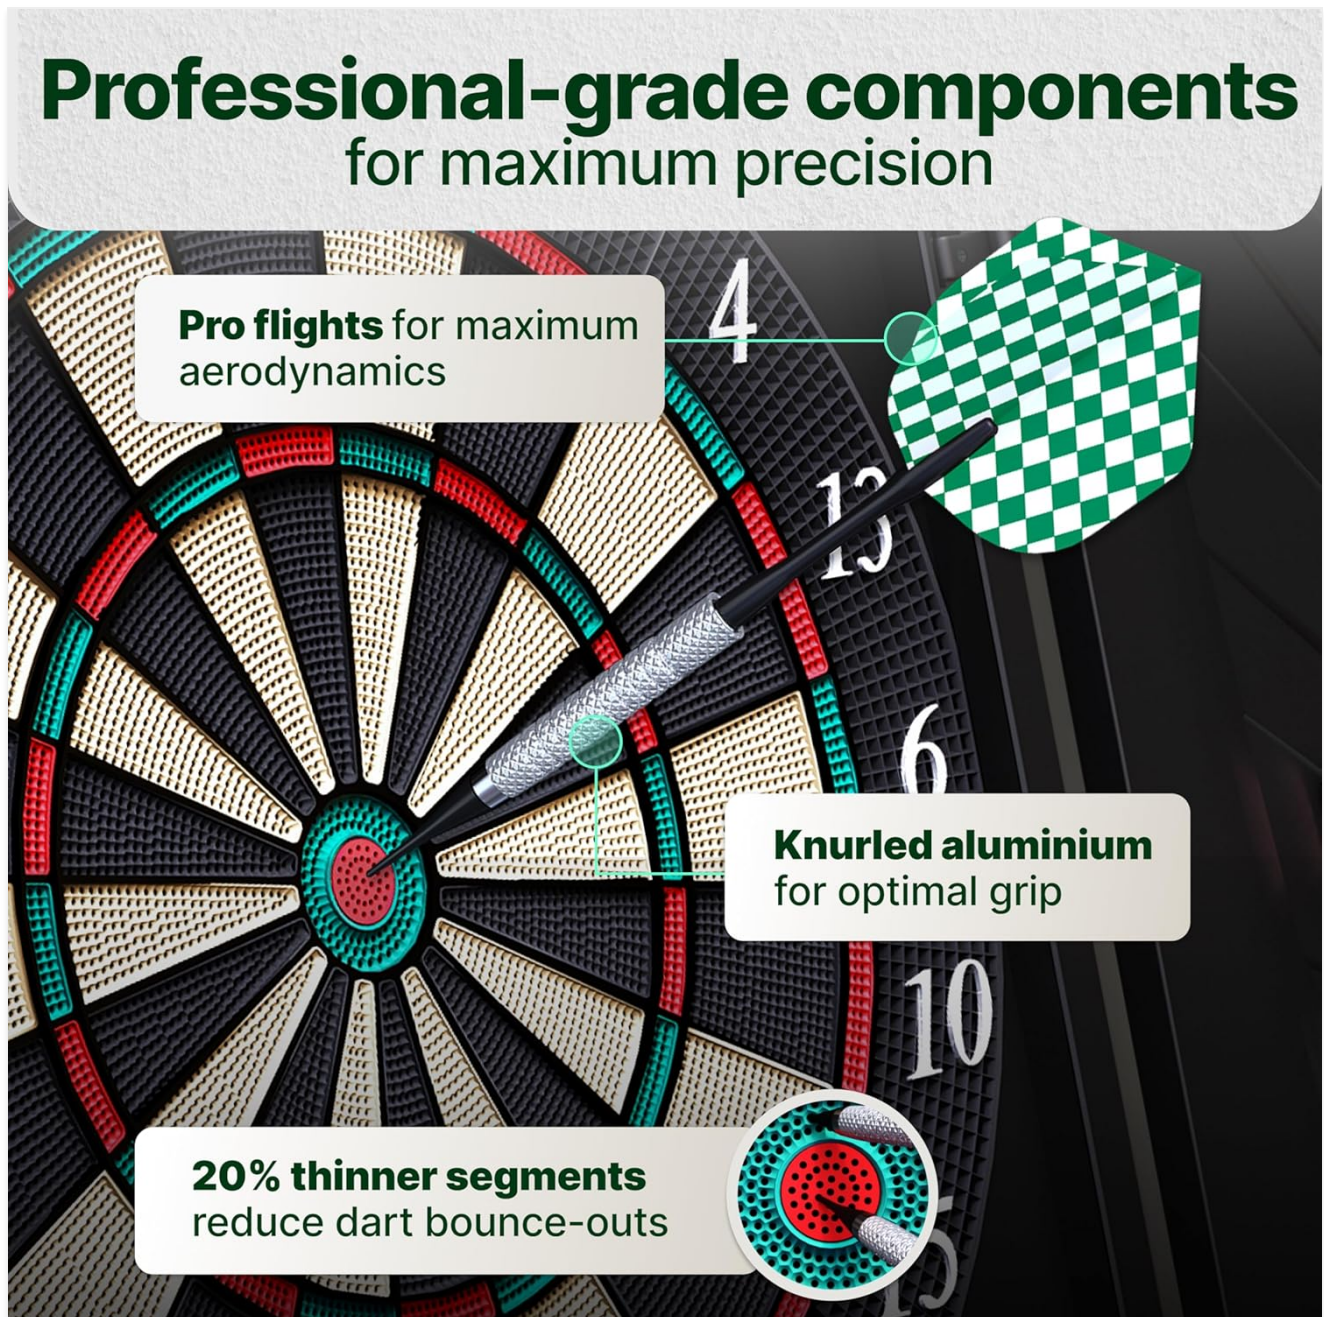


Image: A close-up view of a soft-tip dart embedded in the bullseye of the dartboard, illustrating the professional-grade components. Text highlights 'Pro flights for maximum aerodynamics', 'Knurled aluminium for optimal grip', and '20% thinner segments reduce dart bounce-outs'.

3. Storage

When not in use, close the protective doors of the dartboard to shield it from dust and damage. The doors also provide convenient storage for up to 12 darts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Dart does not register score.	Damaged or worn dart tip; dart did not fully penetrate segment; dart bounced out.	Replace dart tip. Ensure darts are thrown with sufficient force. Use the BOUNCE OUT button if a dart clearly hit but didn't register.
No power to the dartboard.	Power adapter not connected; power outlet malfunction.	Check power adapter connection to dartboard and outlet. Try a different outlet.
No sound or distorted sound.	Volume too low or muted; speaker malfunction.	Press the SOUND button to adjust volume or unmute. If problem persists, contact support.
Game freezes or behaves erratically.	Temporary software glitch.	Press the RESET button to restart the game. If necessary, turn off the dartboard, unplug, wait 30 seconds, then plug back in and restart.

SPECIFICATIONS

Model Number: 380100000142

Brand: Ultrasport

Style: Dartboard with doors

Main Material: Plastic

Dimensions (Closed): 51 cm (L) x 7 cm (W) x 60 cm (H)

Dimensions (Open): 99 cm (L) x 7 cm (W) x 60 cm (H)

Item Weight: 4.35 Kilograms

Number of Games: 38

Game Variations: 202

Max Players: 16

Cybermatch Difficulty Levels: 5

Display: LED

Sound Features: Interactive sound effects, voice output, adjustable volume, mute function

Included Components: Dartboard, 12 soft-tip darts, 100 replacement soft tips, power adapter, throw line stickers, mounting hardware (2 screws, 2 dowels)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Ultrasport website. Keep your proof of purchase for any warranty claims.