



Manuals.plus /

› NIXON /

› Nixon The Ride A315562-00 Quartz Watch Instruction Manual

NIXON A315562-00

Nixon The Ride A315562-00 Quartz Watch Instruction Manual

Model: A315562-00

1. INTRODUCTION

This manual provides essential instructions for the proper use, setup, and maintenance of your Nixon The Ride A315562-00 Quartz Watch. Please read this manual thoroughly before using your watch to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

The Nixon The Ride A315562-00 is a men's quartz watch featuring a robust stainless steel case and a comfortable Horween leather strap. It is designed for durability and functionality, incorporating a Japanese Quartz movement and chronograph features.



Front view of the Nixon The Ride watch, showcasing the black dial, chronograph subdials, date window, and the brown leather strap.

Key Features:

- **Movement:** Japanese Quartz Movement for precise timekeeping.
- **Water Resistance:** 100 Meters / 330 Feet / 10 ATM, suitable for swimming and snorkeling, but not diving.
- **Case Diameter:** 49mm, providing a prominent wrist presence.

- **Crystal:** Durable Mineral Crystal.
- **Strap:** High-quality Horween leather strap with a buckle clasp.
- **Additional Functions:** Chronograph, Second Hand, Luminous hands and markers.



The Nixon The Ride watch displayed on a wrist, illustrating its size and fit.

3. SETUP

3.1. Unboxing

Carefully remove the watch from its packaging. Inspect the watch for any signs of damage. Retain the packaging for future storage or transport.



The white Nixon branded watch box, indicating the product's original packaging.

3.2. Setting the Time and Date

1. **Pull out the crown:** Gently pull the crown (the knob on the side of the watch) to the second click position.
2. **Set the time:** Rotate the crown to move the hour and minute hands to the desired time. Ensure you distinguish between AM and PM if setting the date.
3. **Set the date:** Push the crown in one click to the first click position. Rotate the crown to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this can damage the movement.
4. **Push in the crown:** Once the time and date are set, push the crown back into its normal position

against the watch case to start the watch and ensure water resistance.

4. OPERATING INSTRUCTIONS

4.1. Using the Chronograph

Your Nixon The Ride watch is equipped with a chronograph function for measuring elapsed time. The chronograph typically operates using two pushers located above and below the crown.

1. **Start:** Press the upper pusher to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press the upper pusher again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** Press the lower pusher to reset the chronograph hands to their zero positions.

Note: Do not operate the chronograph pushers while the watch is submerged in water to maintain water resistance.

4.2. Water Resistance

This watch is water resistant to 100 meters (10 ATM). This rating means it is suitable for recreational swimming, showering, and snorkeling. It is **not** suitable for scuba diving or high-impact water sports where water pressure may exceed the rating.

- Always ensure the crown is fully pushed in before exposing the watch to water.
- Avoid operating the crown or pushers while the watch is wet or submerged.
- After exposure to saltwater, rinse the watch with fresh water and dry it thoroughly.

5. MAINTENANCE

5.1. Cleaning

- **Case and Crystal:** Wipe with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, followed by rinsing with fresh water and thorough drying.
- **Leather Strap:** Avoid prolonged exposure to water, direct sunlight, and harsh chemicals. Clean with a dry, soft cloth. Specialized leather cleaners can be used sparingly if needed.

5.2. Battery Replacement

The watch is powered by a quartz movement, which requires a battery. The battery life typically ranges from 2 to 3 years. When the watch stops or the second hand begins to jump erratically (End-of-Life indicator), it's time for a battery replacement. It is highly recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

5.3. Storage

When not in use, store your watch in a cool, dry place, away from direct sunlight and extreme temperatures. The original watch box is ideal for storage.

6. TROUBLESHOOTING

- **Watch not running:**

- Check if the crown is fully pushed in.
- The battery may need replacement.

- **Date not changing:**

- Ensure the time is set correctly for AM/PM. The date typically changes around midnight.
- Avoid setting the date between 9 PM and 3 AM.

- **Water inside the watch:**

- Immediately take the watch to a service center. Do not attempt to dry it yourself.
- Ensure the crown was fully pushed in before water exposure.

7. SPECIFICATIONS

Feature	Detail
Model Number	A315562-00
Movement	Japanese Quartz
Case Material	Stainless Steel
Case Diameter	49 Millimetres
Case Thickness	13 Millimetres
Crystal Type	Mineral
Band Material	Leather (Horween)
Band Width	23 Millimetres
Water Resistance	100 Metres (10 ATM)
Display Type	Analog
Additional Features	Chronograph, Second Hand, Luminous
Clasp Type	Buckle
Dial Color	Brown
Manufacturer	Nixon

8. WARRANTY AND SUPPORT

Nixon watches typically come with a limited warranty covering manufacturing defects. For specific warranty terms, duration, and to register your product, please refer to the warranty card included with your purchase or visit the official Nixon website. For technical support, service, or parts, please contact Nixon customer service directly.

Please note: Unauthorized repairs or modifications may void your warranty.

