

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Gillette](#) /

› [Gillette Fusion ProGlide Styler 3-in-1 Waterproof Trimmer for Man, Achieve Any Facial Hair Style with Three Exchangeable Combs \(2 mm, 4 mm, 6 mm\) - Instruction Manual](#)

Gillette 867-73423

Gillette Fusion ProGlide Styler 3-in-1 Instruction Manual

Model: Styler (867-73423)

INTRODUCTION

The Gillette Fusion ProGlide Styler is a versatile 3-in-1 grooming tool designed for men to achieve any facial hair style. It functions as a razor, beard trimmer, and edging blade, offering precision and comfort for various grooming needs.



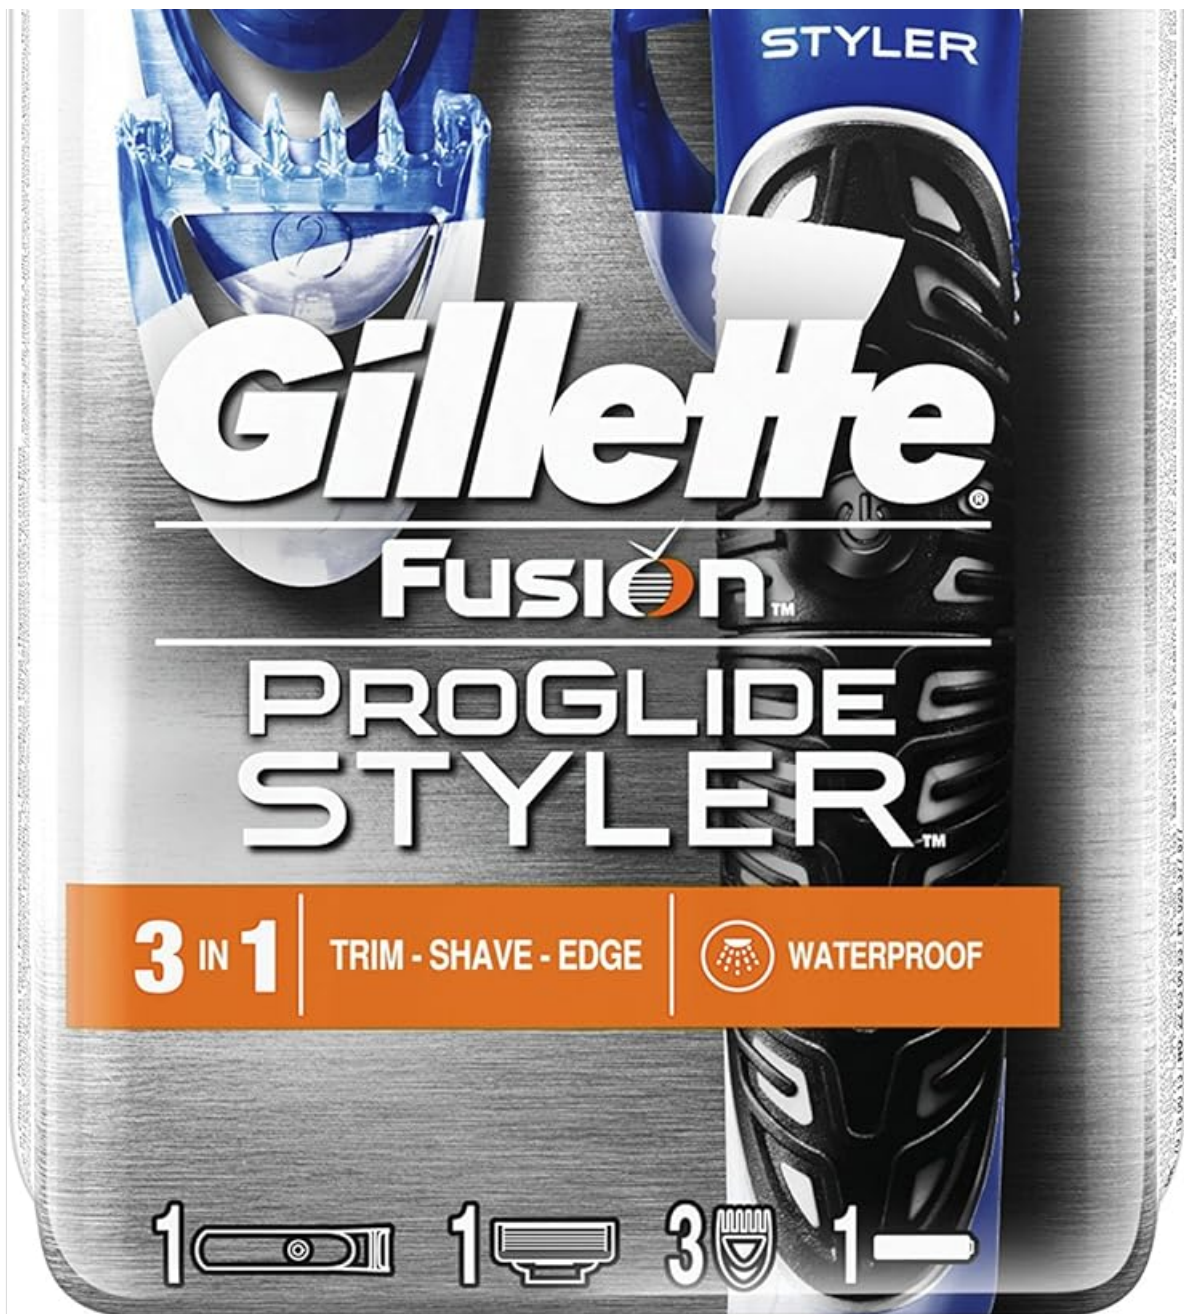 


Image: The Gillette Fusion ProGlide Styler 3-in-1, showcasing its packaging and key features.

What's in the Box

Your Gillette Fusion ProGlide Styler package includes the following components:

- 1 x ProGlide Styler Handle
- 1 x ProGlide Power Cartridge (Razor Blade)
- 3 x Comb Guides (2 mm, 4 mm, 6 mm)
- 1 x AA Battery
- 1 x Organiser Stand



Image: All components included in the Gillette Fusion ProGlide Styler package, laid out for clear viewing.

SAFETY INFORMATION

Please read and understand all safety information before using your Gillette Fusion ProGlide Styler.

- Always keep the product clean and dry when not in use.
- Do not use in the shower or near water unless specifically designed for wet use (this product is waterproof, but ensure battery compartment is sealed).
- Be cautious when using blades and trimmers to avoid cuts.
- Always unplug the device before cleaning or storing (for battery-operated devices, remove the battery).
- Do not use if the product is damaged or malfunctioning.

Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

SETUP

1. **Install Battery:** Unscrew the cap at the bottom of the styler handle. Insert the provided AA battery, ensuring correct polarity (+/-). Screw the cap back on tightly to ensure the device remains waterproof.
2. **Attach Razor Cartridge:** Align the ProGlide Power cartridge with the top of the styler handle. Press firmly until it clicks into place. To remove, press the release button on the side of the handle and pull the cartridge off.
3. **Attach Comb Guides:** For trimming, select one of the three comb guides (2 mm, 4 mm, or 6 mm). Slide the comb guide onto the trimmer head until it snaps securely into place.



Image: Illustration showing how to attach the razor cartridge to the Gillette Styler handle.

OPERATING INSTRUCTIONS

The Gillette Fusion ProGlide Styler offers three primary functions:

1. Trimming

Use the integrated trimmer with or without the comb guides to achieve your desired beard length.

- Attach the desired comb guide (2mm, 4mm, or 6mm) for consistent length.
- Turn on the styler using the power button.
- Move the trimmer against the direction of hair growth for an even trim.
- For precise shaping or shorter lengths, remove the comb guide and use the bare trimmer blade.

2. Shaving

Attach the ProGlide Power cartridge for a close and comfortable shave.

- Ensure the ProGlide Power cartridge is securely attached.
- Apply shaving gel or foam to the area to be shaved.
- Shave with smooth, even strokes. The power blades are designed for a close and comfortable experience.



Image: A detailed view of the Gillette Fusion ProGlide razor head, highlighting its multiple blades and lubrication strip for a smooth shave.

3. Edging

Use the precision edging blade for crisp, defined lines and finishing touches.

- Remove any comb guides or the razor cartridge to expose the precision trimmer blade.
- Hold the styler at an angle to create sharp lines around your beard, mustache, or sideburns.
- The compact size of the trimmer allows for maneuverability in tight areas.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your styler.

- **Cleaning:** The styler is waterproof. After each use, rinse the trimmer head and razor cartridge under running water to remove hair and debris. For thorough cleaning of the trimmer head, you may need to use a small brush (like an old toothbrush) to dislodge trapped hairs, especially in the area where hair collects.
- **Blade Replacement:** Replace the ProGlide Power cartridge when the lubrication strip fades or when you feel the blades are no longer providing a comfortable shave.
- **Battery Replacement:** Replace the AA battery when the trimmer's power diminishes. Ensure the battery compartment is dry before opening and closing.



Image: The Gillette Fusion ProGlide Styler demonstrating its waterproof capability by being partially submerged in water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer not turning on.	Dead or incorrectly installed battery.	Check battery polarity or replace with a new AA battery. Ensure the cap is screwed on tightly.
Trimmer pulling hair or not cutting effectively.	Blades are dull or clogged with hair.	Clean the trimmer head thoroughly. If the issue persists, consider replacing the razor cartridge.
Razor cartridge not attaching securely.	Improper alignment or debris in the attachment mechanism.	Ensure the cartridge is correctly aligned with the handle and press firmly until it clicks. Check for any obstructions.

SPECIFICATIONS

Feature	Detail
Model Name	Styler
Item Model Number	867-73423
Product Dimensions	2.83 x 11.89 x 10.51 inches
Weight	4.59 ounces
Power Source	Battery Powered (1 AA battery required, included)
Special Feature	Cordless, Waterproof
Recommended Uses	Trimming
Manufacturer	Procter & Gamble
Date First Available	August 26, 2012

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Gillette website or contact their customer service directly. Keep your proof of purchase for any warranty claims.

You can visit the Gillette Store for more information: [Gillette Store on Amazon](#).





[Braun MGK 3080 Grooming Kit User Manual and Safety Guide](#)

This comprehensive user manual provides detailed instructions for the Braun MGK 3080 grooming kit. It covers safety precautions, product description, charging, usage for beard trimming, hair clipping, precision styling, ear/nose trimming, and body grooming, as well as cleaning, maintenance, battery removal, and warranty information for both the USA and Canada. Available in English, French, and Spanish.



[How to Shave Your Face: A Guide to Men's Shaving](#)

A comprehensive guide to achieving a smooth, comfortable shave with expert tips on hydration, shaving cream application, blade care, shaving techniques, and post-shave care for men, featuring Gillette products.



 
[Gillette BRAUN Intimate Hair Trimmer Type 5544 User Manual](#)

User manual for the Gillette BRAUN Intimate Hair Trimmer Type 5544. Provides detailed instructions on safe operation, charging, cleaning, maintenance, and warranty information for this personal grooming device.




[Braun Series 7 790 cc Electric Shaver User Manual and Cleaning Station Guide](#)

Comprehensive user manual for the Braun Series 7 790 cc electric shaver, including setup, operation, cleaning, maintenance, and warranty information. Features Clean&Renew station for automatic cleaning and charging.

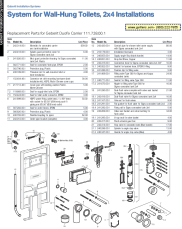

[Geberit Duofix Carrier System: Parts & Accessories for Wall-Hung Toilets](#)

 Explore replacement parts and optional accessories for the Geberit Duofix Carrier system, designed for 2x4 installations of wall-hung toilets. Find essential components and enhancements for modern bathroom setups.

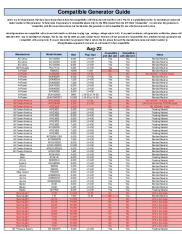

[Compatible Generator Guide - GenerLink Transfer Switch Compatibility](#)

A comprehensive guide detailing the compatibility of various generator models with the GenerLink transfer switch, including manufacturer, model number, wattage, plug type, and compatibility status for 30A and 40A units.