

[manuals.plus](#) /

› [Magnavox](#) /

› [Magnavox NC003UD Remote Control Unit User Manual](#)

Magnavox NC003UD

Magnavox NC003UD Remote Control Unit User Manual

Model: NC003UD

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Magnavox NC003UD Remote Control Unit. This remote is designed to work seamlessly with compatible Magnavox DVR/HDD/DVD recorder models, offering direct control without the need for complex programming.

Compatible Models: MDR515H/F7, MDR533H/F7, MDR535H/F7, MDR537H/F7, MDR557H/F7.

PACKAGE CONTENTS

- Magnavox NC003UD Remote Control Unit
- (Batteries are not included and must be purchased separately)

SETUP

1. Installing Batteries

The Magnavox NC003UD remote control requires two AAA batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off in the direction of the arrow.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: The Magnavox NC003UD Remote Control Unit. This image displays the front of the remote, showing its various buttons and ergonomic design. The battery compartment is located on the reverse side.

2. Initial Use

This remote control is an original factory replacement and typically requires no programming for the specified compatible Magnavox models. Once batteries are installed, it should function immediately with your device.

- Point the remote control directly at the infrared sensor on your Magnavox DVR/HDD/DVD recorder.
- Press any function button (e.g., Power, Play, Channel Up) to test its operation.

OPERATING INSTRUCTIONS

The NC003UD remote control provides full functionality for your compatible Magnavox DVR/HDD/DVD recorder. Refer to your device's specific manual for detailed functions of each button if needed.

Key Functions Overview:

Button	Function
Power	Turns the connected Magnavox device on or off.
Play/Pause	Starts or pauses playback of recorded content or DVDs.
Stop	Stops playback.
Rewind/Fast Forward	Navigates backward or forward through content.
Record	Initiates recording.
Channel Up/Down	Changes channels on the connected device.
Volume Up/Down	Adjusts the volume.
Menu	Accesses the device's main menu.
Navigation Arrows (Up, Down, Left, Right)	Used to navigate through menus and selections.
OK/Enter	Confirms selections.

Note: Specific button layouts and advanced functions may vary slightly depending on the exact Magnavox model you are using.

MAINTENANCE

Cleaning the Remote

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Do not use abrasive cleaners or solvents.
- Ensure no liquid enters the remote control's interior.

Battery Replacement

- Replace batteries when the remote's response becomes sluggish or stops working.
- Always replace both batteries at the same time with new AAA batteries.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.

- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Problem	Solution
Remote is not responding.	<ul style="list-style-type: none">Check if the batteries are inserted correctly with the correct polarity (+/-).Replace the batteries with new ones.Ensure there are no obstructions between the remote and the device's infrared sensor.Make sure you are within the effective range and pointing the remote directly at the device.
Some buttons are not working.	<ul style="list-style-type: none">This could indicate low battery power; try replacing the batteries.Ensure the remote is clean and there is no debris obstructing the buttons.Confirm your device model is listed as compatible with the NC003UD remote.
Remote works intermittently.	<ul style="list-style-type: none">Replace batteries.Check for strong light sources (e.g., direct sunlight, fluorescent lights) that might interfere with the infrared signal.

SPECIFICATIONS

- Model Number:** NC003UD
- Brand:** Magnavox
- Compatible Devices:** Magnavox DVR/HDD/DVD Recorders (MDR515H/F7, MDR533H/F7, MDR535H/F7, MDR537H/F7, MDR557H/F7)
- Connectivity Technology:** Infrared
- Power Source:** 2 x AAA Batteries (not included)
- Product Dimensions:** 8 x 1 x 2 inches (approximately)
- Item Weight:** 5 ounces (approximately)
- Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

This product is an original factory remote control. For specific warranty information, please refer to the documentation provided with your original Magnavox DVR/HDD/DVD recorder or contact Magnavox customer support directly. For further assistance or technical support, please visit the official Magnavox support website or consult your device's original user manual.

Note: As this is a replacement part, warranty terms may differ from the original device.



