

Step2 823000

Step2 Whisper Ride II Buggy Kids Push Car Instruction Manual

Model: 823000

INTRODUCTION

This manual provides comprehensive instructions for the Step2 Whisper Ride II Buggy Kids Push Car, model 823000. This durable ride-on toy is designed for toddlers aged 1.5 to 4 years, with a maximum weight capacity of 50 lbs. It features "whisper ride" wheels for smooth operation, an adjustable seat belt for safety, a functional horn and steering wheel for interactive play, convenient cup holders, and under-hood storage. Please read this manual thoroughly before assembly and use to ensure safe and correct operation.

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Sharp points. Adult assembly required.

- Always ensure adult supervision when the product is in use.
- Ensure the child is securely fastened with the adjustable seat belt before use.
- Do not use near stairs, hills, roadways, or swimming pools.
- Inspect the product regularly for loose parts, damage, or wear. Discontinue use if any damage is found.
- Maximum weight capacity: 50 lbs (22.7 kg).
- Recommended age: 18 months to 4 years.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly.

- Step2 Whisper Ride II Car Body
- Push Handle
- Wheels (4)
- Steering Wheel
- Dashboard/Console

- Seat Belt Assembly
- Hardware Pack (screws, washers, wheel caps, etc.)
- Cup Holder (for handle)

ASSEMBLY INSTRUCTIONS

Adult assembly is required. Please follow these general steps. Refer to the included hardware for specific fasteners. A rubber mallet and a sturdy screwdriver may be helpful.

1. **Attach Wheels:** Securely attach all four wheels to the car body using the provided axles and caps. A rubber mallet may be needed to fully seat the wheel caps for a tight fit.



Figure 1: Fully assembled Step2 Whisper Ride II Buggy, showcasing its blue body, grey wheels, and black push handle with a yellow cup holder.

2. **Install Steering Wheel and Dashboard:** Attach the steering wheel to the dashboard console. Then, secure the dashboard assembly to the front of the car body using the appropriate screws. Note that some screw holes may not be pre-drilled, requiring firm pressure during installation.
3. **Secure Seat Belt:** Install the adjustable seat belt assembly into the designated slots in the car seat. Ensure it is firmly attached and functions correctly.



Large, Extra Roomy Design

Packed with features like under-hood storage, safety buckle, a steering wheel with working horn, and multiple cupholders

Figure 2: Detail of the adjustable seat belt being fastened, ensuring child safety during use.

4. **Attach Push Handle:** Insert the push handle into the rear of the car body. Secure it with the provided hardware (e.g., bolts and nuts). Ensure the handle is stable and does not wobble. The handle is designed to fold down for compact storage and transport.


Built for a Stylish & Comfortable Ride

With a cool sports car design and Whisper Wheels for a smooth, quiet adventure



Figure 3: The push handle in use, demonstrating its ergonomic design. An inset image shows the handle folded for easy storage and transportation.

 5. **Install Handle Cup Holder:** Attach the yellow cup holder to the push handle as shown in the product images.

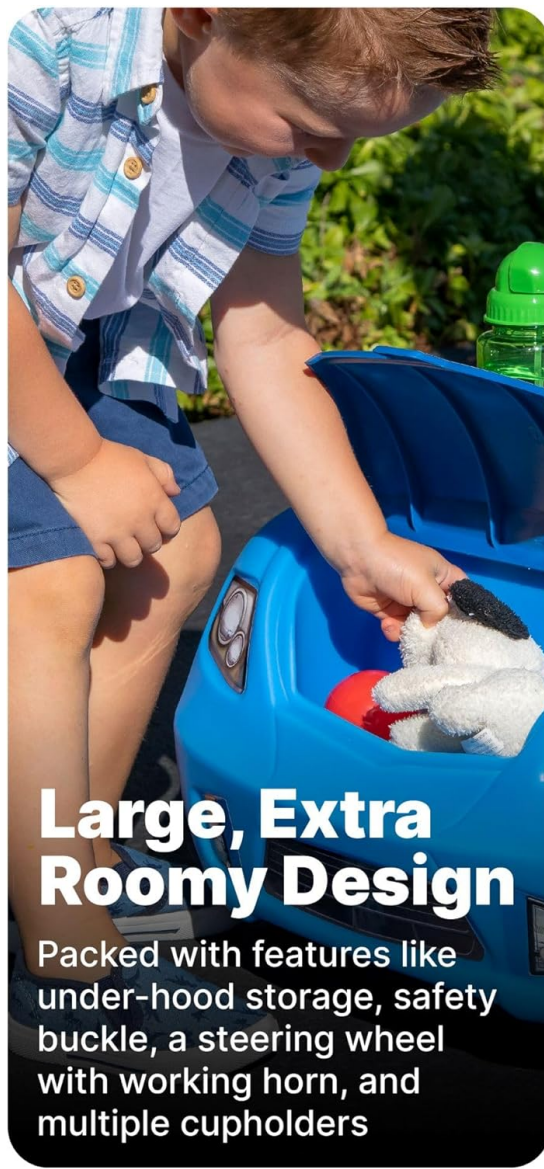

Large, Extra Roomy Design

Packed with features like under-hood storage, safety buckle, a steering wheel with working horn, and multiple cupholders



Figure 4: The cup holder integrated into the push handle, providing convenience for the adult pushing the car.

OPERATING INSTRUCTIONS

- **Child Placement:** Carefully place the child into the seat. Ensure they are seated comfortably and correctly.
- **Fasten Seat Belt:** Always fasten the adjustable seat belt securely around the child. Check that it is snug but not too tight.
- **Pushing the Car:** Use the rear push handle to guide the car. The "whisper ride" wheels are designed for smooth and quiet movement on various surfaces.
- **Turning:** To make turns, apply gentle downward pressure on the push handle to slightly lift the front wheels. This allows for easier steering and maneuvering.
- **Interactive Features:** The steering wheel is functional, and the car includes a working horn for interactive play.

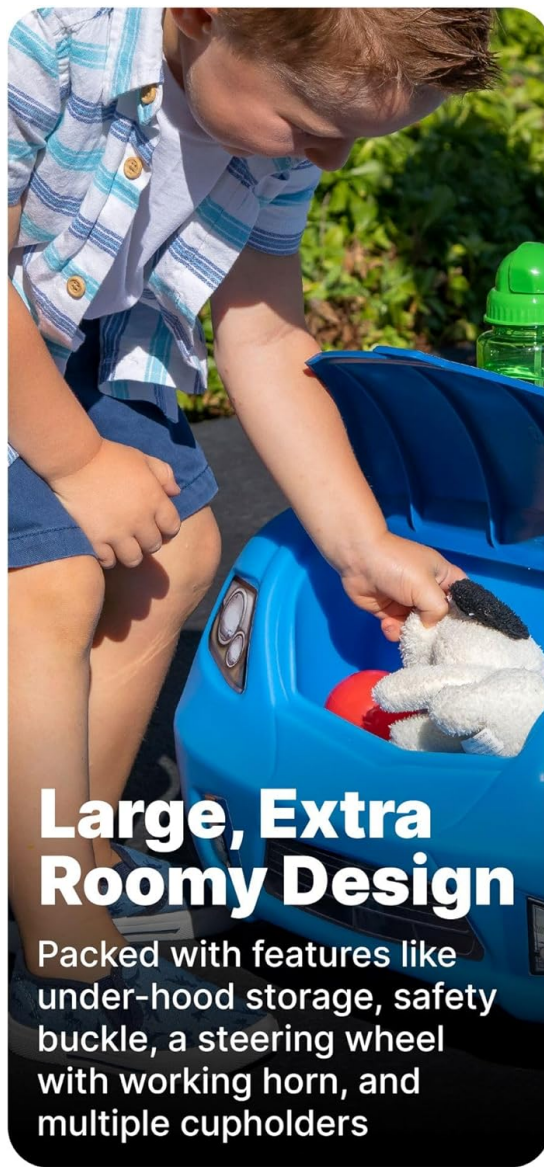 


Figure 5: A child engaging with the functional steering wheel and horn, enhancing the play experience.

- **Storage:** Utilize the under-hood storage compartment for snacks, small toys, or other essentials. The car also features two cup holders on the dashboard for the child's beverages.

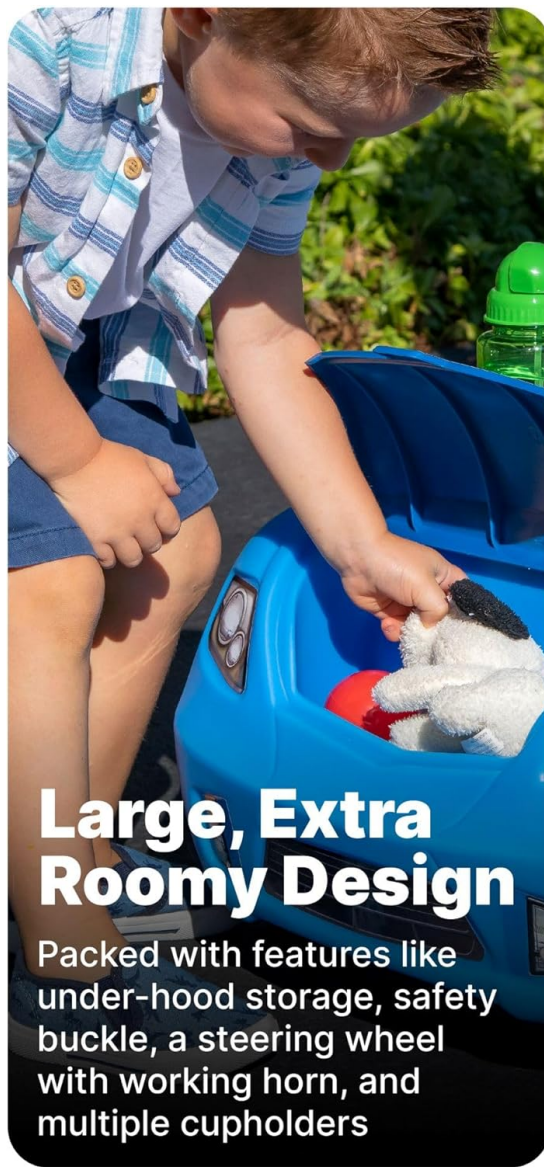 


Figure 6: The under-hood storage compartment, ideal for carrying small items. Also visible are the dashboard cup holders.



Figure 7: One of the dashboard cup holders in use, demonstrating its convenience for the child.

- **Folding Handle:** For transport or compact storage, the push handle can be folded down underneath the car body.

MAINTENANCE AND CARE

- **Cleaning:** To clean the car, simply wipe surfaces with a disinfectant wipe or a mild household cleaner and a damp cloth. Avoid abrasive cleaners.
- **Inspection:** Regularly inspect all parts for wear, damage, or loose fasteners. Pay close attention to the wheels, axles, seat belt, and handle connections.
- **Storage:** Store the car in a cool, dry place away from direct sunlight when not in use to prolong its lifespan and maintain color integrity. The handle can be folded for more compact storage.
- **Durability:** The car is constructed from durable, double-walled plastic designed to resist chipping, fading, cracking, and peeling, ensuring years of use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Wheels are wobbly or come off.	Wheel caps not fully seated or damaged.	Ensure wheel caps are securely pushed onto the axles. Use a rubber mallet if necessary. If damaged, contact customer support for replacement parts.
Difficulty turning the car.	Wheels are fixed and not designed to pivot like a stroller.	Apply gentle downward pressure on the push handle to slightly lift the front wheels, then pivot the car in the desired direction.
Push handle feels loose.	Mounting hardware for the handle is not tightened.	Check and tighten all bolts and nuts securing the push handle to the car body.
Horn not working.	Possible internal mechanism issue or obstruction.	Ensure no debris is obstructing the horn mechanism. If the issue persists, contact customer support.

SPECIFICATIONS

- **Model Number:** 823000
- **Product Dimensions (Assembled):** 45.5 inches (L) x 19 inches (W) x 34 inches (H)
- **Item Weight:** 15.62 pounds
- **Recommended Age:** 18 months - 4 years
- **Maximum Weight Capacity:** 50 lbs (22.7 kg)
- **Material:** Durable Double-Walled Plastic



Figure 8: Detailed dimensions of the Step2 Whisper Ride II Buggy for reference.

WARRANTY AND SUPPORT


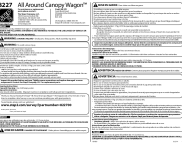 



For warranty information, replacement parts, or further assistance, please contact Step2 Customer Service. Visit the official Step2 website for contact details: [Step2 Official Store](#)

Related Documents - 823000



[Step2 Whisper Ride Cruiser™ - Assembly, Safety, and Usage Guide](#)

Official assembly and safety instructions for the Step2 Whisper Ride Cruiser™. Learn how to safely build and use this ride-on toy for toddlers aged 18-48 months, including parts identification, step-by-step assembly, cleaning, and important safety warnings.

	<p>Step2 Whisper Ride II Buggy Assembly and Safety Instructions</p> <p>Comprehensive guide to assembling and safely using the Step2 Whisper Ride II Buggy (Models 8230, 8242). Includes safety warnings, parts list, step-by-step assembly, and care instructions for children aged 18 months to 48 months.</p>
	<p>Step2 8227 All Around Canopy Wagon™ - Assembly Instructions and Safety Guide</p> <p>This document provides comprehensive safety warnings, usage guidelines, cleaning, and disposal instructions for the Step2 8227 All Around Canopy Wagon™. It includes detailed, step-by-step assembly instructions with textual descriptions of diagrams.</p>
	<p>Step2 Up & Down Roller Coaster Assembly and Safety Instructions</p> <p>Comprehensive safety warnings, assembly instructions, and usage guidelines for the Step2 Up & Down Roller Coaster (Models 4051, 4243) for children aged 2-5 years. Includes inspection, cleaning, and disposal information.</p>
	<p>Step2 Up & Down Roller Coaster: Safety, Assembly & Usage Guide for Kids</p> <p>Comprehensive safety instructions, assembly guide, and usage tips for the Step2 Up & Down Roller Coaster toy, designed for children aged 2-5 years. Includes warnings, cleaning, and disposal information.</p>
	<p>Step2 Double Showers Splash Water Table: Assembly & Safety Guide (Model 421500)</p> <p>Comprehensive assembly instructions, safety warnings, and care guide for the Step2 Double Showers Splash Water Table (Model 421500). Includes details on adult supervision, cleaning, and product specifications.</p>