

**Figure 1:** Coby DVD-238 Remote Control. The image displays the silver-colored remote control with its battery compartment cover removed, revealing two AAA batteries next to it. The remote features various control buttons for DVD playback and functions.

## 2. SETUP

---

### 2.1 Battery Installation

The Coby DVD-238 remote control requires two AAA batteries for operation. Batteries are typically included with the remote.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

**Note:** Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

## 3. OPERATING THE REMOTE CONTROL

---

This section details the functions of the buttons on your Coby DVD-238 remote control.

### 3.1 Power and Basic Functions

- **STANDBY:** Turns the DVD player on or off (standby mode).
- **OPEN/CLOSE:** Opens or closes the disc tray.
- **MUTE:** Mutes or unmutes the audio output.
- **VOL+ / VOL-:** Increases or decreases the volume.

### 3.2 Playback Controls

- **PLAY:** Starts or resumes disc playback.
- **PAUSE:** Pauses playback. Press again to resume.
- **STOP:** Stops disc playback.
- **REW (Rewind):** Rewinds playback.
- **F.F (Fast Forward):** Fast forwards playback.
- **PREVIOUS / NEXT (Chapter):** Skips to the previous or next chapter/track.
- **SEARCH:** Initiates search function (specific to disc content).

### 3.3 Navigation and Numeric Input

- **Arrow Buttons (Up, Down, Left, Right):** Navigates through menus and options.
- **ENTER:** Confirms a selection.
- **Numeric Keypad (0-9, 10+):** Directly selects track numbers, chapters, or enters values.

### 3.4 Special Functions

- **SETUP:** Accesses the DVD player's setup menu.
- **TITLE:** Returns to the disc's title menu.
- **MENU:** Accesses the disc's main menu.
- **SUBTITLE:** Cycles through available subtitle languages.
- **ANGLE:** Changes the camera angle if available on the disc.
- **LANGUAGE:** Selects audio language.
- **VIDEO/PSCAN (Progressive Scan):** Toggles video output modes.

- **N/P:** Likely for NTSC/PAL video format selection.
- **L/R:** Selects left or right audio channel.
- **OSD (On-Screen Display):** Displays information on the screen.
- **GOTO:** Allows direct navigation to a specific time or chapter.
- **REPEAT:** Repeats a chapter, title, or entire disc.
- **A-B:** Repeats a specific segment between points A and B.
- **PBC (Playback Control):** Activates or deactivates Playback Control for VCDs.
- **STEP:** Advances playback frame by frame.
- **SLOW PROGRAM:** Activates slow-motion playback.
- **ZOOM:** Zooms in on the video image.

## 4. MAINTENANCE

---

### 4.1 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's finish or buttons.

### 4.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops functioning. Refer to Section 2.1 for battery installation instructions. Always dispose of used batteries responsibly according to local regulations.

## 5. TROUBLESHOOTING

---

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace the batteries with new ones.
  - Ensure there are no obstructions between the remote control and the DVD player's infrared sensor.
  - Make sure you are within the effective range of the DVD player.
- **Specific buttons not working:**
  - Clean the remote control surface, especially around the non-functional buttons, to remove any dirt or debris.
  - If only certain buttons fail, the remote may be damaged and require replacement.

## 6. SPECIFICATIONS

---


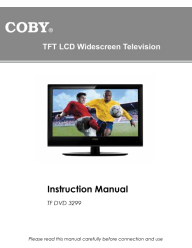




Feature	Detail
Brand	Coby
Model Number	DVD-238 (Remote Control Model: REMOTE_CONTROL-238)
Connectivity Technology	Infrared
Compatible Devices	Coby DVD-238 DVD Player, other compatible DVD/Blu-ray Players
Power Source	2 x AAA Batteries (1.5V each)
Special Feature	Compact design

## 7. WARRANTY AND SUPPORT

Information regarding warranty coverage for the Coby DVD-238 remote control is not provided in this manual. For warranty details, technical support, or service inquiries, please refer to the documentation that came with your Coby DVD player or visit the official Coby support website.

You may also find additional support resources by visiting the [Coby Store on Amazon](#).

### Related Documents - DVD-238

	<p><a href="#">Coby DVD209 DVD Player Bottom Portion Replacement Guide</a></p> <p>A step-by-step repair guide from iFixit for replacing the bottom portion of a Coby DVD209 DVD player. Learn how to safely remove screws, disconnect cables, and access internal components.</p>
	<p><a href="#">COBY TF DVD 3299 TFT LCD Widescreen Television Instruction Manual</a></p> <p>Comprehensive instruction manual for the COBY TF DVD 3299 TFT LCD Widescreen Television. Learn about setup, operation, safety, and troubleshooting for your COBY television with integrated DVD player.</p>
	<p><a href="#">Coby MP201 USB MP3 Player Instruction Manual</a></p> <p>Comprehensive instruction manual for the Coby MP201 USB MP3 Player, covering setup, features, controls, music playback, software installation, and troubleshooting.</p>
	<p><a href="#">Coby MP-610 MP3 &amp; Video Player Quick Setup Guide</a></p> <p>Quick setup guide for the Coby MP-610 MP3 &amp; Video Player with FM Radio, covering music, video, and photo file transfer using Windows Media Player and conversion software.</p>
	<p><a href="#">Coby CD201 Wireless Anti-Skip CD Player User Manual</a></p> <p>User manual for the Coby CD201 Wireless Anti-Skip CD Player, covering features, operation, charging, Bluetooth audio-out, FM radio, specifications, safety precautions, and warranty information.</p>
	<p><a href="#">Coby Digital Photo Frame Alarm Clock Teardown Guide</a></p> <p>A detailed teardown guide of the Coby Digital Photo Frame Alarm Clock (Model DP356) by iFixit, exploring its internal components and reparability.</p>

