

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Takex](#) /

› [Takex BT-TAM Anti-Climb Tamper Top Instruction Manual](#)

Takex BT-TAM

Takex BT-TAM Anti-Climb Tamper Top Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the proper installation, operation, and maintenance of the Takex BT-TAM Anti-Climb Tamper Top. Please read this manual thoroughly before attempting to install or operate the device to ensure correct usage and optimal performance. Keep this manual for future reference.

PRODUCT OVERVIEW

The Takex BT-TAM is an anti-climb tamper top designed for use with 2-sided beam towers. It enhances the security of perimeter protection systems by deterring unauthorized climbing and providing tamper detection capabilities.



Figure 1: Takex BT-TAM Anti-Climb Tamper Top. This image shows the physical structure of the tamper top designed for beam towers.

SETUP AND INSTALLATION

Proper installation is crucial for the effective operation of the BT-TAM unit. Follow these steps carefully:

- 1. Preparation:** Ensure the 2-sided beam tower is securely mounted and stable before attaching the BT-TAM. Verify that all necessary mounting hardware is available.
- 2. Mounting:** Align the BT-TAM unit with the top of the beam tower. Secure it using the provided fasteners. Ensure a snug fit to prevent movement or vibration that could trigger false alarms.
- 3. Wiring (if applicable):** If the BT-TAM includes tamper detection wiring, connect it to the appropriate alarm panel inputs according to the alarm system's specifications. Refer to the alarm panel's manual for wiring diagrams.
- 4. Testing:** After installation, perform a functional test. Attempt to climb the tower or apply pressure to the tamper top to verify that the alarm system registers the tamper event correctly.

OPERATING INSTRUCTIONS

The Takex BT-TAM is a passive security enhancement. Once correctly installed and connected to a compatible alarm system, it operates continuously to detect tampering or climbing attempts.

- Continuous Monitoring:** The unit provides constant tamper detection when the alarm system is armed.
- Alarm Activation:** Any attempt to climb over or tamper with the beam tower where the BT-TAM is installed will trigger an alarm signal to the connected security panel.
- System Integration:** Ensure your security system is configured to properly interpret and respond to the tamper signals from the BT-TAM.

MAINTENANCE

Regular maintenance ensures the longevity and reliability of your BT-TAM unit.

- **Cleaning:** Periodically clean the exterior of the BT-TAM with a soft, damp cloth to remove dust, dirt, or debris. Avoid abrasive cleaners or solvents.
- **Inspection:** Annually inspect the unit for any signs of physical damage, loose connections, or wear. Check mounting screws for tightness.
- **Functionality Test:** Conduct a functional test at least once every six months to confirm the tamper detection mechanism is working correctly and communicating with the alarm panel.

TROUBLESHOOTING

If you encounter issues with your Takex BT-TAM, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No tamper alarm when activated.	Loose wiring connection; Faulty wiring; Incorrect alarm panel configuration; Damaged BT-TAM unit.	Check all wiring connections for tightness. Inspect wiring for damage. Verify alarm panel programming. Contact technical support if unit is suspected to be faulty.
False alarms.	Loose mounting; Environmental factors (e.g., strong winds, vibrations); Incorrect sensitivity setting (if adjustable).	Ensure the BT-TAM is securely mounted. Evaluate environmental conditions. Consult alarm panel manual for sensitivity adjustments if applicable.

SPECIFICATIONS

- **Model:** BT-TAM
- **Type:** Anti-Climb Tamper Top
- **Compatibility:** Designed for 2-sided beam towers
- **Manufacturer:** Takex
- **Date First Available:** June 20, 2012

WARRANTY AND SUPPORT

Specific warranty information for the Takex BT-TAM is typically provided at the point of purchase or within the product packaging. For detailed warranty terms, please refer to your purchase documentation or contact your authorized Takex dealer.

For technical support or further assistance, please contact your local Takex distributor or visit the official Takex website for contact information.

Note: This manual is subject to change without notice. The latest version may be available on the manufacturer's website.