

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Conair](#) /

› [Conair 169WIW Ionic Cord Keeper Hair Dryer - 1875W User Manual](#)

### Conair 169WIW

# Conair 169WIW Ionic Cord Keeper Hair Dryer - 1875W

User Manual

## IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

- Keep out of reach of children.
- Do not use this appliance while wet or in the presence of water.
- Keep the power plug and cord away from heated surfaces.
- Always unplug the appliance when not in use.
- If the hair dryer falls into water, do not reach for it. Unplug immediately.

## PRODUCT OVERVIEW

The Conair 169WIW Ionic Cord Keeper Hair Dryer is designed for efficient and convenient hair drying. Key features include:

- **Ionic Technology:** Helps reduce frizz and enhance hair shine for a smoother finish.
- **Retractable Power Cord:** A convenient push-button mechanism allows the power cord to retract into the handle for tangle-free storage.
- **Folding Handle:** The handle folds for compact storage, making it ideal for travel or small spaces.
- **Cool Shot Button:** Provides a burst of cool air to set your hairstyle.
- **Multiple Heat/Speed Settings:** Offers two heat and two speed settings to suit various hair types and styling needs.
- **Powerful 1875 Watts:** Delivers strong airflow for fast drying.



Figure 1: Front view of the Conair 169WIW Ionic Cord Keeper Hair Dryer, showing the nozzle and main body.



Figure 2: Side view of the hair dryer, highlighting the handle, heat/speed settings, and cool shot button.



Figure 3: Top view of the hair dryer, illustrating the 'Hold Button To Retract Cord' mechanism.

## SETUP

- Unpack:** Carefully remove the hair dryer and any accessories from its packaging.
- Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
- Extend Cord:** Gently pull the power cord from the base of the handle until it is fully extended.
- Plug In:** Insert the power plug into a standard 125V electrical outlet. Ensure the outlet is easily accessible.

## OPERATING INSTRUCTIONS

- Power On/Off:** Locate the slide switch on the handle. Slide it to the 'LOW' or 'HIGH' position to turn the dryer on. Slide it to 'OFF' to turn the dryer off.
- Select Heat/Speed:** The slide switch also controls the heat and speed settings. Choose between 'LOW' (lower heat, lower speed) or 'HIGH' (higher heat, higher speed) according to your preference and hair type.
- Use Cool Shot:** For setting your hairstyle, press and hold the blue 'COOL' button located above the slide switch. This will provide a burst of cool air. Release the button to return to the selected heat setting.
- Retract Cord:** After use, ensure the hair dryer is unplugged from the outlet. Press and hold the 'Hold Button To Retract Cord' button on the top of the dryer. The cord will automatically retract into the handle. Guide the cord gently to prevent tangling.
- Fold Handle:** For compact storage, gently fold the handle towards the body of the dryer until it locks into place.

## MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your hair dryer.

- Cleaning the Air Filter:** The rear filter of the hair dryer should be cleaned periodically to prevent lint and dust buildup, which can affect performance and lead to overheating. To clean, twist or pull off the filter cover, remove any accumulated lint or hair, and then securely replace the filter cover.
- General Cleaning:** Wipe the exterior surfaces of the hair dryer with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
- Storage:** When not in use, store the hair dryer in a cool, dry place. Ensure the cord is fully retracted and the handle is folded for compact storage. Do not wrap the cord tightly around the appliance, as this can damage the cord.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Hair dryer does not turn on.	Not properly plugged in; power outlet issue; tripped circuit breaker.	Ensure the hair dryer is firmly plugged into a working electrical outlet. Check your household circuit breaker. If the GFCI on the plug has tripped (indicated by a small button), press it to reset.
Hair dryer stops during use.	Overheating protection activated.	Unplug the hair dryer and allow it to cool down for 10-15 minutes. Clean the air filter to ensure proper airflow.
Power cord does not retract.	Cord is tangled or obstructed; button not pressed firmly enough.	Ensure the hair dryer is unplugged. Gently guide the cord while pressing and holding the retract button firmly. Check for any obstructions.

## SPECIFICATIONS

Feature	Detail
Brand	Conair
Model Number	169WIW
Wattage	1875 watts
Power Source	Corded Electric
Color	White
Material	Plastic
Product Dimensions	7.25 x 4 x 14.25 inches
Weight	1.5 Pounds

## WARRANTY AND SUPPORT

---

For detailed warranty information, please refer to the documentation included with your product or visit the official Conair website. For customer support, product registration, or to inquire about replacement parts, please contact Conair customer service directly.

**Manufacturer:** CONAIR

**Date First Available:** September 17, 2010