

PHILIPS HD5015

Philips HD5015 Two-Cup Pod Holder User Manual

For Senseo Latte Select HD7854 and compatible models

1. INTRODUCTION

This manual provides instructions for the proper use and maintenance of your Philips HD5015 Two-Cup Pod Holder. This accessory is designed to enhance your coffee brewing experience by allowing the preparation of a larger or stronger coffee using two pods. The pod holder ensures optimal pressure application for consistent coffee quality.

2. COMPATIBILITY

The Philips HD5015 Two-Cup Pod Holder is an original Philips product designed for specific Senseo coffee machine models. Please verify your machine's model number, which is typically found on a sticker underneath the appliance. Ensure the four digits following 'HD' match one of the models listed below:

- **Senseo Viva Café:** HD7821, HD7825, HD7826, HD7827, HD7828, HD7829, HD7831, HD7835, HD7836
- **Senseo Latte Select:** HD7850, HD7852, HD7854
- **Senseo Latte Duo:** HD7855, HD7856, HD7857, HD6570, HD6574
- **Senseo Quadrante:** HD7860, HD7862, HD7863, HD7864, HD7865, HD7866, HD7868
- **Senseo Twist:** HD7870, HD7871, HD7872, HD7873, HD7874
- **Senseo Cappuccino Select:** HD7853

3. SETUP AND INSTALLATION

To install the two-cup pod holder:

1. Ensure your Senseo coffee machine is unplugged and cool.
2. Open the lid of your coffee machine.
3. Carefully remove the existing pod holder (if any) by lifting it out.
4. Insert the Philips HD5015 Two-Cup Pod Holder into the designated slot, ensuring it sits firmly and correctly.
5. Close the lid of the coffee machine.



Figure 1: Top view of the Philips HD5015 Two-Cup Pod Holder, showing the internal metal basket and black rubber base where coffee pods are placed.

4. OPERATING INSTRUCTIONS

This pod holder is designed for use with two coffee pods to brew a larger or stronger cup of coffee.

1. Open the lid of your Senseo coffee machine.
2. Place two Senseo coffee pods side-by-side into the HD5015 Two-Cup Pod Holder. Ensure they lie flat and are centered within the holder.
3. Close the lid of the coffee machine firmly.
4. Select your desired cup size and start the brewing process according to your Senseo machine's instructions.
5. After brewing, open the lid and carefully remove the used coffee pods and the pod holder for cleaning.



Figure 2: Bottom view of the Philips HD5015 Two-Cup Pod Holder, showing the base and the mechanism for water flow.

5. MAINTENANCE AND CLEANING

Regular cleaning of your pod holder is essential for optimal performance and hygiene.

- After each use, remove the pod holder from the machine.
- Discard used coffee pods.
- Rinse the pod holder under running water to remove any coffee residue.
- **Important:** This pod holder is **not** dishwasher safe. Clean it by hand using warm water and a mild detergent.
- Ensure the pod holder is completely dry before storing or reinserting into the coffee machine.

6. TROUBLESHOOTING

If you encounter issues with your pod holder, consider the following:

- **Coffee not brewing correctly:** Ensure the pod holder is correctly seated in the machine and that the coffee pods are placed flat and centered.
- **Water leakage:** Check that the pod holder is clean and free from any coffee grounds that might obstruct a proper seal. Ensure the machine's lid is closed firmly.
- **Difficulty inserting/removing:** Make sure the pod holder is aligned correctly with the machine's slot. Do not force it.




7. SPECIFICATIONS




Brand	PHILIPS
Model Number	HD5015
Color	Black
Product Dimensions (L x W x H)	21 x 17 x 14 cm
Capacity	2 Coffee Pods
Item Weight	40 grams
Automatic Shut-off Function	No (Refers to the pod holder itself)
Dishwasher Safe	No

8. WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts, please visit the official Philips website or contact Philips customer service in your region. Keep your proof of purchase for any warranty claims. You can find more information and support at the [Philips Brand Store](#).

Related Documents - HD5015

 <p>Support your product and get support at www.philips.com/welcome HD7852 HD7850</p> <p>PHILIPS</p>	<p>Philips Senseo HD7852, HD7850 User Manual</p> <p>Comprehensive user manual for the Philips Senseo HD7852 and HD7850 coffee machines, covering setup, operation, cleaning, and maintenance for various coffee specialties.</p>
	<p>Philips SENSEO® Coffee Machine User Manual and Guide</p> <p>Comprehensive user guide for Philips SENSEO® coffee machines (models HD6554, HD6555, HD6556), covering setup, operation, safety precautions, maintenance, troubleshooting, and warranty information.</p>
	<p>Philips Senseo Original Plus CSA210/60 Coffee Pod Machine User Manual</p> <p>Comprehensive user manual for the Philips Senseo Original Plus CSA210/60 coffee pod machine, covering setup, brewing, cleaning, and descaling instructions.</p>

	<p>Philips Senseo Original Plus CSA210 User Manual</p> <p>Comprehensive user manual for the Philips Senseo Original Plus CSA210 coffee machine, covering safety information, usage instructions, brewing coffee, cleaning, descaling, and troubleshooting.</p>
	<p>Philips Senseo Coffee Machine User Manual and Safety Guide</p> <p>Comprehensive guide for the Philips Senseo coffee machine, covering important safety information, usage instructions, cleaning, and troubleshooting.</p>
	<p>Philips Senseo CSA210 Coffee Machine User Manual and Safety Guide</p> <p>Comprehensive guide for the Philips Senseo CSA210 coffee machine, covering important safety information, usage instructions, cleaning, descaling, and troubleshooting.</p>