

[manuals.plus](#) /› [Furby](#) /› [Furby Model A3174 Interactive Electronic Pet User Manual](#)

Furby A3174

Furby Model A3174 Interactive Electronic Pet User Manual

Model: A3174 | Brand: Furby

1. INTRODUCTION

The Furby interactive electronic pet is designed to engage users through various interactions, developing a unique personality based on how it is treated. This manual provides instructions for setting up, operating, and maintaining your Furby.

2. SETUP

2.1 Battery Installation

Your Furby requires four (4) AA alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the underside of your Furby.
2. Using a Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert four fresh AA alkaline batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

Note: Batteries are not included with the product.

2.2 Initial Power On

Once batteries are installed, your Furby will typically activate automatically. If not, gently shake or interact with it to wake it up.

3. OPERATING INSTRUCTIONS

Your Furby is an interactive electronic pet that responds to various stimuli. Its personality will evolve based on your interactions.

3.1 Physical Interaction

- **Petting:** Gently pet Furby's head or back.
- **Tickling:** Tickle Furby's tummy.
- **Pulling Tail:** Gently pull Furby's tail.

- **Tilting/Shaking:** Tilt, shake, or turn Furby upside down.

Each interaction may elicit a different response and contribute to its personality development.

3.2 Voice and Music Interaction

- **Speaking:** Furby responds to your voice. Speak clearly to it.
- **Music:** Furby recognizes music and may dance along.

3.3 Feeding Furby

You can feed your Furby in two ways:

- **Finger Feeding:** Pretend to give Furby food by placing your finger in its mouth.
- **Virtual Feeding:** Use the optional Furby app to virtually feed your Furby with various foods.

3.4 Furbish Language and Translation

When you first interact with Furby, it will primarily speak Furbish. The more you play with it, the more English it will begin to speak.

- **Furbish Dictionary:** A complete Furbish dictionary is available online at www.furby.com.
- **Furby App Translator:** The free Furby app includes a Furbish-to-English translator.

3.5 Interacting with Other Furbys

Your Furby can interact with other Furbys (each sold separately). Introduce them to observe their unique interactions.

3.6 Personality Development

How you treat your Furby will shape its personality. Your actions, such as feeding, tickling, shaking, tilting, pulling its tail, speaking to it, or playing music, all influence its character. Furby has its own likes and dislikes, and its reactions may vary.



Image: A teal Furby interactive electronic pet, front view, showcasing its large eyes and soft fur.



Image: A teal Furby peeking out of a bag, demonstrating its portability and companionship.

3.7 Official Product Video

Your browser does not support the video tag.

Video: An official product video from Hasbro demonstrating various ways to interact with Furby, including petting, tilting, shaking, feeding, and using the app for translation.

4. FURBY APP (OPTIONAL)

The free Furby app enhances your interaction with Furby. It is optional and not required for basic operation.

- **Furbish Translation:** Translate Furbish into English.
- **Virtual Feeding:** Feed your Furby virtually and observe its reactions.
- **Other Interactive Features:** Explore additional interactive functionalities within the app.

Compatibility: The app works with iPad, iPod touch, and iPhone with iOS 4.2 or later. Not all functions may work with older devices.

5. MAINTENANCE

5.1 Cleaning

To clean your Furby, gently wipe its surface with a soft, dry cloth. Avoid using water or cleaning solutions directly on the product.

5.2 Battery Replacement

When Furby's responses become sluggish or it stops functioning, it may be time to replace the batteries. Refer to Section 2.1 for battery installation instructions.

6. TROUBLESHOOTING

- **Furby is unresponsive:** Check if the batteries are correctly installed and have sufficient charge. Replace if necessary.
- **Furby's personality changed unexpectedly:** This is a designed feature. Furby's personality evolves based on interactions. Continue playing to influence its character.
- **No power/Does not turn on:** Ensure fresh batteries are installed correctly.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	5 x 7.99 x 7.99 inches
Item Weight	1 pound
Model Number	A3174
Manufacturer	Hasbro
Recommended Age	8 months - 8 years
Batteries Required	4 AA batteries (not included)
Release Date	September 16, 2012

8. WARRANTY AND SUPPORT

8.1 Legal Disclaimer

No returns if the product is opened. The item comes brand new in the box.

8.2 Manufacturer Support

For further assistance or inquiries, please contact Hasbro customer support.

© 2012 Hasbro. All Rights Reserved.

The information provided herein is as complete and accurate as possible; however, product names, colors, and/or materials are subject to change without notice.