#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- > RHYTHM /
- > RHYTHM Clocks Ivory Cottage Model 4MH873WU03 Instruction Manual

#### RHYTHM 4MH873WU03

# RHYTHM Clocks Ivory Cottage Model 4MH873WU03 Instruction Manual

Your guide to setting up, operating, and maintaining your RHYTHM musical wall clock.

## Introduction

Thank you for choosing a RHYTHM musical wall clock. This manual provides detailed instructions for the proper setup, operation, and care of your Ivory Cottage Model 4MH873WU03 clock. Please read this manual thoroughly before using your clock to ensure optimal performance and longevity.

## PRODUCT OVERVIEW

The RHYTHM Ivory Cottage clock is an elegant analog wall clock featuring a classic design and musical capabilities. It is designed to enhance your living space with both its aesthetic appeal and its melodic hourly chimes.



Figure 1: Front view of the RHYTHM Ivory Cottage Model 4MH873WU03 musical wall clock. The clock features an oval, ivory-colored wooden frame, an analog dial with clear Arabic numerals, and intricate visible internal mechanisms, including a decorative rotating element at the bottom.

# **SETUP**

# 1. Unpacking

- Carefully remove the clock from its packaging.
- Inspect the clock for any signs of damage. If damage is found, contact your retailer immediately.
- Retain the packaging materials for future transport or storage.

## 2. Battery Installation

- 1. Locate the battery compartment on the back of the clock.
- 2. Open the battery compartment cover.
- 3. Insert the required batteries (typically C or D size, refer to the compartment label) according to the polarity indicators (+ and -). *Batteries are not included with the clock*.
- 4. Close the battery compartment cover securely.

## 3. Time Setting

- After installing batteries, the clock hands may begin to move automatically.
- To set the time, locate the time setting knob or wheel on the back of the clock.
- Gently turn the knob/wheel clockwise to advance the minute hand until the correct time is displayed. Avoid turning counter-clockwise as this may damage the movement.
- Allow the clock to run for a few minutes to ensure it is keeping accurate time.

#### 4. Mounting

- Select a suitable location on a wall, ensuring it is sturdy enough to support the clock's weight (approximately 8.8 pounds).
- Use appropriate wall anchors and screws for secure mounting.

• Hang the clock using the designated hanging slot on the back.

## **OPERATING INSTRUCTIONS**

# 1. Chime/Melody Selection

Your RHYTHM Ivory Cottage clock features a selection of melodies. Locate the melody selector switch or button on the side or back of the clock. Cycle through the options to choose your preferred melody. The clock will play a demonstration of each melody as you select it.

#### 2. Volume Control

A volume control dial or switch is typically located near the melody selector. Adjust this control to set the desired volume level for the hourly melodies.

# 3. Automatic Nighttime Shutoff

Many RHYTHM musical clocks include an automatic nighttime shutoff feature, which silences the melodies during specific hours (e.g., 11:00 PM to 5:45 AM). This feature is typically light-sensor activated or time-based. Refer to the specific markings near the controls for activation or deactivation.

## **MAINTENANCE**

# 1. Cleaning

- Wipe the clock's frame and glass with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish.
- For intricate parts, use a soft brush to gently remove dust.

## 2. Battery Replacement

- Replace all batteries at the same time, approximately once a year, or when the clock begins to lose time or the melodies become faint.
- Always use new, high-quality batteries of the specified type.
- Remove depleted batteries promptly to prevent leakage and damage to the clock mechanism.

# **T**ROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not running or running slowly.	Depleted or incorrectly installed batteries.	Replace all batteries with new ones, ensuring correct polarity.
Melodies are faint or not playing.	Low battery power; volume set too low; nighttime shutoff active.	Replace batteries; adjust volume control; check nighttime shutoff settings.
Time is incorrect after setting.	Hands were not set accurately; clock movement issue.	Re-set the time carefully. If problem persists after new batteries, contact support.
Decorative elements not moving.	Low battery power; obstruction.	Replace batteries. Ensure no foreign objects are obstructing the movement.

# **SPECIFICATIONS**

**Brand: RHYTHM** 

Model: Ivory Cottage (4MH873WU03)

Display Type: Analog

Style: Classic

Special Features: Musical Chimes, Silent Clock Movement (referring to the time-keeping mechanism, not

the chimes)

Power Source: Battery Powered (Batteries not included)

Material: Wood

**Product Dimensions:** 16.5 inches (W) x 19.8 inches (H)

Item Weight: 8.8 pounds UPC: 009136873038

# WARRANTY AND SUPPORT

RHYTHM clocks are manufactured with high standards of quality. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official RHYTHM website. For technical support or service inquiries, please contact your retailer or the RHYTHM customer service department.

You can find more information and contact details on the official RHYTHM website.www.rhythmclocks.com

© 2023 RHYTHM Clocks. All rights reserved.

#### Related Documents - 4MH873WU03











