

[Manuals.plus](#) /

› [Ariete](#) /

› Ariete 4160 Steam Mop 1500W User Manual

Ariete AR4160

Ariete 4160 Steam Mop 1500W User Manual

Model: AR4160

1. INTRODUCTION

Thank you for choosing the Ariete 4160 Steam Mop. This appliance is designed to clean and sanitize various floor surfaces using the power of steam, without the need for harsh chemicals. Please read this manual carefully before operating the device to ensure safe and efficient use. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before use.
- Do not leave the steam mop unattended while plugged in or operating.
- Keep the appliance out of reach of children and pets.
- Use only tap water in the water tank. Do not add cleaning solutions, perfumes, or other chemicals, as this may damage the appliance and void the warranty.
- Do not direct steam at people, animals, or electrical outlets.
- Always unplug the appliance before filling or emptying the water tank, or when not in use.
- Do not immerse the appliance in water or any other liquid.
- Do not operate the appliance with a damaged cord or plug.
- Ensure the power cord is not trapped under the appliance or near hot surfaces.
- Use the appliance only for its intended household cleaning purpose.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Ariete 4160 Steam Mop unit
- Carpet Glider attachment
- 2 Microfiber cloths



Image 3.1: The Ariete 4160 Steam Mop shown with its included accessories: the main unit, a carpet glider, and two microfiber cloths.

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Ariete 4160 Steam Mop.





Image 4.1: The Ariete 4160 Steam Mop in its upright position, showcasing its yellow and grey design, handle, water tank, and triangular cleaning head.

Key features include:

- **Handle:** Ergonomically designed for comfortable grip.
- **Foldable Handle Mechanism:** Allows for compact storage.
- **Water Tank:** Removable 600ml capacity for easy refilling.
- **Power Indicator Light:** Illuminates when the unit is powered on and heating.
- **Steam Head:** Triangular design with 180° rotation for reaching corners and maneuvering around furniture.

- **Microfiber Cloth Attachment:** Secures the cleaning cloth to the steam head.
- **Power Cord:** 8-meter length for extended reach.

5. SETUP

Follow these steps to prepare your steam mop for first use:

1. **Assemble the Handle:** If the handle is folded for storage, unfold it until it locks securely into the upright position.
2. **Attach Microfiber Cloth:** Place a clean microfiber cloth onto the steam head, ensuring it covers the entire surface and is securely fastened.
3. **Remove Water Tank:** Gently pull the removable water tank from the main unit.



Image 5.1: A hand demonstrating the removal of the transparent water tank from the main body of the Ariete 4160 Steam Mop.

- 4. Fill Water Tank:** Fill the water tank with clean tap water. Do not overfill beyond the maximum fill line.



Image 5.2: A hand holding the water tank under a running faucet, illustrating the process of filling it with water.

5. Reinsert Water Tank: Place the filled water tank back into the steam mop until it clicks securely into place.

6. OPERATING INSTRUCTIONS

Before operating, ensure the water tank is filled and a microfiber cloth is attached.

1. **Power On:** Plug the power cord into a suitable electrical outlet (230V). The power indicator light will illuminate, indicating the unit is heating up.
2. **Heating Time:** Allow approximately 30 seconds for the water to heat and steam to be ready.
3. **Start Cleaning:** Once heated, move the steam mop across the floor surface. Steam will be released automatically. The 180° rotating head allows for easy maneuverability around obstacles and into tight spaces.



Image 6.1: The Ariete 4160 Steam Mop being used on a tiled floor, demonstrating its cleaning action.

4. **Cleaning Carpets:** For refreshing carpets, attach the carpet glider over the microfiber cloth and steam head. Move the mop slowly over the carpet surface.



Image 6.2: The Ariete 4160 Steam Mop with the carpet glider attachment in place, being used to clean or refresh a light-colored rug.

5. **Refilling During Use:** If the water tank becomes empty during cleaning, unplug the unit, remove and refill the tank as described in Section 5, then re-plug and allow to reheat.
6. **Finishing Cleaning:** When finished, unplug the steam mop from the electrical outlet.

7. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your steam mop.

- **Empty Water Tank:** After each use, unplug the appliance and allow it to cool. Remove the water tank and empty any remaining water.
- **Clean Microfiber Cloths:** Remove the microfiber cloths and wash them according to their care instructions. They are typically machine washable.
- **Clean Exterior:** Wipe the exterior of the steam mop with a damp cloth. Do not use abrasive cleaners or solvents.
- **Filter Maintenance:** The appliance features an integrated filter against microorganisms. While designed for minimal maintenance, if you notice reduced steam output or mineral buildup, consult the manufacturer's website or customer support for descaling instructions specific to this model.
- **Storage:** Once completely cool and dry, fold the handle for compact storage. Store the steam mop in a dry, safe place.





Image 7.1: The Ariete 4160 Steam Mop demonstrating its foldable handle feature, allowing for more compact storage.

8. TROUBLESHOOTING

If you encounter issues with your Ariete 4160 Steam Mop, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam output	Water tank is empty Appliance not heated sufficiently Mineral buildup in the system	Refill the water tank Allow 30 seconds for heating after plugging in Perform descaling procedure (refer to manufacturer's guidelines)
Water marks left on floor	Microfiber cloth is too wet or dirty Mop moved too slowly Excessive steam for surface type	Replace or clean microfiber cloth Move the mop at a consistent, moderate pace Ensure the cloth is properly attached and not saturated before use
Power indicator light not on	Appliance not plugged in Power outlet malfunction	Ensure the power cord is securely plugged into a working outlet Test the outlet with another appliance

If the problem persists after trying these solutions, please contact customer support.

9. SPECIFICATIONS

Feature	Specification
Brand	Ariete
Model Number	AR4160
Power	1500 Watts
Voltage	230 Volts
Water Tank Capacity	600 ml
Dimensions (L x W x H)	30 x 25 x 120 cm

Feature	Specification
Weight	2.5 Kilograms
Cable Length	8 meters
Special Features	180° rotating cleaning head, Foldable handle, Integrated filter
Included Components	Carpet glider, 2 microfiber cloths
Certifications	CE/GS

10. WARRANTY AND SUPPORT

The Ariete 4160 Steam Mop is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, spare parts, or further assistance, please contact Ariete customer service through their official website or the contact information provided in your product packaging.