

Thrustmaster 4160580

Thrustmaster F1 Wireless Ferrari 150 Italia Gamepad User Manual

MODEL: 4160580

This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your Thrustmaster F1 Wireless Ferrari 150 Italia Gamepad. Please read this manual carefully before using the product.

1. Setup

The Thrustmaster F1 Wireless Ferrari 150 Italia Gamepad is compatible with PC and PlayStation 3. Follow these steps to set up your gamepad:

- 1. Install Batteries:** Open the battery compartment on the back of the gamepad and insert the required batteries (not included), ensuring correct polarity.
- 2. Connect the Receiver:** Plug the 2.4 GHz wireless receiver into an available USB port on your PC or PlayStation 3 console.
- 3. Power On Gamepad:** Press the 'HOME' or 'MODE' button on the gamepad to power it on. The gamepad should automatically pair with the receiver. An indicator light on the gamepad will confirm a successful connection.
- 4. Driver Installation (PC Only):** For PC use, ensure the necessary drivers are installed. These are typically detected and installed automatically by Windows. If not, visit the official Thrustmaster support website to download the latest drivers.



This image displays the Thrustmaster F1 Wireless Ferrari 150 Italia Gamepad. The controller features a distinctive red and white color scheme, inspired by Ferrari's F1 racing livery. Visible controls include a directional pad on the left, four action buttons (labeled 1, 2, 3, 4) on the right, two analog sticks, and central function buttons (MODE, MAP, SET, 9, 10). The design incorporates sponsor logos such as Santander, Shell, Kaspersky, Pirelli, and Fiat, along with the Ferrari emblem.

2. Operating Instructions

The gamepad offers various features for an enhanced gaming experience:

- **2.4 GHz Wireless Connectivity:** Provides a reliable wireless connection to your PC or PlayStation 3.
- **Optical Wheel with Auto-Centering:** The directional pad (D-Pad) features an optical wheel design that automatically re-centers for precise control.
- **Dual Progressive Triggers:** The L2 and R2 (or equivalent) triggers offer progressive resistance for nuanced control in racing or action games.
- **Fully Programmable Buttons:** All buttons can be programmed to suit your preferences. This gamepad supports MAPPING, PRESET, and Internal Memory functions for custom configurations without requiring a CD. Refer to the 'MAP' and 'SET' buttons for programming instructions.
- **MODE Button:** Switches between different operating modes or profiles, if applicable. Consult your game's settings for optimal configuration.

3. Maintenance

To ensure the longevity and optimal performance of your gamepad, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the surface of the gamepad. Avoid using abrasive cleaners or solvents, as these can damage the finish.
- **Storage:** Store the gamepad in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the gamepad will not be used for an extended period to prevent leakage.
- **Avoid Drops:** Protect the gamepad from physical shocks and drops, which can damage internal components.

4. Troubleshooting

If you encounter issues with your gamepad, try the following solutions:

- **Gamepad Not Connecting:**
 - Ensure the wireless receiver is securely plugged into a USB port.
 - Check if the gamepad batteries are correctly inserted and have sufficient charge. Replace if necessary.
 - Try plugging the receiver into a different USB port.
 - Restart your PC or PlayStation 3.
- **Buttons or Sticks Not Responding:**
 - Verify the gamepad is properly connected and powered on.
 - Test the gamepad in a different game or application to rule out software-specific issues.
 - For PC, ensure drivers are up to date.
- **Intermittent Connection:**
 - Ensure there are no obstructions between the gamepad and the receiver.
 - Move closer to the receiver to improve signal strength.
 - Avoid placing the receiver near other wireless devices that may cause interference.

5. Specifications

Feature	Detail
Model Number	4160580
ASIN	B008DPQ72E
Connectivity	2.4 GHz Wireless
Compatibility	PC, PlayStation 3
Product Dimensions	19.7 x 18.4 x 14 Centimeters (7.76 x 7.24 x 5.51 inches)
Item Weight	386 g (0.85 lbs)
Manufacturer	Thrustmaster

Language (Manual)

English, French

6. Warranty Information

Specific warranty details for the Thrustmaster F1 Wireless Ferrari 150 Italia Gamepad are typically provided with the product packaging or can be found on the official Thrustmaster website. Please retain your proof of purchase for warranty claims.

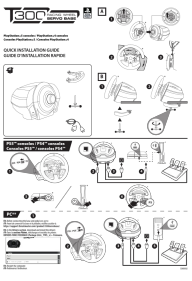

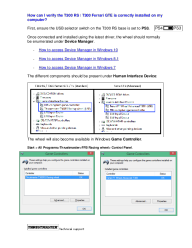
7. Support

For further assistance, technical support, or to access additional resources, please visit the official Thrustmaster support website:

[Thrustmaster Support Website](#)

Related Documents - 4160580

<p>Europe, Middle East ENGLISH FRANÇAIS DEUTSCH NEDERLANDS ITALIANO ESPAÑOL PORTUGUÊS РУССКИЙ ČESKINA TÜRKÇE POLSKI SVENSKA SUOMI SLOVENČINA MAGYAR العربية</p> <p>North America/ Norteamérica ENGLISH FRANÇAIS ESPAÑOL Latin America/ América Latina ENGLISH ESPAÑOL PORTUGUÊS Asia Pacific 日本語 國體中文 繁體中文 한국어 ENGLISH</p> <p>THRUSTMASTER T98 Ferrari 296 GTB</p>	<p>Thrustmaster T98 Ferrari 296 GTB User Manual and Setup Guide</p> <p>User manual for the Thrustmaster T98 Ferrari 296 GTB racing wheel. Learn how to install, set up, and use this high-performance gaming accessory for PlayStation 5, PlayStation 4, and PC. Features include authentic Ferrari design and adjustable driving support.</p>
<p>Europe, Middle East ENGLISH FRANÇAIS DEUTSCH NEDERLANDS ITALIANO ESPAÑOL PORTUGUÊS РУССКИЙ ČESKINA TÜRKÇE POLSKI SVENSKA SUOMI SLOVENČINA MAGYAR العربية</p> <p>North America/ Norteamérica ENGLISH FRANÇAIS ESPAÑOL Latin America/ América Latina ENGLISH ESPAÑOL PORTUGUÊS Asia Pacific 日本語 國體中文 繁體中文 한국어 ENGLISH</p> <p>THRUSTMASTER FORMULA WHEEL ADD-ON FERRARI SF1000 EDITION</p>	<p>Thrustmaster Formula Wheel Add-On Ferrari SF1000 Edition User Manual</p> <p>User manual for the Thrustmaster Formula Wheel Add-On Ferrari SF1000 Edition, detailing installation, firmware updates, and button mapping for PC, PlayStation, and Xbox platforms.</p>
<p>Europe, Middle East ENGLISH FRANÇAIS DEUTSCH NEDERLANDS ITALIANO ESPAÑOL PORTUGUÊS РУССКИЙ ČESKINA TÜRKÇE POLSKI SVENSKA SUOMI SLOVENČINA MAGYAR العربية</p> <p>North America/ Norteamérica ENGLISH FRANÇAIS ESPAÑOL Latin America/ América Latina ENGLISH ESPAÑOL PORTUGUÊS Asia Pacific 日本語 國體中文 繁體中文 한국어 ENGLISH</p> <p>THRUSTMASTER T248R</p>	<p>Thrustmaster T248R Racing Wheel User Manual</p> <p>User manual for the Thrustmaster T248R racing wheel, providing setup, usage, and troubleshooting instructions for PlayStation 5, PlayStation 4, and PC.</p>

 <p>Thrustmaster T300 Servo Base QUICK INSTALLATION GUIDE SERVO BASE INSTALLATION GUIDE</p>	<p>Thrustmaster T300 Servo Base: Quick Installation Guide</p> <p>Concise guide for installing the Thrustmaster T300 Servo Base racing wheel on PlayStation consoles and PC, including driver download links and important safety information.</p>
 <p>Thrustmaster FORMULA WHEEL ADD-ON FERRARI SF1000 EDITION</p>	<p>Thrustmaster Formula Wheel Add-On Ferrari SF1000 Edition User Manual and Guide</p> <p>Comprehensive user manual and installation guide for the Thrustmaster Formula Wheel Add-On Ferrari SF1000 Edition. Learn about setup, firmware updates, button mapping for PC, PlayStation, Xbox, and screen management.</p>
 <p>How to verify the T300 RS / T300 Ferrari GTE is correctly installed on any platform</p>	<p>Verifying Thrustmaster T300 RS and Ferrari GTE Installation on PC</p> <p>A guide to verifying the correct installation of Thrustmaster T300 RS and T300 Ferrari GTE racing wheels on a PC. This document covers checking Device Manager and Windows Game Controller settings, and accessing the product's control panel for configuration.</p>