

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FAAC](#) /

› [FAAC TM2 433DS Remote Control Garage Door Opener User Manual](#)

FAAC TM433DS

FAAC TM2 433DS Remote Control Garage Door Opener User Manual

Model: TM433DS

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your FAAC TM2 433DS Remote Control Garage Door Opener. Please read this manual thoroughly before using the device to ensure proper function and longevity.

SETUP AND PROGRAMMING


1. Battery Installation

The FAAC TM2 433DS remote control requires two Lithium batteries, which are typically included. To install or replace batteries:

1. Carefully open the remote control casing. This may involve removing a small screw or gently prying open the two halves.
2. Locate the battery compartment.
3. Insert the two Lithium batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the remote control casing securely.

2. Programming the Remote Control (DIP Switches)

The FAAC TM2 433DS remote control uses DIP switches for programming. To program your new remote, you will need to match the DIP switch settings of an existing, working remote or your garage door opener receiver.

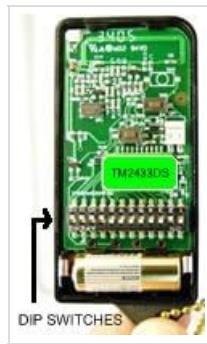

Internal view of FAAC TM2 433DS remote control. This image displays the internal components of the FAAC TM2 433DS remote control. Visible are the circuit board, the battery compartment, and a set of DIP switches, which are used for programming the remote to your garage door opener.

1. Open the casing of your new FAAC TM2 433DS remote control.
2. Locate the bank of small switches, known as DIP switches, on the circuit board.
3. If you have an existing, working remote: Open its casing and observe the position of its DIP switches (ON/OFF or 1/0).
4. If you are programming directly from the receiver: Refer to your garage door opener's manual to locate its DIP switches and note their positions.
5. Carefully adjust the DIP switches on your new FAAC TM2 433DS remote control to exactly match the settings of the existing remote or receiver. Use a small, non-conductive tool if necessary.
6. Once the DIP switches are set, close the remote control casing securely.
7. Test the remote control to ensure it operates your garage door opener correctly.

Note: If your garage door opener does not use DIP switches, or if you encounter difficulties, consult your garage door opener's specific programming instructions or contact a qualified technician.

OPERATING INSTRUCTIONS

The FAAC TM2 433DS remote control features two buttons for operation.

- **Opening/Closing the Garage Door:** Press one of the two buttons on the remote control. The garage door will begin to open or close. Pressing the button again during operation will typically stop the door. A third press will reverse its direction.
- **Range:** The maximum effective range for this remote control is approximately 10 meters. Ensure you are within this range for reliable operation. Obstructions can reduce the effective range.

Ensure there are no obstructions in the path of the garage door before and during operation to prevent damage or injury.

MAINTENANCE

Battery Replacement

If the remote control's range decreases significantly or it stops responding, the batteries may need replacement. Refer to the "Battery Installation" section under Setup for detailed instructions. Always use two new Lithium batteries of the specified type.

Cleaning

Clean the remote control's exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these can damage the casing or internal components. Avoid exposing the remote to excessive moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control does not work.	<ul style="list-style-type: none">Dead or low batteries.Incorrect DIP switch settings.Remote is out of range.Obstruction blocking signal.	<ul style="list-style-type: none">Replace batteries (refer to Setup).Verify DIP switch settings match the receiver or existing remote (refer to Setup).Move closer to the garage door opener.Ensure clear line of sight to the receiver.
Reduced operating range.	<ul style="list-style-type: none">Low batteries.Interference from other devices.Physical obstructions.	<ul style="list-style-type: none">Replace batteries.Identify and remove sources of interference.Ensure clear line of sight.
Garage door opens/closes intermittently.	<ul style="list-style-type: none">Loose battery connection.Weak signal.	<ul style="list-style-type: none">Check battery contacts and ensure batteries are seated firmly.Replace batteries.

If these troubleshooting steps do not resolve the issue, contact customer support or a qualified technician.

PRODUCT SPECIFICATIONS

Brand	FAAC
Model Name	TM433DS
Model Number	TM433DS-2
Product Dimensions	0.7 x 0.5 x 0.2 cm
Weight	40 grams
ASIN	B008DRDV1W
Supported Devices Quantity	2
Compatible Devices	Garage Door
Connectivity Technology	Radio Frequency
Button Quantity	2
Controller Type	Button Control
Maximum Range	10 meters
Batteries Required	2 Lithium (included)

WARRANTY INFORMATION

Specific warranty details for the FAAC TM2 433DS remote control may vary by region and retailer. Please retain your proof of purchase for any warranty claims. For detailed warranty terms and conditions, refer to the documentation provided with your purchase or visit the official FAAC website.

CUSTOMER SUPPORT

For technical assistance, troubleshooting beyond this manual, or inquiries regarding your FAAC TM2 433DS remote control, please contact FAAC customer support or your authorized dealer. Contact information can typically be found on the manufacturer's website or on your purchase documentation.

- **Online Resources:** Visit the official FAAC website for FAQs, additional manuals, and support contact details.
- **Authorized Dealers:** Your local FAAC dealer can provide expert advice and service.



© 2023 FAAC. All rights reserved. Information in this manual is subject to change without notice.