

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Pampered Chef](#) /

› Pampered Chef Ice Cream Scoop #2731 Instruction Manual

Pampered Chef 2731

Pampered Chef Ice Cream Scoop #2731 Instruction Manual

Model: 2731 | Brand: Pampered Chef

[Product Overview](#)

[Usage Instructions](#)

[Care & Maintenance](#)

[Specifications](#)

1. PRODUCT OVERVIEW

The Pampered Chef Ice Cream Scoop #2731 is designed for efficient and comfortable scooping of frozen desserts. Its robust construction and ergonomic design ensure ease of use and durability.

Key Features:

- **Secure Grip Handle:** The handle is designed to provide a comfortable and secure hold during use.
- **Pointed Scoop Head:** The pointed design of the scoop head allows for easy penetration and cutting through hard ice cream or sorbet.
- **Dishwasher-Safe:** For convenient cleaning, the scoop is designed to be dishwasher-safe.



Image 1: The Pampered Chef Ice Cream Scoop #2731, showcasing its overall design and ergonomic handle.

2. USAGE INSTRUCTIONS

2.1 Unpacking

Remove the ice cream scoop from its packaging. Inspect for any damage. Wash thoroughly before first use.

2.2 Scooping Ice Cream

1. Hold the scoop firmly by its ergonomic handle.
2. For very hard ice cream, briefly run the scoop under warm water to facilitate easier scooping. This helps the scoop glide through frozen desserts more smoothly.
3. Use the pointed head of the scoop to cut into the ice cream or sorbet.
4. Apply steady pressure and scoop in a circular motion to form a round portion.
5. Serve the scooped ice cream into a bowl or cone. The design of the scoop allows the ice cream to release easily.

3. CARE & MAINTENANCE

3.1 Cleaning

The Pampered Chef Ice Cream Scoop #2731 is dishwasher-safe for convenient cleaning. Alternatively, it can be hand-washed with warm, soapy water. Rinse thoroughly and dry immediately to prevent water spots.



Image 2: Close-up of the ergonomic handle with a secure grip.

3.2 Storage

Store the scoop in a dry place, such as a kitchen drawer or utensil holder, to maintain its condition and longevity.

4. TROUBLESHOOTING

Problem	Solution
Difficulty scooping very hard ice cream.	Run the scoop under warm water for a few seconds before scooping. This will slightly warm the metal, allowing it to cut through frozen desserts more easily.
Ice cream sticking to the scoop.	Ensure the scoop is clean and dry. A thin film of water from rinsing under warm water can also help prevent sticking.

5. SPECIFICATIONS

Model Number: #2731

Brand: Pampered Chef

Material: Plastic (handle), Silicone (grip), Metal (scoop head)

Dimensions: 7.5 inches (L) x 2 inches (W)

Item Weight: 0.22 Pounds

Dishwasher Safe: Yes

UPC: 099901027315, 798527410258

6. SUPPORT

For further assistance, product inquiries, or to learn more about Pampered Chef products, please visit the official Pampered Chef website or contact their customer service department.