

Bose 017817572408

Bose Solo TV Sound System

INSTRUCTION MANUAL

Introduction

The Bose Solo TV sound system is designed to enhance your television audio experience. It reveals greater depth and detail in your favorite programs, providing sound quality that internal TV speakers often cannot reproduce.

Key features include:

- Wide, even sound distribution throughout the room, achieved through Bose speaker array technology.
- Clear and natural reproduction of effects, music, and dialogue, thanks to proprietary digital signal processing.
- A single, compact speaker unit that fits neatly under your HDTV, eliminating the need for additional equipment.
- Extremely easy setup, requiring only one connection to your TV and one power plug.
- A simple four-button remote control for power, mute, and volume adjustments.

What's in the Box

Upon opening your Bose Solo TV Sound System package, you should find the following components:

- Bose Solo TV sound system unit
- Remote control
- Power cord
- Optical digital audio cable
- Analog cable



Figure 1: Bose Solo TV Sound System unit and its accompanying remote control.

Setup

Setting up your Bose Solo TV Sound System is designed to be straightforward. Follow these steps for optimal performance:

1. **Placement:** Position the Bose Solo TV sound system directly under your television. Ensure the TV's base fits securely on top of the sound system. The system is designed to support most TVs up to 32 inches and many 40-42 inch models, provided their bases are no wider than 20 inches and no deeper than 10.25 inches.
2. **Connect to TV:**
Connect the sound system to your television using either the optical digital audio cable or the analog cable provided. The optical digital audio cable is recommended for the best audio quality.
 - **Optical Connection:** Insert one end of the optical digital audio cable into the "Optical Out" port on your TV and the other end into the "Optical In" port on the Bose Solo system.
 - **Analog Connection:** If an optical port is not available or preferred, connect the analog cable from your TV's "Audio Out" (RCA L/R) ports to the corresponding "Audio In" ports on the Bose Solo system.



Figure 2: Rear view of the Bose Solo TV Sound System, illustrating the various input ports for audio connection.

3. **Power Connection:** Plug the power cord into the Bose Solo TV sound system and then into a wall outlet.
4. **TV Audio Settings:** Access your TV's audio settings menu and ensure that the audio output is set to the correct source (e.g., "External Speakers" or the specific digital/analog input you used). It is often recommended to turn off your TV's internal speakers to avoid echoing or distorted sound.



Figure 3: The Bose Solo TV Sound System positioned correctly beneath a television for integrated audio output.

Operating Instructions

The Bose Solo TV Sound System is designed for simple operation using its dedicated remote control.



Figure 4: The Bose Solo TV Sound System and its compact remote control.

- **Power On/Off:** Press the **Power** button on the remote control to turn the system on or off.
- **Volume Control:** Use the **Volume Up (+)** and **Volume Down (-)** buttons to adjust the sound level.
- **Mute:** Press the **Mute** button to temporarily silence the audio. Press it again to restore sound.
- **Automatic Shutoff:** The system may automatically turn off after a period of inactivity to conserve energy.

For a visual demonstration of the system's capabilities and ease of use, please refer to the official product video below:

Your browser does not support the video tag. Please update your browser or use a different device to view this content.

Video 1: Official overview of the Bose Solo TV Sound System, highlighting its features and simple integration with your television.

Maintenance

To ensure the longevity and optimal performance of your Bose Solo TV Sound System, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior surfaces of the sound system and remote control. Avoid using liquid cleaners, sprays, or solvents, as they may damage the finish or internal components.
- **Ventilation:** Ensure that the ventilation openings on the system are not blocked. Proper airflow is essential to prevent overheating.
- **Environment:** Keep the system away from excessive heat sources, direct sunlight, moisture, and dust.
- **Remote Battery:** If the remote control's performance degrades, replace the CR2 battery as needed. Refer to the remote's battery compartment for instructions on replacement.

Troubleshooting

If you encounter issues with your Bose Solo TV Sound System, try the following troubleshooting steps:

- **No Sound:**
 - Ensure the power cord is securely plugged into both the system and a working wall outlet.
 - Verify that the audio cable (optical or analog) is firmly connected to both the sound system and the TV.
 - Check your TV's audio output settings to ensure it is sending audio to the correct external output.
 - Confirm the Bose Solo system is powered on and not muted.
- **Distorted Sound:**
 - Lower the volume on both the TV and the Bose Solo system, then gradually increase the Solo system's volume.
 - Ensure your TV's internal speakers are turned off to prevent audio conflicts or echoing.
 - Check cable connections for any damage or loose fittings.
- **Remote Control Not Working:**
 - Replace the battery in the remote control.
 - Ensure there are no obstructions between the remote and the sound system.

If problems persist after attempting these steps, please contact Bose customer support for further assistance.

Specifications



Figure 5: Dimensional specifications of the Bose Solo TV Sound System and its remote control.

Feature	Detail
Brand	Bose
Model Name	Solo TV
Model Number	017817572408
Speaker Type	Single Speaker
Color	Black
Material	Metal
Product Dimensions (D x W x H)	12.25"D x 20.75"W x 3"H
Item Weight	16.1 Pounds
Recommended Uses	For Televisions
Compatible Devices	Television
Controller Type	Button, Remote Control
Surround Sound Channel Configuration	1.0
Power Source	Corded Electric
Speaker Maximum Output Power	50 Watts
Connectivity Technology	Bluetooth
Audio Output Mode	Stereo, potentially other enhanced modes
Number of Batteries	1 CR2 batteries required
Indoor/Outdoor Usage	Indoor
Manufacturer	BOSE

Warranty and Support

The Bose Solo TV Sound System comes with a**Limited Warranty**. For specific details regarding warranty coverage, duration, and terms, please refer to the documentation included with your product or visit the official Bose support website.

Important Information:

- **Safety Information:** Please handle the product with care. The package may show signs of wear.
- **Legal Disclaimer:** Returns are only accepted if the product is Dead On Arrival (DOA). Customers must report DOA products within 24 hours of receipt. Returns will not be accepted if the product has been dismantled or broken by the customer.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact Bose customer service through their official channels.



© 2024 Bose Corporation. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.