

[manuals.plus](#) /› [KRUPS](#) /› [KRUPS XP160050 Coffee Maker and Espresso Machine Instruction Manual](#)**KRUPS XP160050**

KRUPS XP160050 Coffee Maker and Espresso Machine Instruction Manual

Model: XP160050

INTRODUCTION

Thank you for choosing the KRUPS XP160050 Coffee Maker and Stainless Espresso Machine Combination. This versatile appliance is designed to provide both rich espresso shots and flavorful drip coffee, catering to all your coffee preferences. With its compact design and user-friendly features, it is an ideal addition to any kitchen.

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your new KRUPS coffee machine. Please read it thoroughly before first use and keep it for future reference.



Figure 1: Front view of the KRUPS XP160050 Coffee Maker and Espresso Machine.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.

- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when dispensing hot steam.

PRODUCT COMPONENTS

Familiarize yourself with the various parts of your KRUPS XP160050 machine:

- A. **Boiler Cap for Water Tank:** Used to seal the water tank for the espresso function.
- B. **Selector Knob:** Controls the function of the espresso side with three positions: Espresso, Steam, and Off.
- C. **Display:** Digital screen showing alarm clock, programmability functions, and on/off buttons for the coffee maker.
- D. **Steam Nozzle:** Used for frothing milk for cappuccinos and lattes.
- E. **Drip Tray:** Collects excess liquid from the espresso side.
- F. **Hinged Lid:** Covers the water reservoir for the coffee maker.
- G. **Filter Basket:** Holds the coffee filter and grounds for drip coffee.
- H. **Swing-Out Filter Holder:** Provides easy access to the filter basket.
- I. **Non-Stick Coated Warming Plate:** Keeps the coffee carafe warm after brewing.
- J. **Carafe Lid:** Covers the coffee carafe.
- K. **Coffee Carafe:** Glass carafe for collecting brewed drip coffee.
- L. **Espresso Portafilter:** Holds ground coffee for espresso extraction (not explicitly listed but implied).
- M. **Measuring Spoon:** Included for accurate coffee measurement.



Figure 2: The KRUPS XP160050 showing both coffee and espresso carafes.

SETUP AND FIRST USE

- 1. Unpacking:** Carefully remove all packaging materials and ensure all components are present.
- 2. Initial Cleaning:** Before first use, wash the coffee carafe, carafe lid, filter basket, espresso portafilter, and drip tray in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the machine with a damp cloth.
- 3. First Use Cycle (Coffee Maker):**
 - Fill the coffee maker water tank with fresh cold water up to the 10-cup mark.
 - Place an empty #4 paper filter in the filter basket and close the swing-out filter holder.
 - Place the coffee carafe on the warming plate.
 - Plug the machine into a power outlet.
 - Press the "Coffee" button to start a brewing cycle with only water. This cleans the internal components.
 - Once complete, discard the water from the carafe and the paper filter.
- 4. First Use Cycle (Espresso Machine):**

- Fill the espresso water tank (under the boiler cap) with fresh cold water.
- Place the empty espresso carafe on the drip tray.
- Ensure the selector knob is in the "Off" position.
- Press the "Espresso" power button. The indicator light will illuminate.
- Once the light indicates readiness (refer to specific light behavior in full manual), turn the selector knob to the "Espresso" position to run water through the system.
- Turn the knob back to "Off" when done. Discard the water.

OPERATING THE COFFEE MAKER

The KRUPS XP160050 allows you to brew up to 10 cups of delicious drip coffee.

1. **Fill Water Tank:** Open the hinged lid and fill the water tank with fresh, cold water to your desired number of cups (up to 10).
2. **Add Coffee Grounds:** Swing out the filter holder. Place a #4 paper filter into the filter basket. Add your desired amount of ground coffee (approximately 1 tablespoon per cup, adjust to taste). Swing the filter holder back into place.
3. **Place Carafe:** Ensure the coffee carafe with its lid is placed correctly on the non-stick coated warming plate.
4. **Brew Coffee:** Press the "Coffee" button on the display. The indicator light will illuminate, and brewing will begin.
5. **Pause & Serve:** The machine features a pause and serve function, allowing you to temporarily remove the carafe during brewing to pour a cup. Replace the carafe within 20 seconds to prevent overflow.
6. **Keep Warm:** After brewing, the warming plate will keep the coffee hot for up to 2 hours before automatically shutting off.
7. **Programmability:** Use the "Prog" and "Min" buttons on the display to set the current time and program a delayed start time for automatic brewing. Refer to the full manual for detailed programming instructions.

OPERATING THE ESPRESSO MACHINE

Enjoy rich espresso and creamy cappuccinos with the espresso function.



Figure 3: Close-up view of the espresso side of the KRUPS XP160050.

1. **Fill Water Tank:** Unscrew the boiler cap for the water tank and fill with fresh, cold water. Replace the cap securely.
2. **Prepare Portafilter:** Add finely ground espresso coffee to the espresso portafilter. Tamp the grounds evenly.
3. **Attach Portafilter:** Securely attach the portafilter to the brewing head by aligning it and twisting to lock.
4. **Place Carafe:** Place the espresso carafe on the drip tray beneath the portafilter.
5. **Power On:** Ensure the selector knob is in the "Off" position. Press the "Espresso" power button. The indicator light will turn on. Wait for the machine to heat up (the light will change or stabilize, consult the full manual for exact indication).
6. **Brew Espresso:** Once heated, turn the selector knob to the "Espresso" position. Espresso will begin to flow into the carafe. Turn the knob back to "Off" when you have reached your desired volume (e.g., 1-4 cups).
7. **Frothing Milk (Steam Function):**
 - After brewing espresso, or if starting fresh, ensure the water tank is filled.

- Turn the selector knob to the "Steam" position. Wait for the machine to heat up and produce continuous steam from the nozzle.
- Immerse the steam nozzle into a pitcher of cold milk. Turn the selector knob to the "Steam" position to release steam and froth the milk.
- Once desired froth is achieved, turn the knob back to "Off". Wipe the steam nozzle immediately with a damp cloth to prevent milk residue buildup.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your KRUPS XP160050.

- **Daily Cleaning:**

- After each use, unplug the machine and allow it to cool.
- Empty and wash the coffee carafe, espresso carafe, filter basket, espresso portafilter, and drip tray with warm, soapy water. Rinse and dry thoroughly.
- Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.

- **Cleaning the Steam Nozzle:** Immediately after frothing milk, wipe the steam nozzle with a damp cloth. If the nozzle becomes clogged, use a small pin or needle to clear the opening.

- **Descaling:** Mineral deposits from water can build up over time, affecting performance. Descaling your machine regularly (e.g., every 2-3 months, or more often in hard water areas).

- Use a commercial descaling solution designed for coffee machines, or a mixture of white vinegar and water (1:2 ratio).
- Follow the descaling solution's instructions. Typically, you will run the solution through both the coffee and espresso sides, followed by several cycles of clear water to rinse.

TROUBLESHOOTING

If you encounter issues with your KRUPS XP160050, refer to the common problems and solutions below:

Problem	Possible Cause	Solution
Coffee not brewing / Espresso not flowing.	No water in tank, machine not powered on, clogged filter/portafilter, machine needs descaling.	Ensure water tanks are filled. Check power connection. Clean filter basket/portafilter. Perform descaling.
Weak coffee.	Insufficient coffee grounds, coffee too coarsely ground, machine needs descaling.	Increase coffee amount. Use finer grind. Descale the machine.
No steam from nozzle.	Water tank empty, nozzle clogged, machine not heated sufficiently for steam.	Fill water tank. Clean steam nozzle. Allow machine more time to heat up in "Steam" mode.
Machine leaks.	Overfilled water tank, improperly seated carafe/portafilter, damaged seal.	Do not overfill. Ensure carafe/portafilter are correctly placed. If leaking persists, contact customer support.

For more complex issues or if troubleshooting steps do not resolve the problem, please contact KRUPS customer support.

SPECIFICATIONS

- **Brand:** KRUPS
- **Model Name:** XP160050 (also referred to as XP1600)
- **Item Model Number:** 8000034768
- **Color:** Black
- **Coffee Maker Type:** Combination Drip Coffee Maker and Espresso Machine
- **Coffee Capacity:** 10-cup (drip coffee)
- **Espresso Capacity:** 4-cup (espresso)
- **Voltage:** 120 Volts
- **Wattage:** 1600 watts
- **Product Dimensions:** 16.5 x 10.98 x 15.94 inches (L x W x H)
- **Item Weight:** 8.38 pounds
- **Special Feature:** Programmable, Steam Nozzle
- **Filter Type:** Reusable (for espresso), #4 paper filter (for drip coffee)
- **Operation Mode:** Fully Automatic
- **UPC:** 010942214298

WARRANTY AND SUPPORT

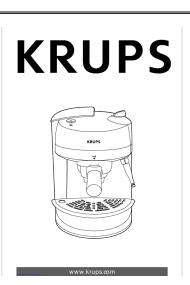
The KRUPS XP160050 Coffee Maker and Espresso Machine comes with a **2-year worldwide warranty**. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical assistance, or any questions not covered in this manual, please contact KRUPS customer support. Keep your proof of purchase for warranty validation.

You can find contact information for KRUPS customer support on their official website or through the retailer where you purchased the product.

© 2024 KRUPS. All rights reserved.

Related Documents - XP160050

	<p>Krups EA9000 Espresso Automatic User Manual Comprehensive user manual for the Krups EA9000 Espresso Automatic coffee machine, covering setup, operation, maintenance, and troubleshooting.</p>
	<p>KRUPS F920 Espresso Machine User Manual: Operation, Maintenance, and Troubleshooting Comprehensive user manual for the KRUPS F920 espresso machine, covering setup, operation, safety precautions, maintenance, cleaning, descaling, and troubleshooting. Learn how to make perfect espresso, froth milk, and care for your appliance.</p>

 KRUPS	<p>KRUPS Espresso Machine EA69-EA91: User Manual & Safety Guide</p> <p>Official user manual and safety guide for KRUPS Espresso Machines series EA69 to EA91. This document provides comprehensive instructions on operation, safety precautions, maintenance, troubleshooting, and warranty information for your KRUPS coffee maker.</p>
	<p>KRUPS EA817 Espresso Automatic Coffee Machine User Manual</p> <p>User manual for the KRUPS EA817 Espresso Automatic Coffee Machine, covering beverage preparation, safety, maintenance, and troubleshooting for making various coffee drinks.</p>
	<p>Krups Sensation Milk EA91 Range Quick Start Guide</p> <p>Concise guide to setting up, using, and maintaining your Krups Sensation Milk EA91 Range automatic coffee machine. Learn how to make coffee and milk-based drinks, clean, and descale the appliance.</p>
	<p>KRUPS Sensation Espresso Machine User Manual</p> <p>Comprehensive user manual for the KRUPS Sensation automatic espresso machine, covering important information, setup, beverage preparation, maintenance, other functions, and troubleshooting. Learn how to use your KRUPS coffee maker for optimal results.</p>