

SINGER 1409

Singer 1409 Electric Sewing Machine User Manual

Model: 1409 | Brand: SINGER

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your Singer 1409 Electric Sewing Machine. Designed for ease of use, this machine offers 9 built-in stitches and 22 stitch functions, powered by a 70-watt motor, and features a 6-row feed dog system for precise fabric handling. Please read this manual thoroughly before using the machine to ensure optimal performance and longevity.

1. SETUP AND ASSEMBLY

Before operating your sewing machine, ensure it is properly set up and all components are accounted for.

1.1 Unpacking and Components

Carefully remove the sewing machine and all accessories from the packaging. Retain the original packaging for future storage or transport. The box should contain the following items:

- 1 Sewing Machine with Accessories
- 1 Machine Cover
- 1 Foot Controller
- 1 Instruction Manual (this document)

1.2 Power Connection

Place the machine on a stable, flat surface. Connect the foot controller to the machine and then plug the power cord into a suitable electrical outlet. Ensure the power switch is in the OFF position before connecting.

1.3 Initial Setup: Bobbin Winding and Threading

Proper bobbin winding and machine threading are crucial for smooth operation and quality stitches.



Figure 1.1: Front view of the Singer 1409 Electric Sewing Machine, showing the main controls and sewing area.



Automatic Bobbin Winding



Easily & Smoothly
Add Thread to The Bobbin



ON PRODUCT

Figure 1.2: Illustration of the automatic bobbin winding feature. The needle bar automatically disconnects during bobbin winding for safety and convenience.

For detailed steps on bobbin winding and upper thread threading, refer to the diagrams in the included instruction manual (physical copy) or the online resources provided by Singer. The automatic bobbin winding feature simplifies the process, ensuring thread is added smoothly to the bobbin.

2. OPERATING INSTRUCTIONS

This section details the functions and controls of your Singer 1409 sewing machine.

2.1 Stitch Selection

The Singer 1409 offers 9 built-in stitches and 22 stitch functions, providing versatility for various sewing projects. Use the stitch selector dial to choose your desired stitch pattern. The dial allows for easy switching between essential and decorative stitches.



Quick & Easy Threading



Be Ready to Sew in No Time

1 Automatic 4-Step Buttonhole



No Guesswork, Just Professional Results



ON PRODUCT

Figure 2.1: Close-up of the stitch selection dials, showing options for essential and decorative stitches, and the simple stitch selection mechanism.

2.2 Automatic Reverse Option

The machine features an automatic reverse function. This allows you to sew in reverse automatically, which is essential for reinforcing stitches at the beginning and end of seams, ensuring durability.

2.3 4-Step Buttonhole

Create professional-looking buttonholes with the integrated 4-step buttonhole feature. Follow the specific instructions in your detailed manual for precise buttonhole creation.



9 Built-In Stitches



Essential & Decorative

Simple Stitch Selection



Change Stitches in One Easy Step



ON PRODUCT

Figure 2.2: Visual representation of quick and easy threading, and the 4-step buttonhole process, designed for professional results.

2.4 Free Arm with Accessories Storage

The retractable free arm simplifies sewing sleeves, cuffs, and collars. It also provides convenient access to a built-in storage compartment for your sewing accessories.

3. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your sewing machine.

3.1 Cleaning

Lint and Dust Removal: Regularly remove lint and dust from the bobbin case area, feed dogs, and tension discs using a small brush or lint remover. Accumulation of lint can affect stitch quality and machine performance.

Needle Plate: Remove the needle plate and clean underneath it to clear any fabric fibers or broken needle pieces.

3.2 Lubrication

Refer to your detailed instruction manual for specific lubrication points and recommended sewing machine oil. Over-lubrication can attract more dust, so follow guidelines carefully.

3.3 Needle Replacement

Replace needles frequently, especially when working on new projects or if you notice skipped stitches or fabric damage. A dull or bent needle can cause significant issues.

4. TROUBLESHOOTING

This section addresses common issues you might encounter and provides basic solutions. For more complex problems, contact customer support.

Problem	Possible Cause	Solution
Skipped Stitches	Incorrect needle, bent needle, improper threading, wrong needle size for fabric.	Replace needle, re-thread machine, ensure correct needle type/size for fabric.
Thread Breaking	Improper threading, tension too tight, poor quality thread, bent needle, burr on needle plate.	Re-thread machine, adjust tension, use good quality thread, replace needle, check for burrs.
Fabric Jamming/Puckering	Incorrect tension, dull needle, improper presser foot, lint under needle plate.	Adjust tension, replace needle, use correct presser foot, clean feed dogs and needle plate area.
Machine Not Starting	Power cord not connected, foot controller not connected, power switch off.	Check all connections, ensure power switch is ON.

5. SPECIFICATIONS

Key technical specifications for the Singer 1409 Electric Sewing Machine.

Feature	Detail
Model Number	1409
Built-in Stitches	9
Stitch Functions	22
Motor Power	70 Watts
Feed Dog System	106 teeth in 6 rows
Buttonhole Type	4-step
Dimensions (LxWxH)	41D x 21W x 34H Centimeters
Item Weight	5 kg 850 g
Country of Origin	Vietnam

HEAVY DUTY & DURABLE METAL FRAME

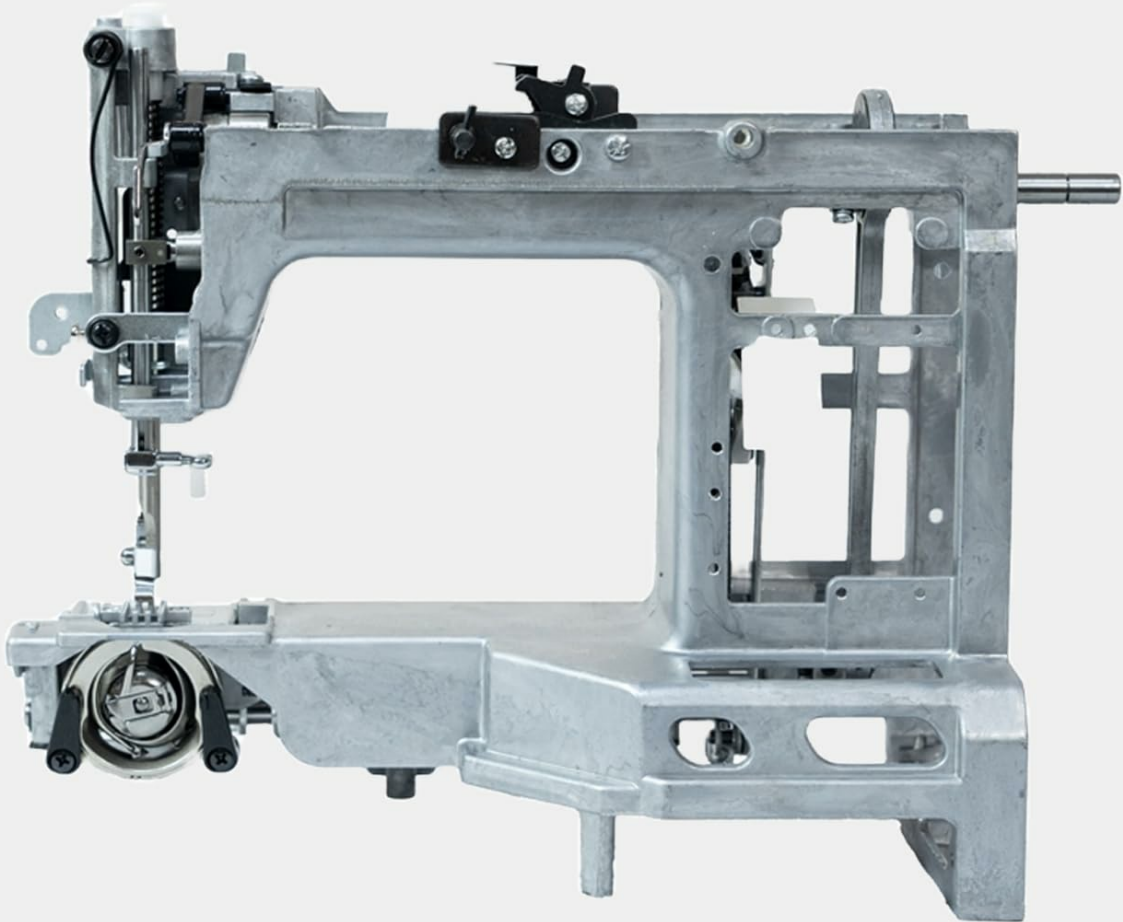 


Figure 5.1: Internal view of the Singer 1409, highlighting its heavy-duty and durable metal frame construction.

6. WARRANTY AND SUPPORT

Information regarding product warranty and customer support services.

6.1 Product Warranty

The Singer 1409 Electric Sewing Machine typically comes with a standard manufacturer's warranty. For specific details regarding the warranty period and terms, please refer to the warranty card included with your product or contact Singer customer support. Extended warranty options may also be available for purchase.

- 1 Year Extended Warranty (optional purchase)
- 2 Year Extended Warranty (optional purchase)
- 1 Year Fire Protection Plan (optional purchase)

6.2 Customer Support and Online Resources

For any queries, technical assistance, or service requests, please contact Singer customer support. You can also access online resources and interactive master classes to enhance your sewing skills.

Customer Care Number: 1800 103 3474 | 8860118855

Email: customersupport@singerindia.com

Website: www.singerindia.com



GET FREE 1 MONTH ONLINE SEWING SESSION

ON PURCHASE OF ANY SINGER SEWING MACHINE



1800-102-5461

MONDAY TO FRIDAY 9:30 AM TO 6:00 PM

CALL AND REGISTER*

***FOR REGISTRATION PURPOSE,
AN AMAZON INVOICE WOULD BE REQUIRED**

Figure 6.1: Information on Singer Live Assist, providing contact details for free home and online demos, available Monday to Sunday, 10 AM to 7 PM, in multiple languages.




Figure 6.2: Details about the offer for a free 1-month online sewing session upon purchase of any Singer sewing machine. Registration requires an Amazon invoice.

Singer also provides access to an online interactive master class to further enhance your sewing skills and knowledge. Details for accessing this class are typically provided upon product registration or through customer support.




© 2025 SINGER. All rights reserved. This manual is for informational purposes only.

 Related Documents - 1409

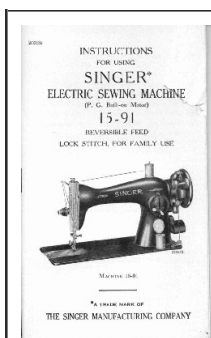


[Singer 15-91 Electric Sewing Machine: Instructions for Use and Maintenance](#)

 Comprehensive user manual and guide for the Singer 15-91 Electric Sewing Machine, covering operation, threading, maintenance, and troubleshooting.

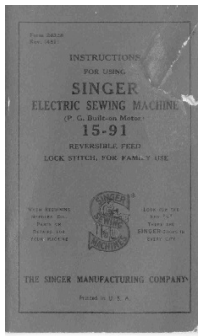


[Singer 15-91 Electric Sewing Machine: User Instructions and Guide](#)

 This comprehensive instruction manual for the Singer 15-91 Electric Sewing Machine provides detailed guidance on operation, maintenance, electrical information, and parts identification. Learn how to thread, set the needle, and use accessories for optimal results. Includes information on Singer service and supplies.

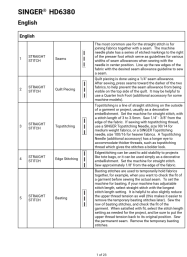

[SINGER HD6380 Sewing Machine Stitch Guide](#)

 A comprehensive guide to various sewing machine stitches and their applications for the SINGER HD6380 model, including straight, zigzag, multi-step zigzag, blind hem, picot hem, decorative, straight stretch, reinforced zigzag, honeycomb, overlock, slant overedge, and bartack buttonhole stitches. Learn about techniques like seaming, quilting, topstitching, darning, applique, gathering, pleating, zipper insertion, hemming, couching, and attaching trims.

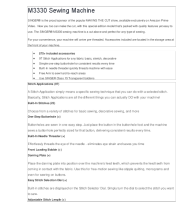

[SINGER M3330 Sewing Machine: Features and Specifications](#)

Explore the SINGER M3330 sewing machine, a special edition model featuring 97 stitch applications, 23 built-in stitches, a one-step buttonhole, and a heavy-duty metal frame. Ideal for all types of sewing.



[Singer 138w101 Sewing Machine: User and Adjuster Manual](#)

Comprehensive guide for the Singer 138w101 post bed, lock stitch, two-needle sewing machine, covering lubrication, threading, adjustments, and maintenance for optimal performance.



[SINGER S0100 / S0105 Overlock Sewing Machine Instruction Manual](#)

Comprehensive instruction manual for the SINGER S0100 and S0105 overlock sewing machines, covering essential safety precautions, setup, operation, threading, stitch settings, maintenance, and troubleshooting.