

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [VocoPro](#) /

› [VocoPro CHAMPIONREC3 Portable P.A./Karaoke System User Manual](#)

VocoPro CHAMPIONREC3

VocoPro CHAMPIONREC3 Portable P.A./Karaoke System User Manual

Model: CHAMPIONREC3

1. INTRODUCTION

Thank you for choosing the VocoPro CHAMPIONREC3 Portable P.A./Karaoke System. This system is designed to provide a versatile audio solution for various applications, including karaoke, public address, and digital recording. It features a 200W multi-format P.A. system and includes two VHF wireless microphones for enhanced mobility and performance. This manual provides essential information for the proper setup, operation, and maintenance of your CHAMPIONREC3 system.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- VocoPro CHAMPIONREC3 Portable P.A./Karaoke System Unit
- 2 x VHF Wireless Microphones
- Remote Control
- Power Cable
- User Manual (this document)

3. PRODUCT OVERVIEW

The VocoPro CHAMPIONREC3 integrates a mixer, amplifier, and speaker into a single portable unit, complete with wireless microphones for immediate use. Its robust design and comprehensive features make it suitable for various events.



An image showing the VocoPro CHAMPIONREC3 portable P.A. and karaoke system. The system consists of a top mixer unit with various controls and inputs, mounted on a larger speaker cabinet with wheels. To the right of the main unit are two black wireless microphones and a black remote control.

Key Features:

- 200W Multi-Format Portable P.A. System
- Integrated Digital Recorder
- Built-in VHF Wireless Microphone System
- Multiple Audio Inputs (e.g., CD, USB, SD, AUX)
- Equalizer Controls for Audio Adjustment
- Portable Design with Wheels

4. SETUP

Follow these steps to set up your CHAMPIONREC3 system:

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future transport or storage.
2. **Placement:** Place the CHAMPIONREC3 unit on a stable, level surface. The integrated wheels allow for easy positioning.
3. **Power Connection:** Connect the provided power cable to the AC IN port on the unit and then to a standard electrical outlet. Ensure the power switch is in the OFF position before connecting.
4. **Wireless Microphones:** Insert fresh batteries into the wireless microphones. The system is pre-configured for the included VHF microphones.
5. **Initial Power On:** Turn the power switch to the ON position. The display on the mixer unit should illuminate.
6. **Volume Adjustment:** Before playing any audio or using microphones, ensure all volume controls (Master Volume, Microphone Volumes, Music Volume) are set to their minimum levels to prevent sudden loud sounds.

5. OPERATING INSTRUCTIONS

5.1. Using the Wireless Microphones

- Turn on the wireless microphones using their respective power switches.
- Adjust the 'MIC VOL' knobs on the mixer unit to control the volume of each microphone.
- Speak into the microphone to test the sound. Adjust the 'ECHO' and 'TONE' controls as desired for vocal effects.

5.2. Playing Music (CD/USB/SD/AUX)

- **CD Playback:** Insert a CD into the CD tray. The system may automatically begin playing the disc. To select specific tracks before playback, you may need to pause the auto-play function if available, or use the remote control to navigate tracks once playback has started.
- **USB/SD Playback:** Insert a USB drive or SD card into the corresponding slot. Use the 'MODE' button to select USB or SD input. Navigate tracks using the control buttons on the unit or remote.
- **AUX Input:** Connect an external audio device (e.g., smartphone, tablet) to the 'AUX IN' jacks using an appropriate audio cable. Select 'AUX' mode if necessary.
- Adjust the 'MUSIC VOL' knob to control the background music volume.

5.3. Digital Recording

- Ensure a USB drive or SD card with sufficient free space is inserted into the unit.
- Press the 'RECORD' button to begin recording. The system will record the mixed audio from microphones and music inputs.
- Press the 'STOP' button to end the recording. Recordings are typically saved as MP3 files on the inserted storage device.

5.4. Equalizer Adjustment

- Use the graphic equalizer sliders on the mixer unit to fine-tune the audio output. Adjusting these sliders allows you to boost or cut specific frequency ranges (e.g., bass, midrange, treble) to suit your preference or acoustic environment.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your CHAMPIONREC3 system.

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use liquid cleaners or abrasive materials, as they may damage the finish or internal components.
- **Storage:** When not in use, store the system in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries from wireless microphones if they will not be used for an extended period to prevent leakage.
- **Ventilation:** Ensure that the ventilation openings on the unit are not blocked to prevent overheating.

7. TROUBLESHOOTING

If you encounter issues with your CHAMPIONREC3 system, refer to the table below for common problems and solutions.

| Problem | Possible Cause | Solution |
|---------------------------------------|--|---|
| No power | Power cable not connected; Power switch off; Outlet malfunction | Ensure power cable is securely connected; Turn power switch ON; Test outlet with another device. |
| No sound from microphones | Microphones off; Low microphone volume; Dead batteries | Turn microphones ON; Increase 'MIC VOL' knobs; Replace microphone batteries. |
| No music playback | Incorrect input source selected; Low music volume; Media not inserted correctly | Select correct input source (CD, USB, SD, AUX); Increase 'MUSIC VOL' knob; Reinsert media or check AUX cable connection. |
| CD auto-plays without track selection | System design for CD playback | This is a characteristic of the system. Use the remote control to navigate and select tracks once playback has initiated. |
| Poor sound quality | Incorrect equalizer settings; Source audio quality | Adjust equalizer sliders; Ensure source audio is of good quality. |

8. SPECIFICATIONS

Detailed technical specifications for the VocoPro CHAMPIONREC3 system:

- **Model:** CHAMPIONREC3
- **Output Wattage:** 200 Watts
- **Speaker Count:** 1 (integrated multi-speaker cabinet)
- **Power Source:** Battery Powered (internal rechargeable) / AC Power
- **Item Weight:** 43 pounds (19.5 kg)
- **Product Dimensions:** 23 x 21 x 21 inches (58.4 x 53.3 x 53.3 cm)
- **Microphone Type:** VHF Wireless
- **Recording Format:** Digital (typically MP3 to USB/SD)

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official VocoPro website. Keep your purchase receipt as proof of purchase for any warranty claims.